



**WORLD'S BEST  
ALLOY BULLBARS**

**Strongest Built  
Australian Made  
Lifetime Warranty**

**PN:NBIZ76SY  
NB6IZ76SY  
8IZ76SY**



# **Fitting Guide & Owners Manual ISUZU D-MAX**

**6-20 ON**

76mm Nudge Bar  
63mm Series 2  
Type 8

VEHICLE FRONTAL PROTECTION SYSTEM (VFPS)  
FOR AIR BAG & ADR COMPLIANT VEHICLES

# Index

---

## **Pages 3-5**

ECB's Benefits  
Product Care

## **Pages 6-7**

Stage 1 - Vehicle Testing and Preparation  
Stage 2 - Radiator Trim  
Stage 3 - Grille Removal  
Stages 4 to 6 - Bumper Removal

## **Pages 8-9**

Stage 7 - Bumper Removal (Cont'd)  
Stage 8 - Underbelly Guard Removal  
Stage 9 - Bumper Reinforcement Removal  
Stage 10 - Steel mount installation  
Stage 11 - Bumper Trim  
Stage 12 - Bumper Refit

## **Pages 10-11**

Stage 13 - Bumper Refit  
Stage 14 - Number Plate Cover  
Stage 15 - Protection Bar Installation  
Stage 16 - Underbelly Guard Refit  
Final Checks

## **Pages 12-13**

Installation Kit  
Finished Product  
Warranty Registration


## **Pages 14-15**

Notes

# The Features of ECB



Rust Free

Hi-Tensile Alloy

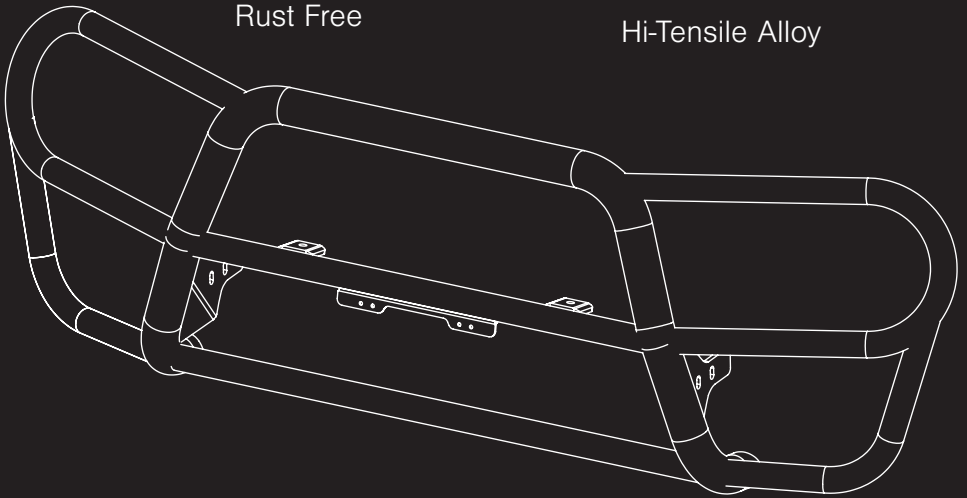

Unmatched  
Strength

Industry Leading  
Metal Thickness

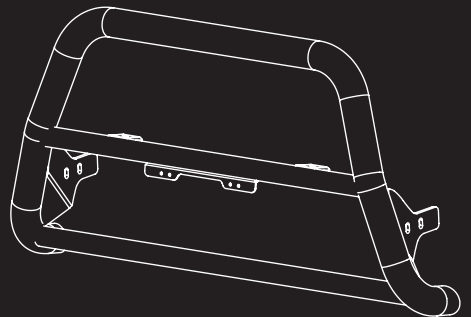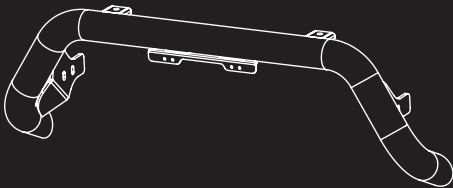

Fully Welded  
Construction

# ECB's Benefits

---

## **Built to Perform - Not to a Price**

ECB are proud to claim that their channels are not jigsaw puzzles that are bolted together, or even multiple sections welded together. Where any welding is required, it is done to the highest standards by qualified welders, not machines.

## **Anti-Corrosive Nature of Alloy**

The composition of ECB's alloy has a very high resistance to corrosion. Rust not only looks unappealing but greatly reduces the strength of the metal. Rust can and will weaken the structural integrity of a steel bullbar effectively rendering it useless over time.

## **Australian Made**

Established in 1971, we utilise decades of experience designing, engineering and building products in Australia to suit Australian conditions. We can ensure the best quality controls and help support the local economy and employ over 90 proud Australians.

## **Weight Saving Benefits**

An ECB alloy bullbar is typically half the weight of a steel bullbar. Unnecessary suspension upgrades are not required. The reduced weight also contributes to increased fuel economy and less wear and tear on tyres, suspension and braking components.

## **Welds That Work**

ECB uses only the strongest welds and welding techniques to ensure every product is as structurally sound as possible. MIG (Metal Inert Gas) welding techniques are employed ensuring the welds are as thick as the thickest section of alloy's being joined together.

## **Lifetime Warranty**

ECB provide a lifetime warranty and consumer guarantee on all of our manufactured products. This guarantee highlights the confidence in our ability and provides complete peace of mind for your purchase for the lifetime you own your vehicle.

# Product Care

---

## Polished Products

Being a premium mirror polished finish, regular maintenance will be required to keep that iconic ECB shine. We recommend using our own brand of Aluminium Polish. This formula has been tried and tested and in our opinion is the world's best standard.

**Directions:** Apply a small quantity of Aluminium Polish to a clean soft cloth and rub the metal surface. The longer the rubbing the brighter the surface becomes. Wipe off Aluminium Polish with clean soft cloth. Also suitable for motorised buffing machines.

**Note:** There are more specific details on the polish bottle. Please read before use.

## Powdercoated Products

Our powdercoated finishes are very low maintenance. Infact there is actually very little you will ever need to do for this product. Just clean it as you would your car and it will stay looking good as new.

## ECB Aluminium Polish

When you're looking for that showroom finish look for your polished automotive products, you can depend on the no compromise quality of East Coast Bullbars Aluminium Polish. This specifically designed product is the best polish available and we guarantee that this \$#!+ works. Within our decades of manufacturing polished alloy products we have trialed a large range of different polishes on the market and believe without a doubt that nothing beats the finish quality of East Coast Bullbars Aluminium Polish.

East Coast Bullbars Aluminium Polish is excellent for use by hand and is ideal for polished bullbars, nudge bar and stainless steel products. This polish will clean, polish and protect your product from the elements whilst bringing your products back to that showroom finish look.



# NBIZ76SY NB6IZ76SY 8IZ76SY

## Stage 1

- Test drive vehicle to ensure all driver assists are correctly working and to gauge effectiveness. Park on a flat level surface.
- Apply parking brake and lift bonnet.
- Unwrap ECB Protection bar and disconnect mounts. Discard bolts.
- Ensure these instructions are left with the vehicle owner and/or operator.



## Stage 2

- Remove ten (10) push/pull clips from top radiator trim.
- Remove radiator trim.



## Stage 3

- Remove three (3) push/pull clips from top of grille.
- Remove one (1) phillips head screw from center of grille.
- Lift up to unclip and remove top section of grille.



# Isuzu D-MAX 6-20 on

## Stage 4

- Remove four (4) push/pull clips from top of bumper grille between headlights.



## Stage 5

- From rear wing, remove one (1) push/pull clip (per/side).



## Stage 6


- Remove one (1) 10mm head nut and two (2) push/pull clips from under side of bumper (per/side).



# NBIZ76SY NB6IZ76SY 8IZ76SY

## Stage 7

- Unplug light wiring from passenger side
- Pull bumper out on rear wing to unclip from guard retainer.
- Pull bumper forward to unclip from light.
- Remove bumper from vehicle.

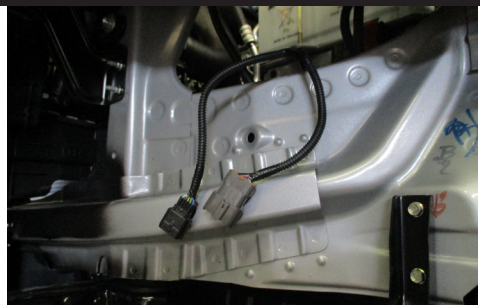


## Stage 8

- From under front of vehicle, remove two (2) 14mm head bolts from rear of steel underbody guard and loosen three (3) 14mm head bolts from front of guard.
- Pull guard forward to remove.



## Stage 9

- Remove two (2) 14mm head bolts from end of chassis rail (per/side).
- Remove lower reinforcement.

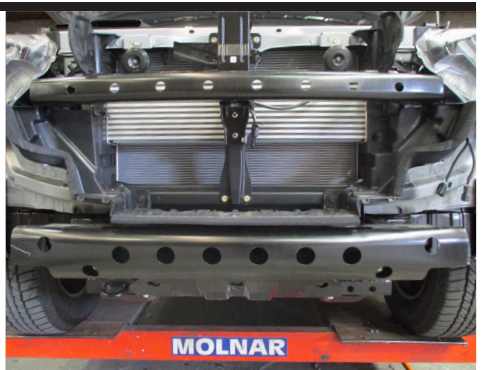




# Isuzu D-MAX 6-20 on

## Stage 10

- Flatten down tab on rear of reinforcement (per/side).

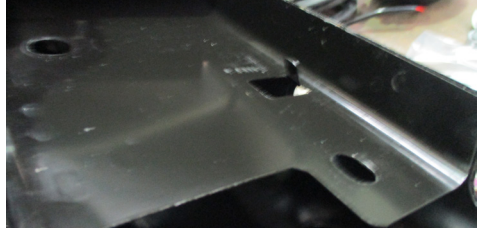

## Stage 11



- Refit reinforcement to chassis rail with ECB steel mount between reinforcement and rail using original equipment bolts in front holes.
- Install one (1) M10 x 1.5 x 120mm bolt, flat washers, washer plate and nyloc nuts in rear holes (per/side).
- Align mounts and tighten all bolts.

CAUTION: tighten rear bolt firmly only to stop it moving. Overtightening will crush the chassis rail.



## Stage 12

- Find bumper template with this instruction. Using a sharp pair of scissors, cut template from sheet.
- With paper masking tape, cover the area of the bumper to be cut.
- Place ECB bumper cut template onto bumper. Inside cut line is 280mm from number plate holder edge, inside to inside measurement needs to be 860mm. (Check measure before cutting).
- Mark and cut bumper for steel mount to protrude through.

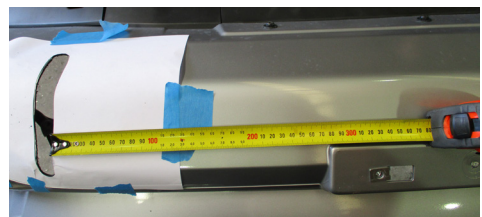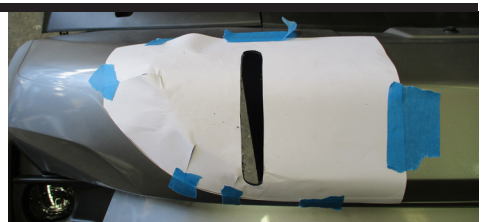

# NBIZ76SY NB6IZ76SY 8IZ76SY

## Stage 13

- Refit bumper in the reverse step of 3 - 7.



## Stage 14

- Fit ECB number plate cover plate to bumper using original screws.



## Stage 15

- Fit ECB protection bar to steel mount using four (4) M10 x 1.5 x 40mm bolts, flat washers, spring washers and nuts.
- Align protection bar and tighten all bolts.
- Refit number plate to protection bar plate.



# Isuzu D-MAX 6-20 on

## Stage 16

- Refit under body guard using original equipment bolts in the reverse step of 8.



## Final Checks

### Ensure Number Plate is Clearly Visible

Note: When fitting/refitting the licence plate to the vehicle, ensure there is no obstruction to licence plate vision in accordance with local authorities. If required relocate licence plate to an alternate location.

### Further VFPS Notes

1. Do not attach VFPS to the vehicle using anchorages not intended for this purpose (e.g. engine mounting bolts).
2. Do not use this product for any vehicle make or model, other than those specified by the VFPS manufacturer.
3. Do not remove the plaque or label from the VFPS.
4. Do not modify the structure of the VFPS in any way.
5. No accessory or fitment should project forward of the VFPS forward profile.
6. **Ensure these instructions are left with the vehicle owner and/or operator.**

### Important Information

Periodically check bolts and nuts for correct tightness, especially if traveling on rough roads.

# Installation Kit

---

## Installation Kit

1 - Pair steel mounting brackets	12 - M10 flat washers
1 - number plate cover	4 - M10 spring washers
2 - 40 x 40 x 6 Square steel washer plate	2 - M10 x 1.5 nyloc nuts
4 - M10 x 1.5 x 40mm bolts	4 - M10 x 1.5 nuts
2 - M10 x 1.5 x 120mm bolts	2 - 8 -18 x 25 self drilling screw

## Finished Product

---



# Finished Product

---



This Page has been intentionally left blank

# Warranty Registration

---

## Contact Details

Name: \_\_\_\_\_

Address: \_\_\_\_\_

\_\_\_\_\_

Product: \_\_\_\_\_

Email: \_\_\_\_\_

Phone: \_\_\_\_\_

Work Order Number: \_\_\_\_\_

You can find this on the silver label  
of your ECB product.

By submitting this registration you automatically subscribe to ECB's mail outs.  
You can unsubscribe at any time.

## Register Online

For online registration please go online to [www.ecb.com.au/warranty-registration](http://www.ecb.com.au/warranty-registration)  
If you have any questions please contact our national office on 1800 069 145 or  
[www.ecb.com.au](http://www.ecb.com.au).



**PN: NBIZ76SY**


**NB6IZ76SY**

**8IZ76SY**

**Please post to: PO Box 122,  
Margate QLD 4019**



# Notes




A series of 20 horizontal lines for writing notes, spaced evenly down the page.

\_\_\_\_\_ Full Name

\_\_\_\_\_ Date

REPLACES: 13.11.20

REVISED: 05.02.21

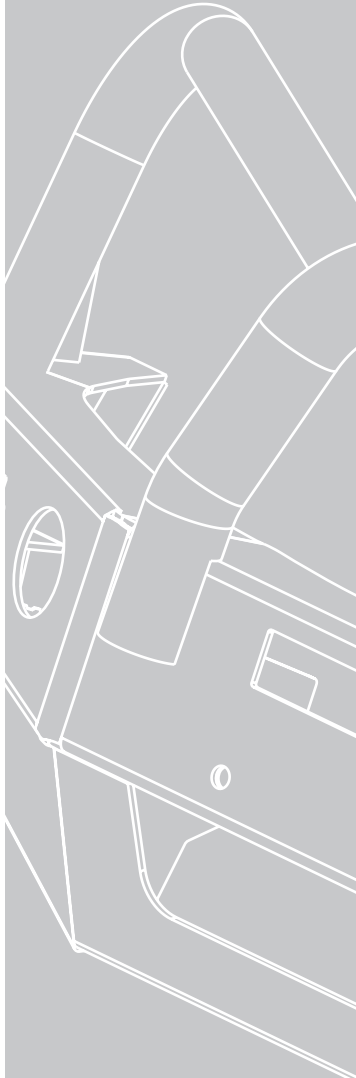

1800 069 145  
[www.ecb.com.au](http://www.ecb.com.au)

# **Strongest Built Australian Made Lifetime Warranty**

29 Snook St, Clontarf QLD 4019  
PO Box 122, Margate QLD 4019