

B3FU0007SY

FITTING INSTRUCTIONS

FUSO CANTER FE8/FG 4X4 WIDE CAB DELUXE 3 BULLBAR


Step 1.

- Park Vehicle on level ground and apply park brake.
- Remove bumper from truck, four (4) 10mm bolts at front face of bumper.



Step 2.


- Remove tow lugs, two (2) 14mm bolts each side.
- Remove one (1) 10mm bolt above tow lug each side.

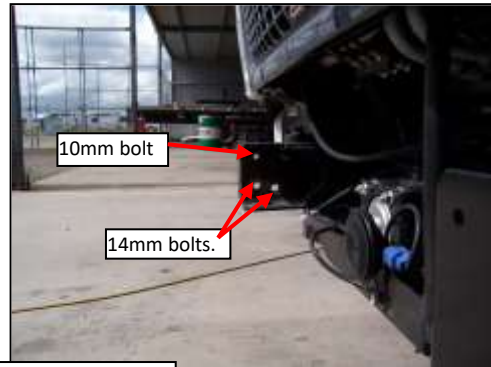

Drivers side pictured

Step 3.


- Remove mount from bullbar and fit to chassis rail.
- Four (4) M10 x 1.25 x 30mm bolts and washers into holes where bumper was removed.
- Leave loose - Finger tighten only.

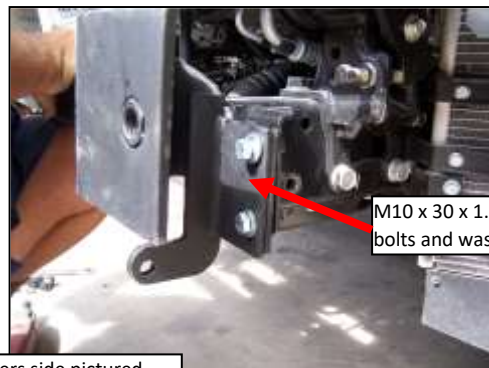

Drivers side pictured

Step 4.

- Insert two (2) ½ x 1 ½ bolts, flat washers and nyloc nuts through steel mounting brackets and tow lug holes.
- Insert one (1) M10 x 1.5 x 40mm bolts, flat washers and 10mm whiz nuts to top hole.

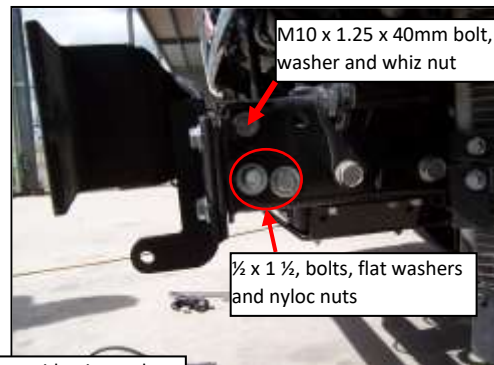

Drivers side pictured

Step 5.

- This step is optional.
- The white panel in front of the black step can be painted matt black to match in with the step
- This panel is visible after the bullbar is fitted)



Step 6.

- Remove indicator housing to connect wiring harness
- Remove two (2) Phillip head screws behind door.



Step 7.

- Feed harness upwards behind headlamp assembly and connect to indicator and parker harness just above the headlamp



Step 8.

- Refit indicator housing with harness hanging below headlamp.



Step 9.

- Sit bullbar on steel mounting brackets aligning hinge brackets.
- Lifting the bullbar slightly each side, insert eye bolt holes into holes and leave loose.
- Fit one (1) 9/16 x 2 bolt, flat washer and nyloc nut to hinge bracket hole (each side)
- Tighten until bolt passes through plastic nyloc nut.
- Tighten eye bolts slightly firm.

Step 10.

- Align bullbar with the vehicle.
- Tighten chassis bolts highest side, then raise other side to be level and tighten in position.



Step 11.

- Check bullbar is aligned square to vehicle and tighten front four (4) M10 x 30 x 1.25 bolts.
- Recheck chassis bolts.
- Tilt bullbar and connect indicator / parker harness to lights.
- Lift bullbar, refit eye bolts and tighten very firm.
- Check correct operation of lights.



Step 12.

- Place warning tilt cab sticker close to the tilting handle.





| Fitting Kit | | |
|----------------------------|---|---|
| 4 | - | M10 x 1.25 x 30mm Bolts |
| 2 | - | M10 x 1.5 x 40mm bolts with washers / nuts attached |
| 10 | - | M10 thick flat washers |
| 2 | - | M10 Whiz nuts |
| 4 | - | ½ x 2" Bolts |
| 4 | - | ½" Nyloc nuts |
| 8 | - | ½" Flat washers |
| 2 | - | Patch Harnesses (IHCUSTAL) |
| 6 | - | Scotch locks |
| 1 | - | Tilt Bullbar warning sticker |
| 1 | - | Fitting Instructions |
| Attached to Bullbar | | |
| 1 | - | Mount Bracket |
| 2 | - | 9/16 x 2 ½" Bolts. |
| 2 | - | 9/16" Nyloc nuts |
| 4 | - | 9/16" Flat washers |
| 2 | - | ¾" Eye bolts |
| 2 | - | ¾" Flat washers |



DESPATCH CHECKLIST

B3FU0007SY

FUSO FE8/FG 4X4 WIDE CAB

| | | |
|--------------|--|--------------------------------------|
| Work Order # | | Photo of steel mount on back of page |
| Finish: | | |
| Transport: | | |
| Due Date: | | |

- OC _____ 1 Steel Mounting Bracket
- OC _____ 2 3" Overrides (CA01 Plastic)
- OC _____ 2 Custom Alloy Badges – **Fitted to Overrides**
- OC _____ 2 LED Parker Lights (ICLED33INDPRK-95202CUST)
- WR _____ 1 Steel Mounting Bracket – **Fitted to Bar**
- WR _____ 2 3" Overrides (CA01 Plastic with CA badges) – **Fitted to Bar**
- WR _____ 2 Eyebolts (3/4" UNC ZP) and Washers – **Fitted to Bar**
- WR _____ 2 2 1/2" x 9/16" UNC Bolt Grade 8H/T – **Fitted to Bar**
- WR _____ 2 9/16" Nyloc Nut – **Fitted to Bar**
- WR _____ 4 9/16" Flat Washer – **Fitted to Bar**
- WR _____ 2 LED Parker Lights (ICLED33INDPRK-95202CUST) – **Fitted to Bar**
- WR _____ 1 Bolt Kit – **Taped to Mount**



Is this product "the best it can be" Yes _____ / _____

Wrapper's initials / Checker initials

If NO fix before continuing

All parts checked and completed by:

Nut and bolts: _____ Date __/__/__

Order control: _____ Date __/__/__

Final wrap check: _____ Date __/__/__



**WORLD'S BEST
ALLOY BULLBARS**

ecb.com.au

A: 29 Snook St Clontarf QLD 4019

P: PO Box 122 Margate QLD 4019

T: 07 3897 5700

E: info@ecb.com.au

ABN: 25 010 676 034

Part of GUD Holding Limited - ASX: GUD



customalloy.com.au

