



**WORLD'S BEST
ALLOY BULLBARS**

ecb.com.au

A: 29 Snook St Clontarf QLD 4019
P: PO Box 122 Margate QLD 4019
T: 07 3897 5700
E: info@ecb.com.au

ABN: 25 010 676 034
Part of GUD Holding Limited - ASX: GUD



customalloy.com.au


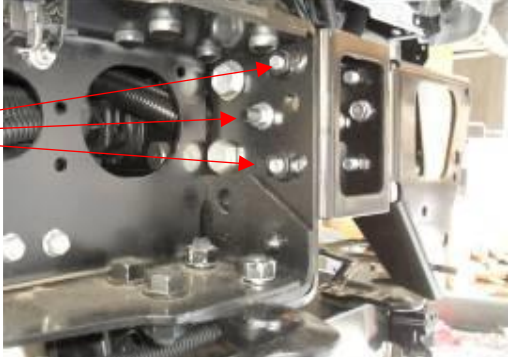


B3FU0035TSYF

FITTING INSTRUCTIONS

FUSO FK 2013-2019 DELUXE 3 TOWPIN BULLBAR

REPLACES: 30.08.21


REVISED: 10.02.22

<p>Step 1.</p> <ul style="list-style-type: none"> • Park Vehicle on level ground and apply park brake. • Remove bumper, discard bolts and bumper. Unclip the headlight surround panels. 	
<p>Step 2.</p> <ul style="list-style-type: none"> • Remove two M10 bolts and one nut retaining the bumper support bracket to the chassis rail. • Repeat for other side. • Discard all fasteners. 	
<p>Step 3.</p> <ul style="list-style-type: none"> • Remove the Tow hook from under the chassis rail on the passenger side. • Remove the two M14 bolts and nuts from under the chassis rail on the driver side. • Discard all fasteners. 	
<p>Step 4.</p> <ul style="list-style-type: none"> • Lift Bonnet and locate the wiring for the Indicators and Park lights. • Wire in the supplied patch harness each side using the supplied scotch locks. 	




Step 5.

- Remove the steel bullbar mount from the bullbar and fit to the vehicle chassis and fasten using the supplied,
- M10 x 35mm hex bolts, spring and flat washers into the upper chassis rail captive nuts.
- 1-3/4" x 1/2" hex bolts, flat washers and nyloc nuts.
- M10 x 35mm hex bolts, spring and flat washers into the lower chassis rail captive nuts.

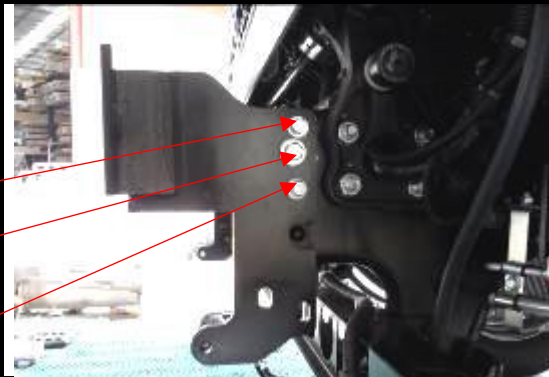

Step 6.

- Fit angle brackets under each side of the chassis rail using 2" x 1/2" hex bolts, flat washers and nyloc nuts.
- Fasten angle brackets to the steel bullbar mount using 1-3/4" x 1/2" hex bolts, flat washers and nyloc nuts.

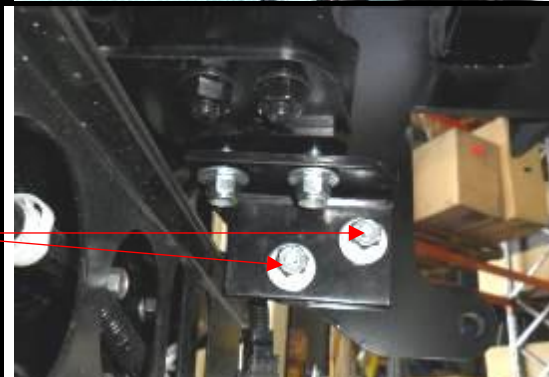


Step 7.

- Fit the bullbar to the mount and fasten using 3/4" eye bolts and flat washers, leave slightly loose at this stage.



Step 8.

- Align the pivot point holes in the bullbar and the chassis mount on each side and fasten
- using 2-1/2" x 9/16" hex bolts, flat washers and nyloc nuts.
- Tighten hinge bolts on the bullbar so that the alloy tabs just start to pull in,
- NOTE: Do not over tighten.

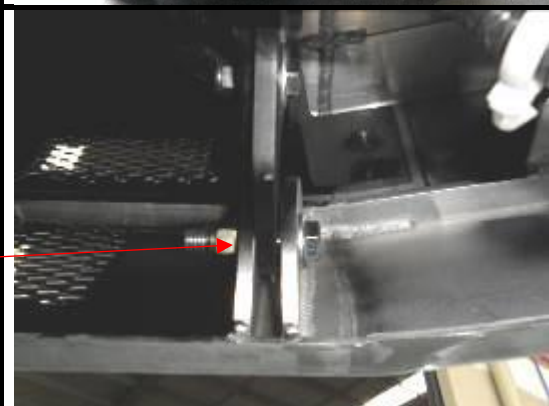



**WORLD'S BEST
ALLOY BULLBARS**

ecb.com.au

A: 29 Snook St Clontarf QLD 4019
P: PO Box 122 Margate QLD 4019
T: 07 3897 5700
E: info@ecb.com.au

ABN: 25 010 676 034
Part of GUD Holding Limited - ASX: GUD



Australia's Leading Manufacturer of Truck Bullbars

customalloy.com.au

Step 9.

- Align the bullbar with the vehicle and tighten all fasteners.
- Check the tilt operation of the bullbar. Tighten the eye bolts.
- Connect the patch harnesses to the bullbar Indicator/ Park light assemblies and check operation.
- Insert tow pin into tow into bullbar ensuring it drops through the steel mounting bracket.



Step 10.

- Fit the bullbar tilt warning sticker to the passenger side rear of the cab below the tilt cab operation placard, adjacent to the tilt lever.





**WORLD'S BEST
ALLOY BULLBARS**

ecb.com.au

A: 29 Snook St Clontarf QLD 4019
P: PO Box 122 Margate QLD 4019
T: 07 3897 5700
E: info@ecb.com.au

ABN: 25 010 676 034
Part of GUD Holding Limited - ASX: GUD



customalloy.com.au

**Fuso Fitting Kit list to Suit
P/N B3FU0035TSY
Fuso FK 2013+**

Quantity	Length	Diameter	Thread Pitch	Description
4	35mm	M10	1.25	Hex bolts
4		M10		Spring washers
4		M10		H/D flat washers
4	2 inch	1/2 inch		Hex bolts
6	1-3/4 inch	1/2 inch		Hex bolts
10		1/2 inch		Nyloc nuts
20		1/2 inch		H/D flat washers
1		225mm		Towpin
<u>Additions</u>				
1	Fitting Instructions			P/N FK133P
2	Tilt Bullbar Warning Stickers			P/N Loom Custom 2
2	Patch Harnesses			
4	Short Cable Ties			
2	Angle Brackets			
6	Scotch locks			
<i>SEAL IN CLEAR BAG, PLACE IN TOWPIN BOX TAPE TO STEEL MOUNT</i>				

<u>Attached to Bullbar</u>				
2		3/4 inch		Eye bolts
2		3/4 inch		Flat washers
2	2-1/2 inch	9/16 inch		Hex bolts
2		9/16 inch		Nyloc nuts
4		9/16 inch		Flat washers
2		Narva 95202		LED Indicator / Park lights



**WORLD'S BEST
ALLOY BULLBARS**

ecb.com.au

A: 29 Snook St Clontarf QLD 4019

P: PO Box 122 Margate QLD 4019

T: 07 3897 5700

E: info@ecb.com.au

ABN: 25 010 676 034

Part of GUD Holding Limited - ASX: GUD



Australia's Leading Manufacturer of Truck Bullbars

customalloy.com.au

DESPATCH CHECKLIST

B3FU0035TSYF

FUSO FK 2013-2019

Work Order #		Photo of steel mount on back of page
Finish:		
Transport:		
Due Date:		

- OC _____ 1 Steel Mounting Bracket
- OC _____ 2 3" Overriders (CA01 Plastic)
- OC _____ 2 Custom Alloy Badges – **Fitted to Overriders**
- OC _____ 2 LED Parker Lights (ICLEDD33INDPRK-95202CUST)
- BK _____ 2 Angle Brackets
- BK _____ 1 225mm tow pin – **In Box with bolt kit**
- WR _____ 1 Steel Mounting Bracket – **Fitted to Bar**
- WR _____ 2 3" Overriders (CA01 Plastic with CA badges) – **Fitted to Bar**
- WR _____ 2 Eyebolts (3/4" UNC ZP) and Washers – **Fitted to Bar**
- WR _____ 2 2 1/2" x 9/16" UNC Bolt Grade 8H/T – **Fitted to Bar**
- WR _____ 2 9/16" Nyloc Nut – **Fitted to Bar**
- WR _____ 4 9/16" Flat Washer – **Fitted to Bar**
- WR _____ 2 LED Parker Lights (ICLEDD33INDPRK-95202CUST) – **Fitted to Bar**
- WR _____ 1 Bolt Kit – **Taped to Mount**



Is this product "the best it can be" Yes _____ / _____

Wrapper's initials / Checker initials

If NO fix before continuing

All parts checked and completed by:

Nut and bolts: _____ Date ___/___/___

Order control: _____ Date ___/___/___

Final wrap check: _____ Date ___/___/___



**WORLD'S BEST
ALLOY BULLBARS**

ecb.com.au

A: 29 Snook St Clontarf QLD 4019

P: PO Box 122 Margate QLD 4019

T: 07 3897 5700

E: info@ecb.com.au

ABN: 25 010 676 034

Part of GUD Holding Limited - ASX: GUD



customalloy.com.au

