


B3IS5461TSY
Fitting Instructions
Isuzu NH NLR 08- Deluxe 3 Tow Pin Bullbar



REMOVE BUMPER UNDER TRAY BOLTS
(1 PER SIDE).

DISCARD BOLTS.

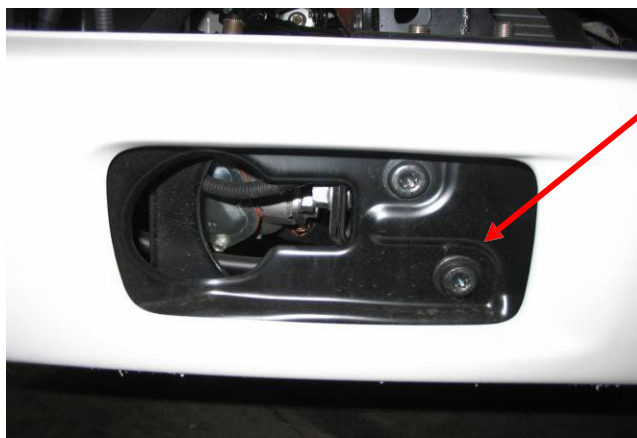


DRIVERS SIDE SHOWN

REMOVE PLASTIC COVER TO GAIN ACCESS
TO BUMPER BOLTS (2 PER SIDE).

DISCARD BOLTS.



REMOVE BUMPER.

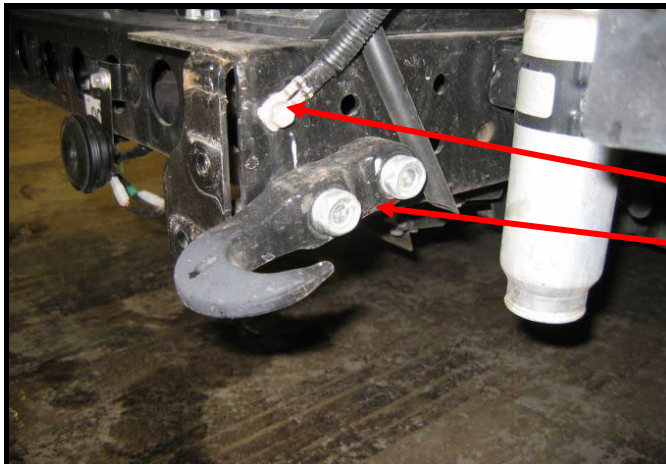


(PASSENGER SIDE SHOWN)

REMOVE EARTH STRAP (1PER SIDE).

REMOVE TOW HOOK AND DISCARD.



REMOVE BULLBAR MOUNT FROM BULL BAR.

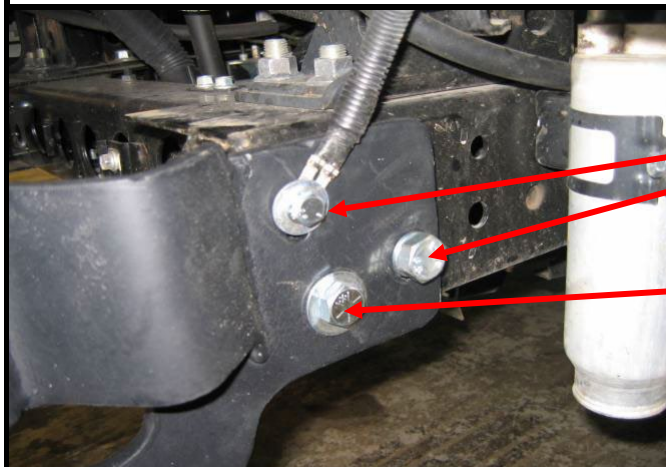

FIT BULLBAR MOUNT USING;

REFIT EARTH WIIRE AS SHOWN.

M8 X 40mm BOLT & THICK WASHER.

1 SUPPLIED METRIC BOLT, W ASHER
INTO WELD NUT

1/2"x 1 1/2" BOLT, WASHERS & NYLOC
NUT

LEAVE ALL FASTENERS LOOSE UNTIL
FINAL ALIGNMENT




M8 x 40mm BOLT & THICK WASHER.

1/2"x 1 1/2" BOLT, WASHERS & NYLOC NUT


DRIVERS SIDE SHOWN

LEAVE ALL FASTENERS LOOSE UNTIL FINAL
ALIGNMENT

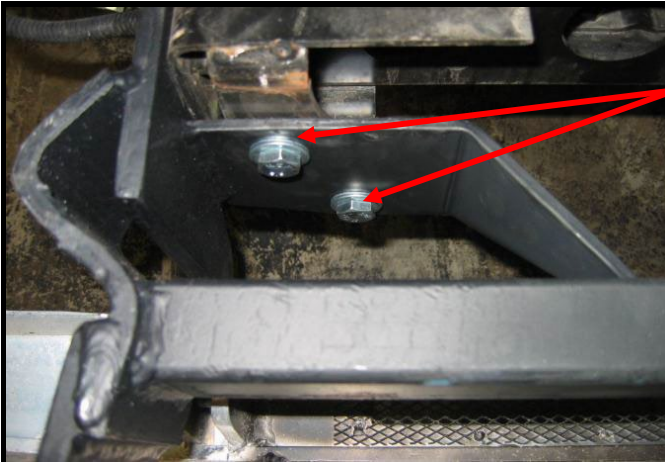

ATTACH BULL BAR MOUNT USING M10 x 1.25 x 30mm BOLTS AND WASHERS

DRIVERS SIDE SHOWN, PASSENGER SIDE SAME.

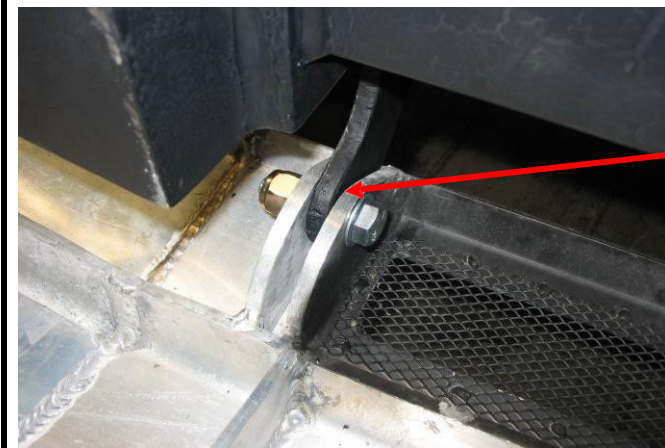

FIT BULLBAR TO MOUNT USING

9/16" x 2 1/2 BOLTS, 2 x WASHERS AND NYLOC NUTS.

ENGAGE THREAD INTO NYLOC AS TO STILL ALLOW BULLBAR TO PIVOT



9/16" x 2 1/2 BOLTS, 2 x WASHERS AND NYLOC NUTS.

ENGAGE THREAD INTO NYLOC AS TO STILL ALLOW BULLBAR TO PIVOT



RAISE AND SECURE BULL BAR, LOCK BULL BAR IN PLACE USING THE TWO EYE BOLTS SUPPLIED.

ALIGN BULL BAR TO VEHICLE, ENSURING BULL BAR GAPS ARE EQUAL.

TORQUE ALL FASTENERS.

LOCATION	SIZE	TORQUE
bull bar mount (RHS)	8mm	36Nm
bull bar mount (front)	10mm	44 Nm
bull bar mount (RHS)	1/2"	130 Nm
bull bar mount (LHS)	1/2"	130 Nm



AUXILIARY PARKING LAMP HARNESS.
PT No. LOOMCUSTOM2 (ICCUSTAL)



REMOVE HEADLAMPS TO ACCESS LAMPS.

REAR OF HEADLAMP SHOWN.

USING CABLE LOCKS CONNECT
AUXILIARY INDICATOR AND PARK LAMP
USING THE SUPPLIED LOOMCUSTOM2
(ICCUSTAL) LOOM.



FIT WARNING LABEL TO BACK OF CAB
NEAR CAB TILT LEVER



FIT WARNING LABEL TO DRIVERS DOOR
AS SHOWN

ISUZU FITTING KIT LIST TO SUIT NH NLR/NLS (TOW PIN) 2008> P/N B3IS5461TSY

Quantity	Length	Diameter	Thread Pitch	Description
2	40mm	8mm	1.25mm	Metric bolt grade 8 H/T
2		8mm		Spring Washers
2		8mm		Flat Washers
Fit One Spring and Flat Washer to Bolt				
4	30mm	10mm	1.25mm	Metric bolt grade 8 H/T
4		10mm		HD Flat Washer
2	1 ½ inch	½ inch	UNC	Bolt grade 8 H/T
2		½ inch	UNC	Nyloc Nut
4		½ inch		Flat Washers
1	50mm	14mm	1.5mm	Metric bolt grade 8 H/T
1		14mm		Spring Washers
1		14mm		Flat Washers
Fit One Spring and Flat Washer to Bolt				
Additions				
1	Fitting Instructions			P/N B3IS0461TSY
2	Tilt Bullbar Warning Stickers			
2	NLR Ind / Parker Lamp Patch Harnesses			LOOMCUSTOM2 (ICCUSTAL)
1	145mm locking tow pin			
6	CABLE LOCKS			
<i>SEAL IN CLEAR BAG & TAPE TO STEEL MOUNTING BRACKET</i>				

Attached to Bullbar				
2		¾ inch	UNC	Eye Bolt Grade 8 H/T
2		¾		Flat Washers
2	2 ½ inch	9/16 inch	UNC	Bolt Grade 8 H/T
2		9/16 inch	UNC	Nyloc Nut
4		9/16 inch		Flat Washer
Additions				
2	LED Ind / Parker Lights - Pt no.95202			
1	Steel Bull bar Mount			

DESPATCH CHECKLIST

B3IS5461TSY

NH NLR/NLS (TOW PIN) 2008 >

Work Order #	
Finish:	
Transport:	
Due Date:	

- OC.....1 – Steel Mounting Bracket – **Fitted to Bar**
- BK.....1 – Bolt Kit – **Boxed with Tow pin**
- OC.....2 – LED Ind / Park Lights (95202) – **Fitted to Bar**
- OC.....2 – Overrides (3 inch CA01) – **Fitted to Bar**
- OC.....2 – Custom Alloy Badges – **Fitted to Bar**
- WR..... 2 – Eye Bolts (3/4 UNC ZP/ 3/4 Flat Washers) – **Fitted to Bar**
- WR.....2 – 9/16 x 2 ½ HT Bolts – **Fitted to Bar**
- 2 – 9/16 Nyloc nuts – **Fitted to Bar**
- 4 – 9/16 Flat washers – **Fitted to Bar**
- BK.....1 – 145mm Locking Tow pin - **Boxed with kit**

See other side of this page for photos of all mounts



Is this product “the best it can be” Yes
 If NO fix before continuing

_____/_____
 Wrapper's initials / Checker initials

All parts checked and completed by:

Nut and bolts: _____ Date __/__/__

Order control: _____ Date __/__/__

Final wrap check: _____ Date __/__/__

