

Tel: 07 3897 5700 Fax: 07 3283 1168 ecb@ecb.com.au www.ecb.com.au 29 Snook St Clontarf QLD 4019 Australia Po Box 122 Margate QLD 4019 Australia

#### 8F57SY / NB6F45SY / NBF45SY

REPLACES: 27.08.07 REVISED: 03.07.10

#### FITTING INSTRUCTIONS

## 01/00-5/06 FORD ESCAPE/MAZDA TRIBUTE TYPE 8, 63mm SERIES 2 NUDGE BAR & 76mm NUDGE BAR VEHICLE FRONTAL PROTECTION SYSTEM (VFPS) FOR AIR BAG & ADR COMPLIANT VEHICLES

Check installation hardware before commencing.

- 1. Remove bumper cover with grille. One 10mm head bolt each side at top of grille (near headlight), two plastic clips (just below number plate), three 10mm head bolts along central bottom of bumper cover, two 8mm head bolts (each side) at bottom of inner guard, four plastic clips (each side) at wheel arch of inner guard and one 8mm head bolt (each side) on Tribute and plastic clip on Escape at top of side return. **See figure 1.**
- 2. Disconnect fog lights if applicable.
- 3. Remove tie down brackets from chassis. Remove two 14mm head bolts from upper front of chassis. See Figure 2.
- 4. Attach ECB steel mounting brackets (supplied) to where tie down brackets and two 14mm head bolts were removed. **See Figure 3**. Use M10 x 30 x 1.25mm bolts/washers (supplied).
- 5. Align ECB steel mounting brackets with each other and TIGHTEN ALL BOLTS.
- 6. Re-attach bumper cover.
- 7. Attach alloy protection bar to inside of steel mounting brackets. Use 3/8 x 1 ½ bolts and nuts (supplied) for rear holes. Feed 3/8 x 1 ½ bolts/washers on 200mm wire (supplied) up inside front tube to access front holes. Use 3/8 nuts/washers (supplied).
- 8. Align protection bar with vehicle and TIGHTEN ALL BOLTS.

**NOTE:** See figure 4 for Type 8 side view.

**NOTE**: Towing points are provided on steel mounts. These are designed to be used together via a link for straight line towing and light snatching using an elastic type snatch rope. Always take care when towing or snatching and observe safety requirements of equipment being used.

#### **ENSURE NUMBER PLATE IS CLEARLY VISABLE**

**Note:** When fitting/refitting the licence plate to the vehicle, ensure there is no obstruction to licence plate vision in accordance with local authorities. If required relocate licence plate to an alternate location.

Tel: 07 3897 5700 Fax: 07 3283 1168 ecb@ecb.com.au www.ecb.com.au 29 Snook St Clontarf QLD 4019 Australia Po Box 122 Margate QLD 4019 Australia

#### **Further VFPS Notes:**

- a) Do not attach VFPS to the vehicle using anchorages not intended for this purpose (e.g. engine mounting bolts).
- b) Do not use this product for any vehicle make or model, other than those specified by the VFPS manufacturer.
- c) Do not remove the plaque or label from the VFPS.
- d) Do not modify the structure of the VFPS in any way.
- e) No accessory or fitment should project forward of the VFPS forward profile.
- f) ENSURE THESE INSTRUCTIONS ARE LEFT WITH VEHICLE OWNER AND/OR OPERATOR.

#### IMPORTANT INFORMATION

Periodically check bolts and nuts for correct tightness, especially if travelling on rough roads

#### **FITTING KIT**

2 – ECB steel mounting brackets	14 – M10 x 30 x 1.25 bolts.
$2 - 3/8 \times 1\frac{1}{2}$ bolts.	20 – 10mm flat washers.
$2 - 3/8 \times 1\frac{1}{2}$ bolts/washers on 200mm wire.	18 – 10mm spring washers.
4 - 3/8 nuts.	



Figure 1



Figure 2

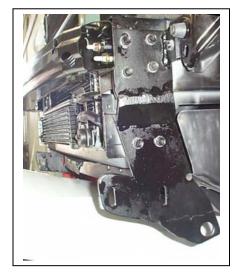


Figure 3



Figure 4



Tel: 07 3897 5700 Fax: 07 3283 1168 ecb@ecb.com.au www.ecb.com.au 29 Snook St Clontarf QLD 4019 Australia Po Box 122 Margate QLD 4019 Australia

# We value your comments

Dear Fitter,

ECB would like to know how you went with the installation of this product. We value your comment and may need to contact you to clarify some details so please complete your contact details clearly.

We would appreciate if you could complete as many of the following details as possible.

Your Name:	Your contact No.	
Product Part No.	Product Invoice No.	
Product Description:	Make, model, and year of vehicle:	
Product Work Order No.	Company your from/Company product purchased from:	
Was the fitting hardware supplied complete?	Yes No	
If no what was not supplied		
	Yes No	
Did the installation go well?		
Please provide comments		
<sup>9</sup>		
Please draw diagrams if you need to		

Post to Reply Paid 122 PO Box 122 Margate QLD 4019 **Fax to** (07) 3283 1168



Tel: 07 3897 5700 Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St Clontarf QLD 4019 Australia

Po Box 122 Margate QLD 4019 Australia



Tel: 07 3897 5700 Fax: 07 3283 1168 ecb@ecb.com.au www.ecb.com.au 29 Snook St Clontarf QLD 4019 Australia Po Box 122 Margate QLD 4019 Australia

# DESPATCH CHECKLIST 8F57SY / NB6F45SY / NBF45SY

Work Order # Finish: Transport: Due Date:	
<ul> <li>O 2– Steel mounting brackets.</li> <li>O 1 – Bolt Kit</li> </ul>	See other side of this page for photos of all mounts
Is this product "the best it If NO fix before continuing	can be'' Yes/_ Wrapper's initials / Checker initials
All parts <u>checked</u> and <u>completed</u> by:	
Nut and bolts:	Date//_
Order control:	Date//_
Final wrap check:	Date//_



Tel: 07 3897 5700 Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St Clontarf QLD 4019 Australia

Po Box 122 Margate QLD 4019 Australia

