



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

8F58SY / NB6F58SY / NBF58SY

REPLACES: 30.10.07
REVISED: 15.07.10

FITTING INSTRUCTIONS

FORD ZC ESCAPE & MAZDA TRIBUTE 06/06-03/08 TYPE 8, 63mm SERIES 2 NUDGE BAR & 76mm NUDGE BAR VEHICLE FRONTAL PROTECTION SYSTEM (VFPS) FOR AIR BAG & ADR COMPLIANT VEHICLES

Check installation hardware before commencing.

1. Remove bumper cover with grille. One 10mm head bolt each side at top of grille (near headlight), three 10mm head bolts along central bottom of bumper cover, two 8mm head bolts (each side) at bottom of inner guard, four plastic clips (each side) at wheel arch of inner guard, one plastic clip at top of side return, two 10mm head bolts outer of lower air vent section. **See figure 1.**
2. Disconnect fog lights if applicable.
3. Remove tie down brackets from chassis. Remove two 14mm head bolts from upper front of chassis. **See Figure 2.**
4. Attach ECB steel mounting brackets (supplied) to where tie down brackets and two 14mm head bolts were removed. **See Figure 3.** Use M10 x 30 x 1.25mm bolts/washers (supplied).
5. Align ECB steel mounting brackets with each other and **TIGHTEN ALL BOLTS.**
6. Re-attach bumper cover and reconnect wiring for fog lights if applicable.
7. Attach alloy protection bar to inside of steel mounting brackets. Use 3/8 x 1 1/2 bolts and nuts (supplied) for rear holes. Feed 3/8 x 1 1/2 bolts/washers on 200mm wire (supplied) up inside front tube to access front holes. Use 3/8 nuts/washers (supplied).
8. Align protection bar with vehicle **see figures 4, 6 and 8** for front views and **figures 5, 7 and 9** for side views **TIGHTEN ALL BOLTS.**

NOTE: Towing points are provided on steel mounts. These are designed to be used together via a link for straight line towing and light snatching using an elastic type snatch rope. Always take care when towing or snatching and observe safety requirements of equipment being used.

ENSURE NUMBER PLATE IS CLEARLY VISABLE

ENSURE THESE INSTRUCTIONS ARE LEFT WITH VEHICLE OWNER AND/OR OPERATOR

Note: When fitting/refitting the licence plate to the vehicle, ensure there is no obstruction to licence plate vision in accordance with local authorities. If required relocate licence plate to an alternate location.



East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

**WORLD'S BEST
ALLOY BULLBARS**

Further VFPS Notes:

- a) Do not attach VFPS to the vehicle using anchorages not intended for this purpose (e.g. engine mounting bolts).
- b) Do not use this product for any vehicle make or model, other than those specified by the VFPS manufacturer.
- c) Do not remove the plaque or label from the VFPS.
- d) Do not modify the structure of the VFPS in any way.
- e) No accessory or fitment should project forward of the VFPS forward profile.
- f) Ensure these instructions are left with vehicle owner and/or operator.

IMPORTANT INFORMATION

Periodically check bolts and nuts for correct tightness, especially if travelling on rough roads

FITTING KIT

2 – ECB steel mounting brackets.	14 – M10 x 30 x 1.25 bolts.
2 – 3/8 x 1½ bolts.	20 – 10mm flat washers.
2 – 3/8 x 1½ bolts/washers on 200mm wire.	18 – 10mm spring washers.
4 – 3/8 nuts.	



Figure 1



Figure 2

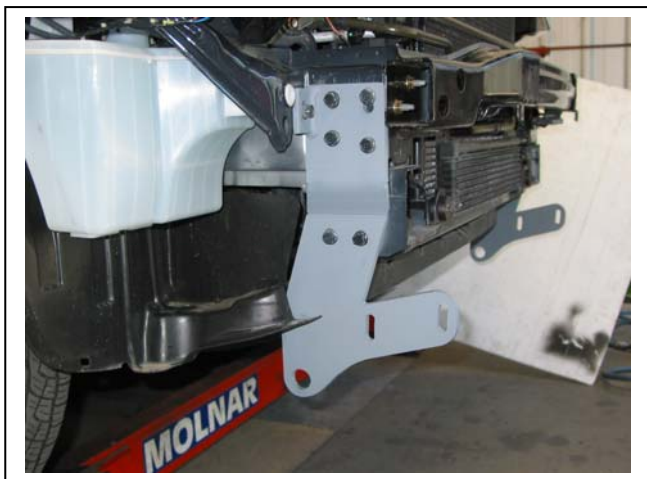


Figure 3



Figure 4 – Type 8 front view



East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

WORLD'S BEST
ALLOY BULLBARS

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia



Figure 5 – Type 8 side view shown



Figure 6 – 63mm Series 2 Nudge Bar front view shown



Figure 7 – 76mm Nudge Bar side view shown



Figure 8 – 76mm Nudge Bar front view shown



Figure 9 – 76mm Nudge Bar side view shown



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

We value your comments

Dear Fitter,

ECB would like to know how you went with the installation of this product. We value your comment and may need to contact you to clarify some details so please complete your contact details clearly.

We would appreciate if you could complete as many of the following details as possible.

Your Name:	Your contact No.
Product Part No.	Product Invoice No.
Product Description:	Make, model, and year of vehicle:
Product Work Order No.	Company your from/Company product purchased from:

Date of fitment: ___/___/___

Was the fitting hardware supplied complete?

Yes

No

If no what was not supplied

Did the installation go well?

Yes

No

Please provide comments

Please draw diagrams if you need to.

Post to
Reply Paid 122
PO Box 122
Margate QLD 4019

Fax to
(07) 3283 1168



WORLD'S BEST
ALLOY BULLBARS

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

DESPATCH CHECKLIST 8F58SY / NB6F58SY / NBF58SY

Work Order #	
Finish:	
Transport:	
Due Date:	

- 2 – Steel mounting brackets.
- 1 – Bolt Kit

**See other side of
this page for
photos of all
mounts**



Is this product “the best it can be” Yes _____ / _____
Wrapper’s initials / Checker initials
 If **NO** fix before continuing

All parts checked and completed by:

Nut and bolts: _____ Date __/__/__

Order control: _____ Date __/__/__

Final wrap check: _____ Date __/__/__



East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

**WORLD'S BEST
ALLOY BULLBARS**

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

