



**WORLD'S BEST  
ALLOY BULLBARS**

**East Coast Bullbars (ECB Pty Ltd)**

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St  
Clontarf QLD 4019  
Australia

Po Box 122  
Margate QLD 4019  
Australia

REPLACES: 06.03.13  
REVISED: 04.10.13

## **8S65SY / NB6S65SY / NBS65SY**

### **FITTING INSTRUCTIONS**

#### **SUBARU FORESTER 01/13on TYPE 8, 63mm SERIES 2 NUDGE BAR and 76MM NUDGE BAR VEHICLE FRONTAL PROTECTION SYSTEM (VFPS) FOR AIR BAG & ADR COMPLIANT VEHICLES**

Check installation hardware before commencing.

1. Lift bonnet.
2. Remove bumper. Six plastic push pull clips from top of grille, two plastic push pull clips and one plastic screw (per side) from under bumper and one plastic centre push clip (per side) from bumper wing in wheel arch. Carefully pull sides of bumper out from vehicle then forward to release the support clips on guard and under headlight. **See figure 1.**
3. Remove bumper support from vehicle, four 12mm head bolts (per side). **See figure 2.** Flatten hook lug on bumper support mounting plate so it will flat mount.
4. Enlarge rear hole in bumper support using a die grinder or similar for bolt on wire to fit. **See figure 3.**
5. Fit ECB steel mounting bracket between bumper support and chassis rail using M8 x 30 bolts, spring washers and flat washers (supplied). **See figure 4.** Using outer measurement on ECB Alloy Protection bar, align steel mount on vehicle. Ensure mounts are central to vehicle. **Tighten all bolts.**
6. Using ECB mount as a guide, drill holes in underside of bumper support to 10mm. **See figure 5. Note: Blow filings clear and treat all exposed metal with a rust inhibitor.** Install M10 x 40 bolt and washer on wire, flat washer, spring washer and nut. **Tighten all bolts.**
7. **On XT Models:** Mark and cut out section of lower grille to allow access to rear bolt. **See figure 6.**
8. Refit bumper cover as per reverse of step 2. Do not fit lower bumper inner plastic clips at this point.
9. Carefully fit ECB protection bar onto mounts and install M10 x 35 bolts, flat washers, spring washers and nuts. Rear bolts are fitted from behind bumper from underside of bumper. **See figure 7**
10. Align ECB protection bar with vehicle. **See figures 8, 10 and 12 for front views, figures 9, 11 and 13 for side views.**
11. **Tighten all bolts.**
12. Install plastic bumper lower plastic push pull clips.

#### **ENSURE NUMBER PLATE IS CLEARLY VISABLE**

**Note:** When fitting/refitting the licence plate to the vehicle, ensure there is no obstruction to licence plate vision in accordance with local authorities. If required relocate licence plate to an alternate location.



East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St  
Clontarf QLD 4019  
Australia

Po Box 122  
Margate QLD 4019  
Australia

WORLD'S BEST  
ALLOY BULLBARS

**Further VFPS Notes:**

- a) Do not attach VFPS to the vehicle using anchorages not intended for this purpose (e.g. engine mounting bolts).
- b) Do not use this product for any vehicle make or model, other than those specified by the VFPS manufacturer.
- c) Do not remove the plaque or label from the VFPS.
- d) Do not modify the structure of the VFPS in any way.
- e) No accessory or fitment should project forward of the VFPS forward profile.
- f) **ENSURE THESE INSTRUCTIONS ARE LEFT WITH VEHICLE OWNER AND/OR OPERATOR.**

**IMPORTANT INFORMATION**


Periodically check bolts and nuts for correct tightness, especially if travelling on rough roads

**FITTING KIT**


1 – Pair ECB Steel mounting brackets	6 – M10 spring washers
4 – M10 x 1.25 x 35 bolts	6 – M10 x 1.25 nuts
2 – M10 x 1.25 x 40 bolt and washer on wire	8 – M8 x 1.25 x 35 bolts
18 – M10 flat washers	8 – M8 spring washers




**Figure 1:** Unclip bumper from guard and light

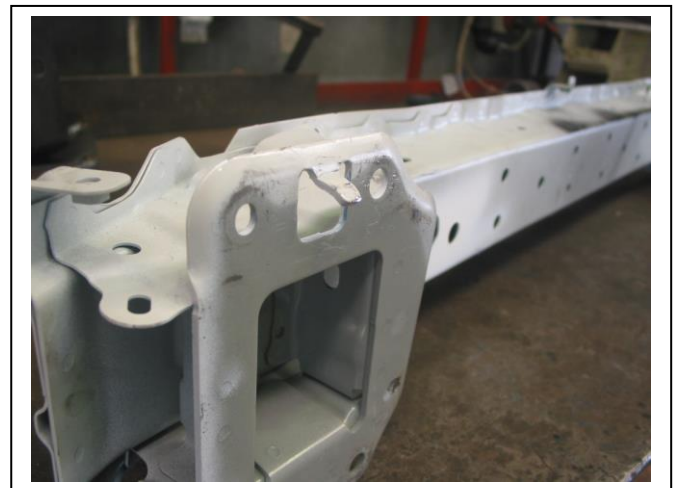

**Figure 2:** Rear tab before folding flat

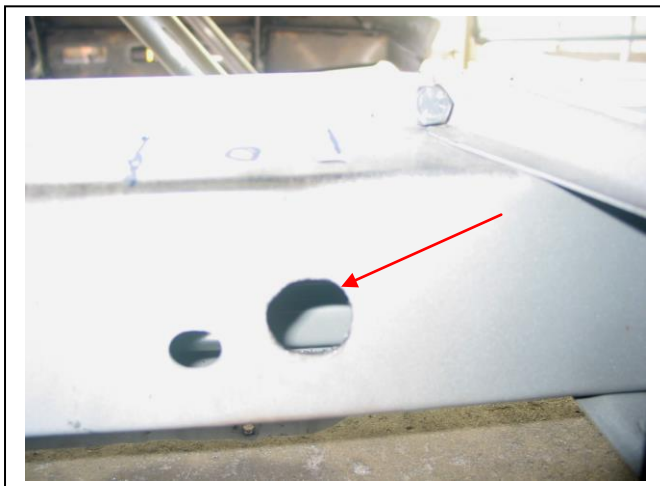

**Figure 3:** Die grind rear hole in bumper support

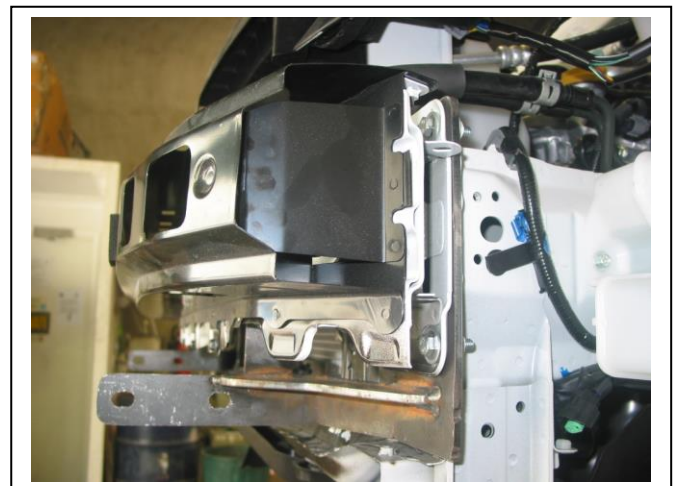

**Figure 4:** Install ECB mounts



East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700


Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au


29 Snook St  
Clontarf QLD 4019  
Australia

Po Box 122  
Margate QLD 4019  
Australia


WORLD'S BEST  
ALLOY BULLBARS

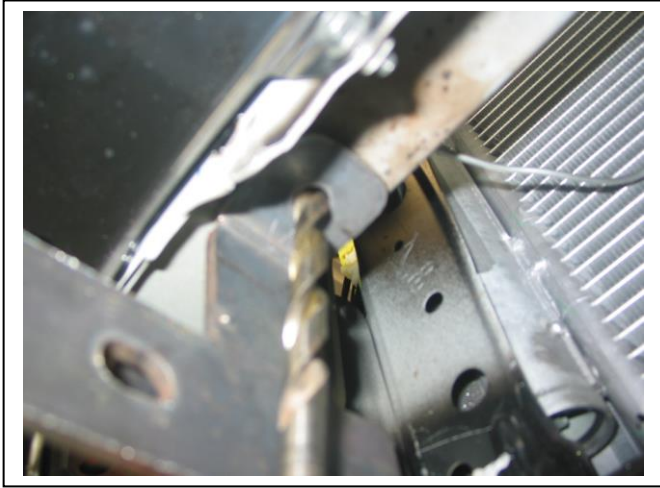

**Figure 5:** Drill lower hole to 10mm using mount as a guide.

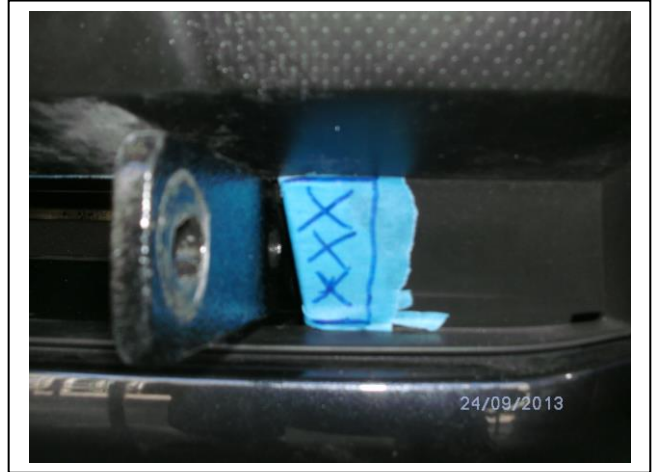

**Figure 6:** Cut bumper to allow access to rear bolt

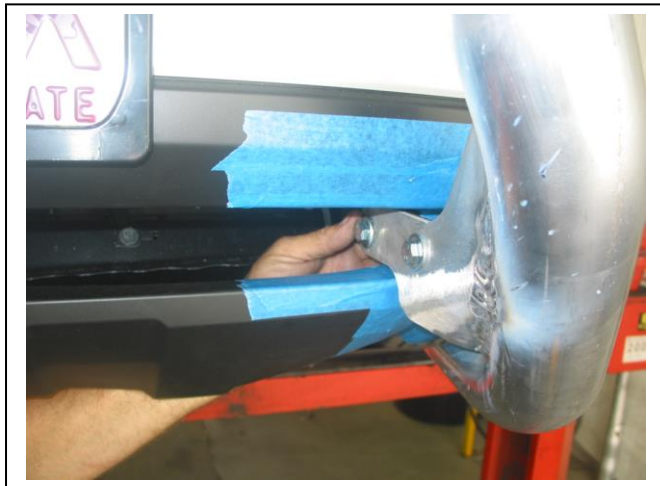

**Figure 7:** Access to rear bolts from behind bumper.



**Figure 8:** Nudge Bar front view



**Figure 9:** 76mm Nudge Bar side view



**Figure 10:** 63mm Series 2 Nudge Bar front view



East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St  
Clontarf QLD 4019  
Australia

Po Box 122  
Margate QLD 4019  
Australia

WORLD'S BEST  
ALLOY BULLBARS



**Figure 11:** 63mm Series 2 Nudge Bar side view



**Figure 12:** Type 8 Loop Bar front view



**Figure 13:** Type 8 Loop Bar side view



**WORLD'S BEST  
ALLOY BULLBARS**

**East Coast Bullbars (ECB Pty Ltd)**

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St  
Clontarf QLD 4019  
Australia

Po Box 122  
Margate QLD 4019  
Australia

## *We value your comments*

Dear Fitter,

ECB would like to know how you went with the installation of this product. We value your comment and may need to contact you to clarify some details so please complete your contact details clearly.

We would appreciate if you could complete as many of the following details as possible.

<b>Your Name:</b>	<b>Your contact No.</b>
<b>Product Part No.</b>	<b>Product Invoice No.</b>
<b>Product Description:</b>	<b>Make, model, and year of vehicle:</b>
<b>Product Work Order No.</b>	<b>Company your from/Company product purchased from:</b>

**Date of Fitment:** \_\_\_\_/\_\_\_\_/\_\_\_\_

Was the fitting hardware supplied complete?

Yes

No

If no what was not supplied

---

---

Did the installation go well?

Yes

No

Please provide comments

---

---

---

Please draw diagrams if you need to.

**Post to**  
Reply Paid 122  
PO Box 122  
Margate QLD 4019

**Fax to**  
(07) 3283 1168



**WORLD'S BEST  
ALLOY BULLBARS**

**East Coast Bullbars (ECB Pty Ltd)**

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au [www.ecb.com.au](http://www.ecb.com.au)

29 Snook St  
Clontarf QLD 4019  
Australia

Po Box 122  
Margate QLD 4019  
Australia



East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St  
Clontarf QLD 4019  
Australia

Po Box 122  
Margate QLD 4019  
Australia

WORLD'S BEST  
ALLOY BULLBARS

# DESPATCH CHECKLIST

## 8S65SY / NB6S65SY / NBS65SY

ICZBKTS65



Work Order #	
Finish:	
Transport:	
Due Date:	

OC..... 1 – Pair ECB steel mounting brackets.

BK..... 1 – Bolt Kit.

**See other side of  
this page for  
photos of all  
mounts**



Is this product “the best it can be” Yes \_\_\_\_\_ / \_\_\_\_\_  
Wrapper’s initials / Checker initials

If NO fix before continuing

All parts checked and completed by:

Nut and bolts: \_\_\_\_\_ Date \_\_/\_\_/\_\_

Order control: \_\_\_\_\_ Date \_\_/\_\_/\_\_

Final wrap check: \_\_\_\_\_ Date \_\_/\_\_/\_\_



East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St  
Clontarf QLD 4019  
Australia

Po Box 122  
Margate QLD 4019  
Australia

WORLD'S BEST  
ALLOY BULLBARS



Wrapper's initials / Checker initials

\_\_\_\_\_/\_\_\_\_\_