



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

BT85SY

REPLACES: 18.02.05

REVISED: 08.02.10

FITTING INSTRUCTIONS

LANDCRUISER 100 SER IFS BIG TUBE™ PROTECTION BARS WITH BUMPER LIGHTS AND 9000LB WARN WINCH MOUNTING BRACKET VEHICLE FRONTAL PROTECTION SYSTEM (VFPS) FOR AIR BAG and ADR COMPLIANT VEHICLES

Check installation hardware before commencing.

NOTE: Ensure any exposed ends of clip lock and infill trim are sealed with silicone or similar to prevent corrosion.

1. Lift Bonnet. Remove grille, three PK screw at top and two plastic clips at bottom. Remove bumper cover. Three plastic clips behind bottom of grille area, **See figure 1**, one 10mm head PK screw (each side at top of bumper side returns and four to six 10mm head bolts (depending on model) along bottom of bumper. Disconnect original bumper lights as removing.
2. Remove foam from bumper sub-frame to access sub-frame bolts.
3. Remove bumper sub-frame.
4. Remove tow hook tie and down brackets.
5. Bend bumper cover locating tab under headlight downwards (98-9/02 models only).
6. Remove indicators from vehicle (1 PK screw under bonnet, top outside of headlight) push out from under guard. Splice ECB wiring into original indicator wiring loome. Use cable locks (supplied). Splice ECB park light wiring into original park light wiring. Refit original indicators.
7. Attach the 200mm lengths of 6mm black clip (supplied) to each side of the roller fairlead cut out, trim to edge of skirt. **See figure 2.**
8. Attach infill trim (supplied) to top sides of ECB protection bar. **NOTE:** Trim 30mm off lower edge so trim will sit over end of protection bar. **See figures 3 and 4. Trim excess off end to follow protection bar. See figure 5. NOTE:** Seal any exposed edges of trim with silicone or similar to avoid corrosion of inner steel.
9. Fit ECB LED indicator / park lights (supplied) into protection bar as per instructions supplied with the LED indicator kit. **NOTE: Ensure park light is to outside. See figure 6.**
10. Attach ECB fog lights to protection bar. Place M6 x 20 bolts, spring washers (supplied) through light mount from inside and attach nut to top. Slide assembly into light mount in Protection bar and centralize light to hole. **See figure 7. TIGHTEN FIRM ONLY.** Fit ECB fog light trims (supplied) to protection bar. **NOTE:** Wider part of trim faces to centre.
11. Attach round cut out surrounds (supplied) into the round cut outs on the front of the protection bar. **NOTE:** Wider part of trim faces to bottom side of cut out.
12. Attach ECB steel mounting brackets (supplied) to vehicle. **NOTE:** Tilt steel mounting brackets slightly in towards centre and feed onto chassis. Use M10 x 30 high tensile bolts (supplied) for front holes. **FINGER TIGHTEN ONLY.** Do not fit lower tow hook bolts. **See figures 8 and 9.**



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

13. Insert ½ x 6 bolts (supplied) vertically through mount hole at front of chassis. Place 40mm round spacer (supplied) between mount and top of chassis. Use nuts/washers (supplied). **DO NOT TIGHTEN. See figure 9.**
NOTE: Ensure all air conditioning lines are clear of nut/bolt on passenger side. Bend slightly to clear if necessary.
14. Attach fairlead to ECB winch mount. Use ¾ x 1 ¼ bolts/washers and nuts (supplied). **TIGHTEN FIRM ONLY AS HIGH AS POSSIBLE ON WINCH MOUNTING BRACKET.**
15. Loosely bolt winch to winch frame. Use bolts and spring washers supplied with winch along with ¾ flat washers (supplied). **See figures 10. NOTE:** Feed winch cable through roller fairlead as installing.
16. Attach control box cables to winch. **TIGHTEN CABLES**—loosely sit control box on top of winch **See figure 11.**
17. Place winch mount and winch onto trolley jack or similar. Ensure all cables are at top of winch and not at back.
18. Jack winch mount/ winch up onto chassis rails. **See figure 12.**
19. Reattach tow hook on drivers side and tie down brackets on drivers and passengers side over winch mount. **DO NOT TIGHTEN. Use original bolts.**
20. Position control box bracket on inside of winch mounting bracket. Use 3/8 x 1 ¼ bolt/nut and washers (supplied). **FINGER TIGHTEN ONLY. See figure 13.**
21. Attach control box to control box bracket. Use ¼ flat washer (supplied) each side of control box bracket. Position control box socket approximately 2-5mm in front of grille panel and top of socket 20-30mm from with underside of grille panel. **TIGHTEN ALL BOLTS/NUTS. See figure 14 and 15.**
22. Route positive and negative cables to battery and connect as per winch instructions.
23. Refit grille to vehicle.
24. Attach ECB protection bar to inside of steel mounting brackets using ½ x 1 ½ bolts and nuts (supplied). **DO NOT TIGHTEN.**

NOTE: Use ½ x 1 ¾ bolts (supplied) for lower protection bar mount hole. Pass bolt through winch mount, steel protection bar mount, alloy mount and winch mount.
25. **TIGHTEN M10 x 30 x 1.25 bolts and ½ x 6 bolts/nuts on Protection bar steel mounts.**
26. Align protection bar with vehicle – adjust on slot holes for protection bar to sit neatly around grille and headlight under panels. Adjust at side returns so protection bar infill trim just makes contact with vehicle guards. **See figure 16. TIGHTEN FOUR UPPER PROTECTION BAR BOLTS/NUTS ONLY TO 130 N-m (100ft/lb)**
27. Position winch frame on slot holes so that winch frame is clear of protection bar and chassis cross member. **TIGHTEN ALL BOLTS. Including lower protection bolts/nuts.**
28. Align winch in winch frame and **TIGHTEN** four winch bolts.
29. Realign roller fairlead if necessary. **TIGHTEN IN POSITION.**

30. Connect ECB indicator/park lights and ECB fog lamps. **CHECK OPERATION.**

NOTE: Cut original fog lamp socket from original wiring. Use connectors supplied with ECB fog lamps.

31. Aim fog lights just below low beam and **TIGHTEN all fog light bolts.**

ENSURE NUMBER PLATE IS CLEARLY VISABLE

Note: When fitting/refitting the licence plate to the vehicle, ensure there is no obstruction to licence plate vision in accordance with local authorities. If required relocate licence plate to an alternate location.

Further VFPS Notes:

- Do not attach VFPS to the vehicle using anchorages not intended for this purpose (e.g. engine mounting bolts).
- Do not use this product for any vehicle make or model, other than those specified by the VFPS manufacturer.
- Do not remove the plaque or label from the VFPS.
- Do not modify the structure of the VFPS in any way.
- No accessory or fitment should project forward of the VFPS forward profile.
- ENSURE THESE INSTRUCTIONS ARE LEFT WITH VEHICLE OWNER AND/OR OPERATOR.**

IMPORTANT INFORMATION

Periodically check bolts and nuts for correct tightness, especially if travelling on rough roads

FITTING KIT

1 – Winch mounting plate.	16 – ½ flat washers.
1 – Control box bracket.	1 – ECB LED Indicator / Park light kit
2 – Steel mounting brackets.	10 – Cable locks.
2 – 40mm alloy washers c/w 13mm round holes.	2 – ECB Fog Lamps and wiring kit.
4 – M10 x 30 x 1.25 bolts.	2 – ECB fog / bumper light trims.
4 – 3/8 x 1 ¼ bolts and nuts.	2 – M6 x 20 bolts.
16 – 3/8 flat washers.	2 – M6 nuts and spring washers
8 – 3/8 spring washers.	4 – M6 flat washers.
2 – ½ x 6 bolts and nuts.	1 – 2500mm length 6mm black infill trim.
4 – ½ x 1 ½ bolts and nuts.	2 – 200mm lengths 6mm black clip lock.
2 – ½ x 1 ¾ bolts.	2 – Round cut out surrounds (same as fog light trims) –
8 – ½ spring washers.	

3 plastic clips

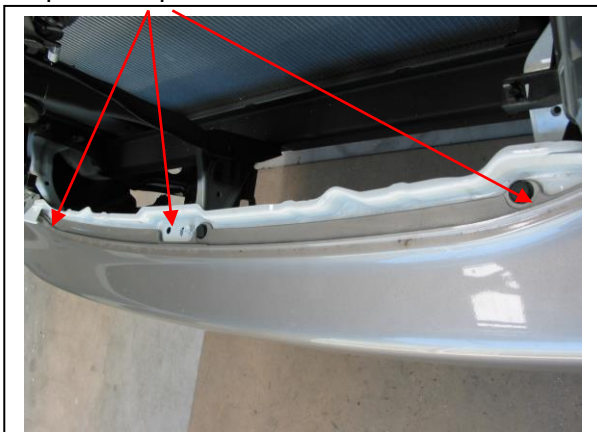


Figure 1



Figure 2



East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

WORLD'S BEST
ALLOY BULLBARS

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

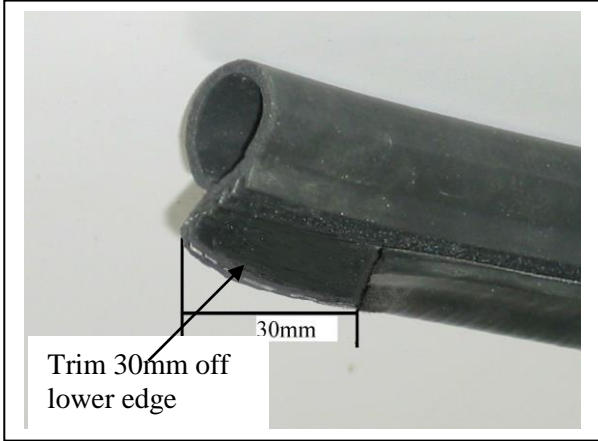


Figure 3

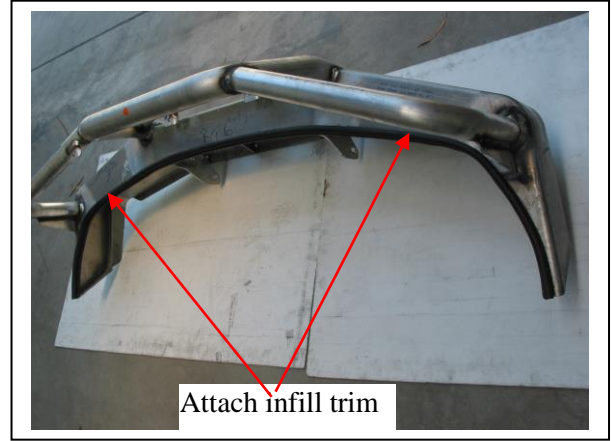


Figure 4

Infill trim flush with end

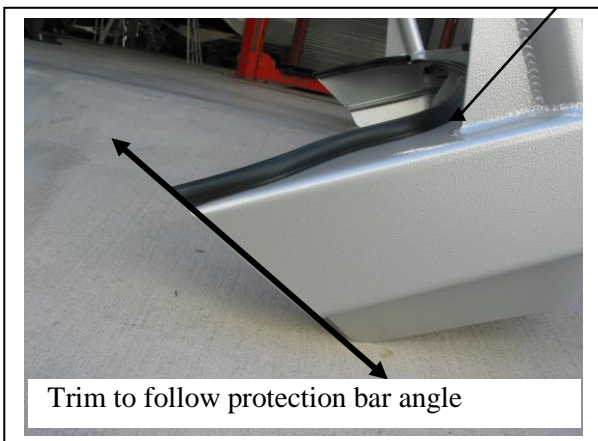


Figure 5

Note: Example only angle on bar maybe different to the above

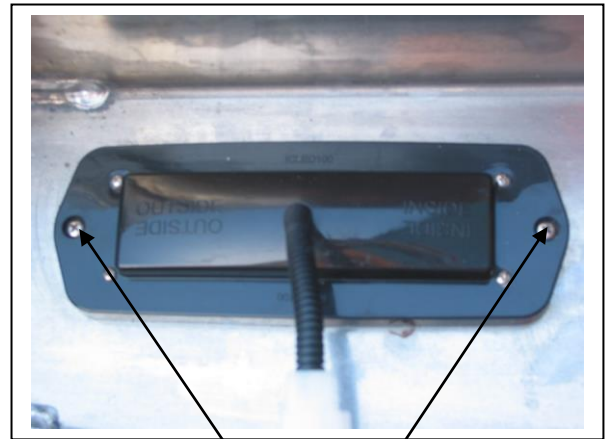


Figure 6

Stainless steel self-tappers

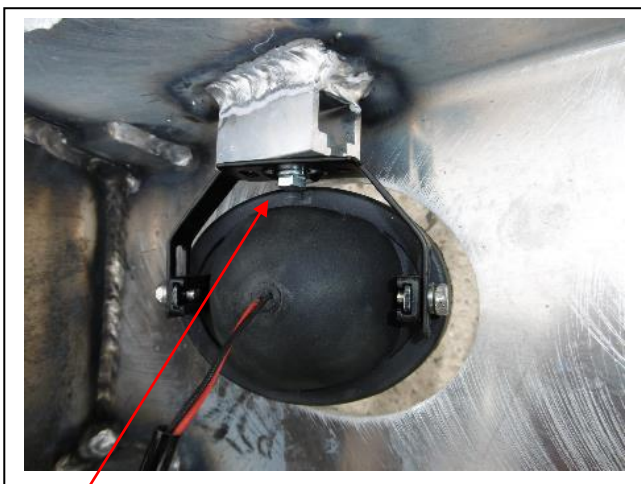


Figure 7

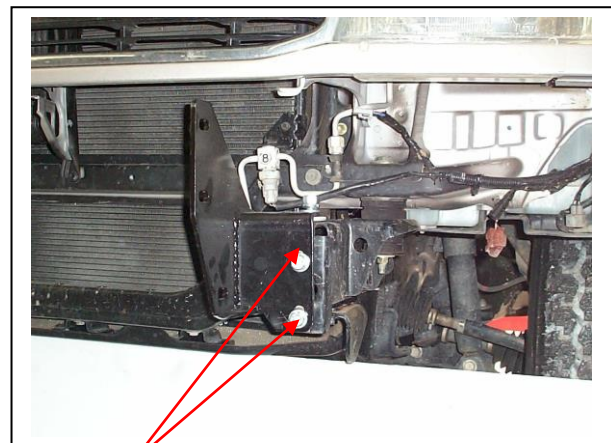


Figure 8

M10 x 30 x 1.25
bolts.

M6 bolt



East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700


Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

WORLD'S BEST
ALLOY BULLBARS

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

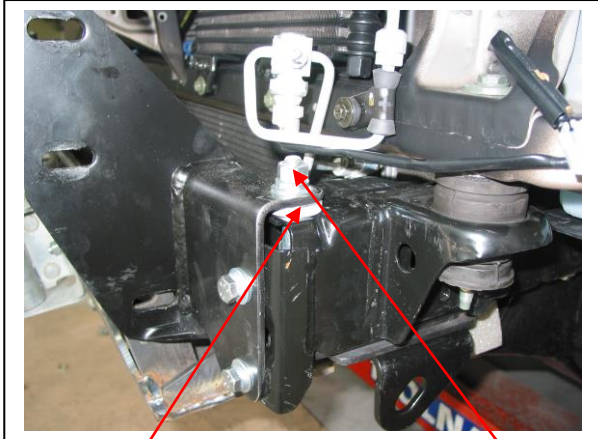

6mm alloy washer **Figure 9** 1/2 x 6 bolt/nut

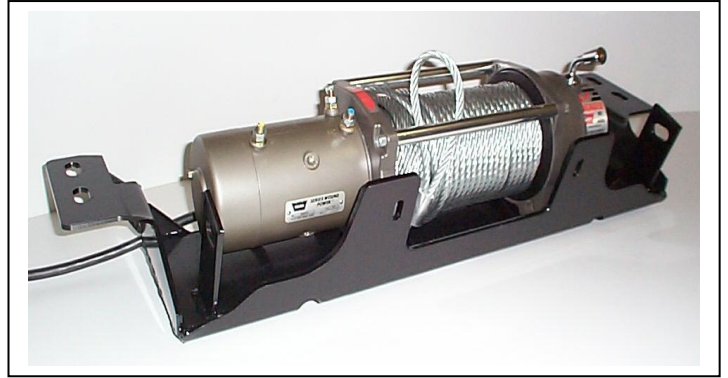


Figure 10

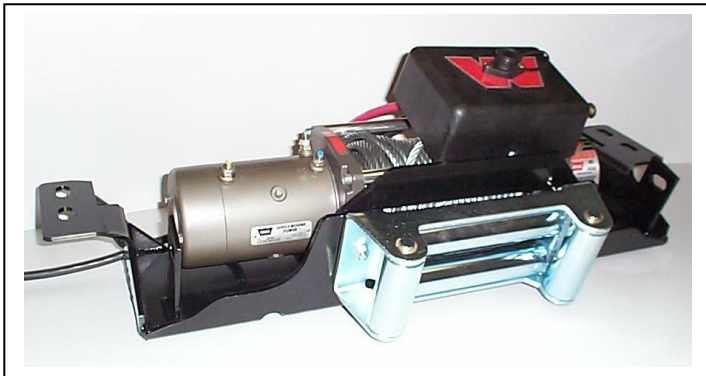


Figure 11



Figure 12

Control box bracket



Figure 13



Figure 14



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

Control box socket 20-30mm under panel

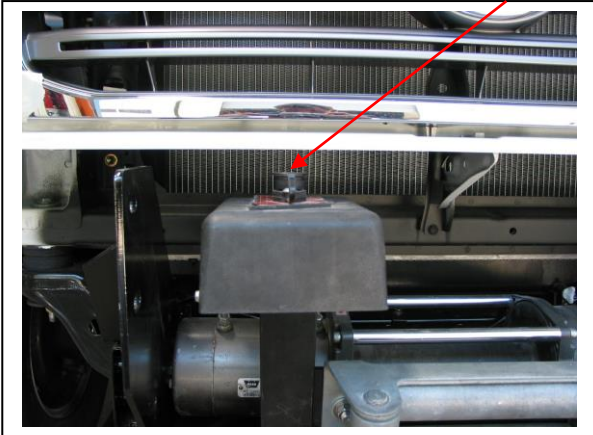


Figure 15

Infill trim



Figure 16



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

We value your comments

Dear Fitter,

ECB would like to know how you went with the installation of this product. We value your comment and may need to contact you to clarify some details so please complete your contact details clearly.

We would appreciate if you could complete as many of the following details as possible.

Your Name:	Your contact No.
Product Part No.	Product Invoice No.
Product Description:	Make, model, and year of vehicle:
Product Work Order No.	Company your from/Company product purchased from:

Date of fitment: ____/____/____

Was the fitting hardware supplied complete?

Yes

No

If no what was not supplied

Did the installation go well?

Yes

No

Please provide comments

Please draw diagrams if you need to.

Post to
Reply Paid 122
PO Box 122

Fax to
(07) 3283 1168



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

Margate QLD 4019



WORLD'S BEST
ALLOY BULLBARS

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

DESPATCH CHECKLIST BT85SY


ICZBKCT85



Work Order #	
Finish:	
Transport:	
Due Date:	

- 1 – Winch mounting bracket.
- 1 – Control box bracket.
- 2 – Steel mounting brackets.
- 1 – Bolt Kit.
- 1 – ECB LED Indicator / Park light kit.
- 2 – ECB fog lamps and wiring kit.
- 2 – ECB fog/bumper light trims.
- 1 – 2500mm length 6mm black **infill** trim.
- 2 – 200mm lengths 6mm clip lock.
- 2 – Round cut out surrounds (same as fog light trims) - **Fitted to Bar.**
- 2 – ECB overrides – **Fitted to bar.**
- 2 – 6mm air scoops – **Fitted to bar.**

**See other side of
this page for
photos of all
mounts**

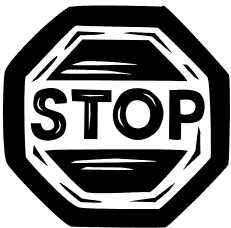

Is this product “the best it can be” Yes _____ / _____

Wrapper’s initials / Checker initials

If **NO** fix before continuing

All parts checked and completed by:

Nut and bolts: _____ Date ___/___/___

Order control: _____ Date ___/___/___

Final wrap check: _____ Date ___/___/___



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

