



WORLD'S BEST
ALLOY BULLBARS

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

NB6HO56SY / NB7HO56SY / MHO56SY

REPLACES: 01.02.05

REVISED: 24.07.10

FITTING INSTRUCTIONS

HONDA CRV 10/04-01/07 63mm NUDGE BAR, 76mm SERIES 2 NUDGE BAR & MIDI TUBE FOR VEHICLE FRONTAL PROTECTION SYSTEM (VFPS) AIR BAG & ADR COMPLIANT VEHICLES

Check installation hardware before commencing.

1. Remove plastic cover from under bumper, fourteen plastic clips. **See figure 1.**
2. Remove one plastic clip and one PK screw (each side) from plastic inner guard and pull plastic inner guards clear to access chassis area. **See figure 2.**
3. Die grind existing hole at lower front of chassis (each side) to allow bolts/washer wire to go through. **See figure 3.** Blow filings from vehicle with compressed air and treat exposed metal with rust inhibitor or similar.
4. Insert 3/8 x 1 ½ bolts/washer on wire (supplied) into chassis to protrude out through holes in side of chassis. **See figures 4 & 5.**
5. Fit alloy spacer plates (supplied) over bolts. **See figure 6.**
6. Attach steel mounting brackets (supplied) over bolts. Use 3/8 nuts/washers (supplied). Align level at bottom and with each other - **TIGHTEN IN POSITION.** Trim off excess wire and position to avoid rattling. **See figure 7.**
7. Reattach plastic inner guards.
8. Attach protection bar to outside of steel mounting brackets. Use 3/8 x 1 ½ bolts/washers on wire (supplied) to access front holes. Use 3/8 x 1 ½ bolts/nuts and washers (supplied) for rear holes. **See figure 8.**
9. Align protection bar with vehicle. **FINGER TIGHTEN ONLY. Note:** Position bar as high as possible on steel mounting brackets for maximum ground clearance; **See figures 9, 11 and 13** for side views and **figures 10, 12 and 14** for front views. **TIGHTEN ALL BOLTS/NUTS.**
10. Trim edges of plastic cover to fit beside steel mounting brackets. Reattach plastic cover to vehicle.

ENSURE NUMBER PLATE IS CLEARLY VISABLE

Note: When fitting/refitting the licence plate to the vehicle, ensure there is no obstruction to licence plate vision in accordance with local authorities. If required relocate licence plate to an alternate location.



East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

WORLD'S BEST
ALLOY BULLBARS

Further VFPS Notes:

- a) Do not attach VFPS to the vehicle using anchorages not intended for this purpose (e.g. engine mounting bolts).
- b) Do not use this product for any vehicle make or model, other than those specified by the VFPS manufacturer.
- c) Do not remove the plaque or label from the VFPS.
- d) Do not modify the structure of the VFPS in any way.
- e) No accessory or fitment should project forward of the VFPS forward profile.
- f) **ENSURE THESE INSTRUCTIONS ARE LEFT WITH VEHICLE OWNER AND/OR OPERATOR.**

IMPORTANT INFORMATION

Periodically check bolts and nuts for correct tightness, especially if travelling on rough roads

FITTING KIT

2 – Steel mounting brackets.
4 – 6mm alloy half moon plates.
6 – 3/8 x 1 1/2 bolts/washer on 250mm wire.
2 – 3/8 x 1 1/2 bolts.
8 – 3/8 nuts.
10 – 3/8 flat washers.
8 – 3/8 spring washers.

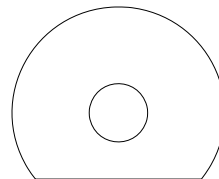


Figure 1



Figure 2 – Drivers side shown



East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia



Figure 3 – Drivers side shown



Figure 4 – Passenger side shown



Figure 5 – Passenger side shown

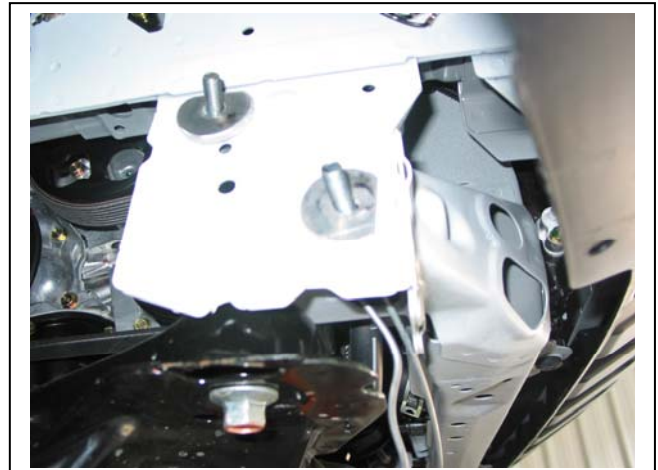


Figure 6 – Drivers side shown.

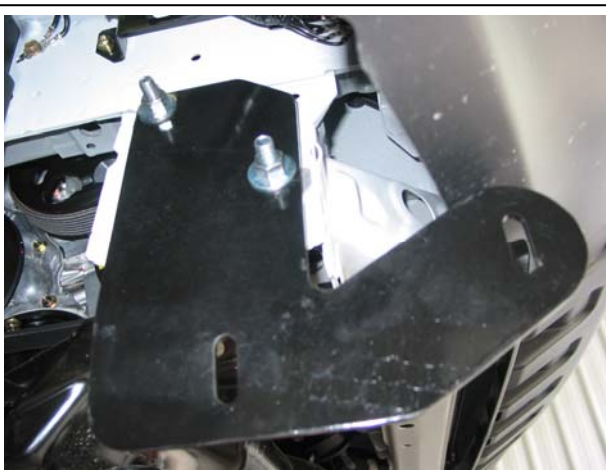


Figure 7 – Drivers side shown



Figure 8 – Drivers side shown



East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

WORLD'S BEST
ALLOY BULLBARS

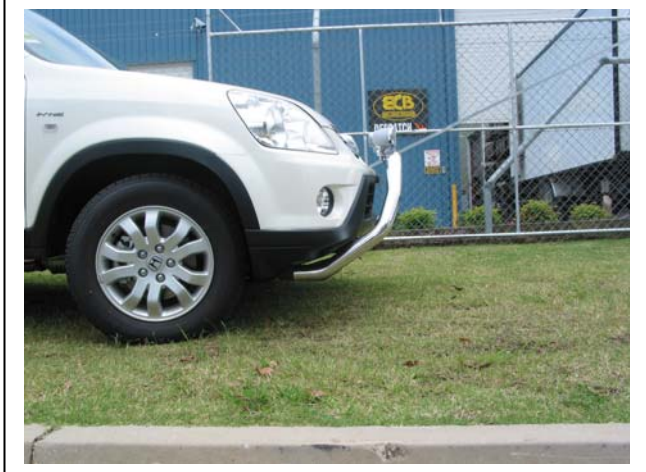


Figure 9 – 63mm Nudge Bar side view shown



Figure 10 – 63mm Nudge Bar front view shown



Figure 11 – 76mm Series 2 Nudge Bar side view shown



Figure 12 – 76mm Series 2 Nudge Bar front view shown



Figure 13 – 76mm Midi tube side view shown



Figure 14 – 76mm Midi Tube front view shown



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia



East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia


WORLD'S BEST
ALLOY BULLBARS

DESPATCH CHECKLIST NB6H056SY / NB7H056SY / MHO56SY

Work Order #	
Finish:	
Transport:	
Due Date:	

- 2 – Steel mounting brackets.
- 1 – Bolt Kit.

**See other side of
this page for
photos of all
mounts**

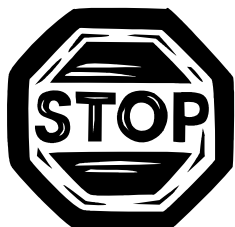

Is this product “the best it can be” Yes _____ / _____
Wrapper's initials / Checker initials
 If NO fix before continuing

All parts checked and completed by:

Nut and bolts: _____ Date __/__/__

Order control: _____ Date __/__/__

Final wrap check: _____ Date __/__/__



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

