



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

NBFT0004SY

REPLACES: 00.00.00

REVISED: 04.06.15

FITTING INSTRUCTIONS

**FOTON TUNLAND 03/14- 76mm NUDGE BAR
VEHICLE FRONTAL PROTECTION SYSTEM (VFPS)
FOR AIR BAG & ADR COMPLIANT VEHICLES**

Check installation hardware before commencing.

1. From under vehicle, locate the two holes through the chassis rails each side of the vehicle, directly behind the front impact member. **See figure 1**
2. Working on one side at a time position the ECB steel mounting bracket (supplied) inside of the chassis rail. From the outside of the chassis rail place the two spacer tubes (supplied) through the holes in the chassis rail until they touch the steel mounting bracket. Insert the M10 x 1.5 x 85mm bolts, flat in spring washers (supplied) through steel mounting bracket, spacer tube and the outer chassis plate (supplied) Use M10 x 1.5 nuts (supplied) and figure tighten in position. **See figure 2.**
3. Repeat step 3 for the opposite side
4. Align the steel mounting brackets so the Nudge Bar mounting brackets will sit to the outside and **TIGHTEN.**
5. Attach the Nudge bar to the steel mounting brackets using M10 x 1.5 x 35mm bolts, flat washers, spring washers and nuts see **figure 3** (supplied). Finger tighten only. **NOTE:** Plastic splash guards near chassis mount position may need to be trimmed slightly – please ensure the minimum amount is trimmed if required
6. Align Nudge Bar with vehicle **see figures 4 and 5. TIGHTEN ALL BOLTS**

ENSURE NUMBER PLATE IS CLEARLY VISABLE

Note: When fitting/refitting the licence plate to the vehicle, ensure there is no obstruction to licence plate vision in accordance with local authorities. If required relocate licence plate to an alternate location.

Further VFPS Notes:

- a) Do not attach VFPS to the vehicle using anchorages not intended for this purpose (e.g. engine mounting bolts).
- b) Do not use this product for any vehicle make or model, other than those specified by the VFPS manufacturer.
- c) Do not remove the plaque or label from the VFPS.
- d) Do not modify the structure of the VFPS in any way.
- e) No accessory or fitment should project forward of the VFPS forward profile.
- f) **ENSURE THESE INSTRUCTIONS ARE LEFT WITH VEHICLE OWNER AND/OR OPERATOR.**

IMPORTANT INFORMATION

Periodically check bolts and nuts for correct tightness, especially if travelling on rough roads

FITTING KIT

2 – ECB Steel mounting brackets	4 – M10 x 1.5 x 35mm bolts
2 – Outer Chassis Plate (in kit)	8 x M10 x 1.5 nuts
4 – Spacer Tubes (in kit) (10Nb x 54mm long)	16 x M10 flat washers
4 – M10 x 1.5 x 85mm bolts.	8 x M10 spring washers



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

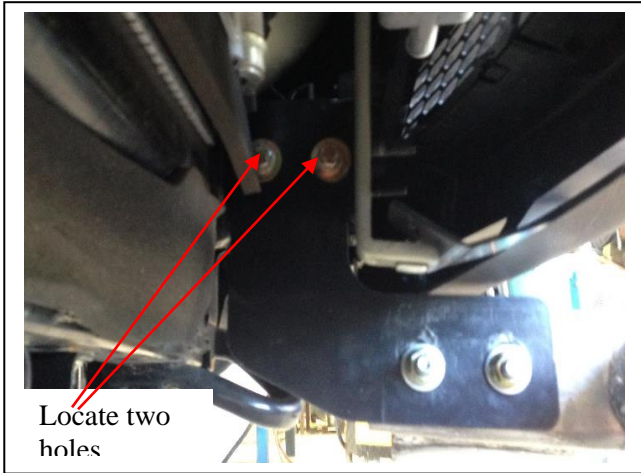


Figure 1 – Mounting bracket fitted

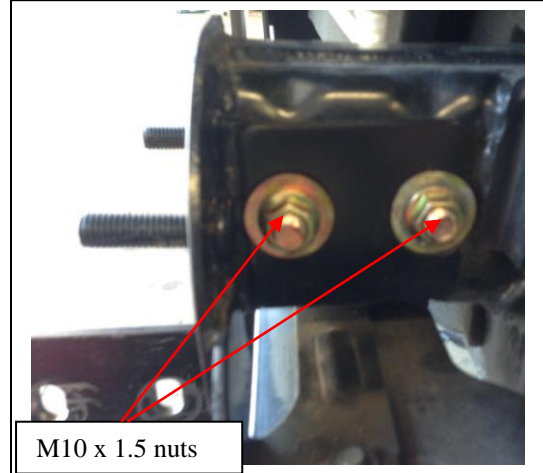


Figure 2 – Vehicle stripped down for illustration purpose only

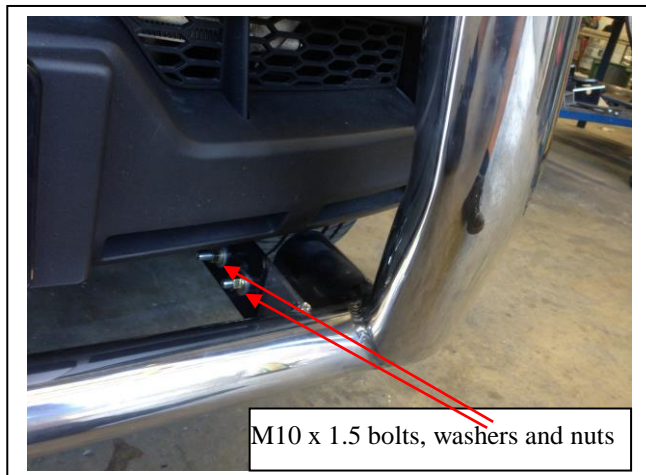


Figure 3



Figure 4 – Front View Shown



Figure 5 – Side View Shown



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

We value your comments

Dear Fitter,

ECB would like to know how you went with the installation of this product. We value your comment and may need to contact you to clarify some details so please complete your contact details clearly.

We would appreciate if you could complete as many of the following details as possible.

Your Name:	Your contact No.
Product Part No.	Product Invoice No.
Product Description:	Make, model, and year of vehicle:
Product Work Order No.	Company your from/Company product purchased from:

Date of Fitment: ____/____/____

Was the fitting hardware supplied complete?

Yes

No

If no what was not supplied

Did the installation go well?

Yes

No

Please provide comments

Please draw diagrams if you need to.

Post to
Reply Paid 122
PO Box 122
Margate QLD 4019

Fax to
(07) 3283 1168



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia



WORLD'S BEST
ALLOY BULLBARS

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au


29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

DESPATCH CHECKLIST NBFT004SY

Work Order #		See other side of this page for photos of all mounts
Finish:		
Transport:		
Due Date:		

- OC..... 2 – Steel mounting brackets.
- BK..... 2 – Outer Chassis Plates
- BK.....4 – Spacer Tubes
- BK.....1 – Bolt kit

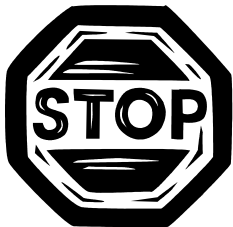

Is this product “the best it can be” Yes
If **NO** fix before continuing

All parts checked and completed by:

Nut and bolts: _____ Date __/__/__

Order control: _____ Date __/__/__

Final wrap check: _____ Date __/__/__



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)


Tel: 07 3897 5700

Fax: 07 3283 1168


ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

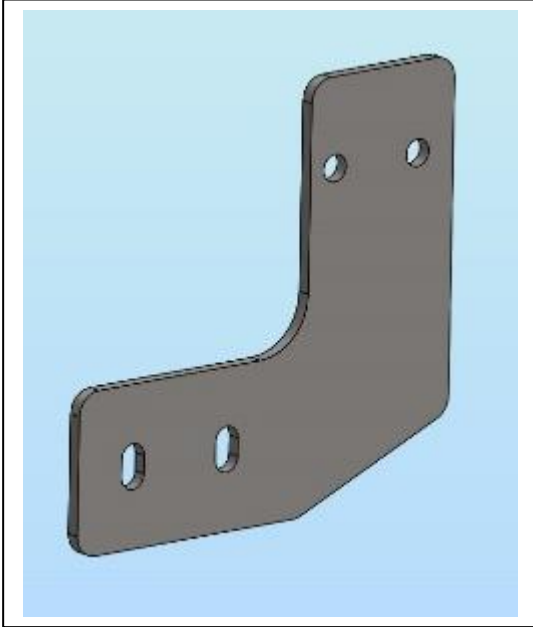

2 x Steel Mounting bracket

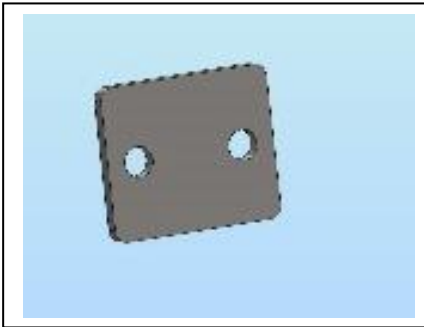

2 x Outer Chassis Plates (In KIT)

_____/_____
Wrapper's initials / Checker initials