



**WORLD'S BEST  
ALLOY BULLBARS**

**East Coast Bullbars (ECB Pty Ltd)**

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St  
Clontarf QLD 4019  
Australia

Po Box 122  
Margate QLD 4019  
Australia

**MT185SY / NB6T185SY/ NBT185SY**

REPLACES: 00.00.00

REVISED: 01.09.14

## **FITTING INSTRUCTIONS**

### **TOYOTA HIACE SLWB 3/2014 ON MIDI TUBE, 63MM SERIES 2 NUDGE BAR AND 76MM NUDGE BAR VEHICLE FRONTAL PROTECTION SYSTEM (VFPS) FOR AIR BAG & ADR COMPLIANT VEHICLES**

Check installation hardware before commencing.

1. Lift bonnet.
2. Remove two PK self-tapers and four plastic clips at top of grille. Pull grille out at top to access fixed grille clips into top of bumper cover. Release clips and pull grille forward to remove.
3. Remove bumper cover. Remove plastic step in fills, four plastic clips per infill, **see figure 1**. Remove one plastic push pull clip from top of bumper cover, two plastic push pull clips at bottom of side returns (each side), three plastic clips from lower bumper cover, and three 10mm head bolts from centre air intake area of bumper cover. Pull bumper cover out at side returns to release off clips, **see figure 2**. Pull forward off locating tabs (two) near lower inner headlight area and lift away from vehicle. **See figure 3**.
4. Remove lower and upper steel bumper support from chassis. Ten 14mm head bolts, one 10 mm head bolt. **See figure 4**.
5. Remove two 12 mm head bolts (each side) from front of chassis and remove steel keepers, on passenger side remove temp. sensor from keeper. **See figure 5**.
6. Flatten two mounting tabs (each side) at front of chassis. **See figure 6**.
7. Remove horn and flatten side of horn mount. **See figure 7**.
8. Fit steel mounting brackets (supplied) to front of chassis between bumper support (refit to vehicle) and end of rail. Use M10 x 35 bolt, flat washer and spring washer (supplied) into 10mm captive nut. Centralise and level steel mounts to front of vehicle, ensure steel mounting brackets are set at correct measurement for protection bar to mount on inside of steel mounting brackets (check protection bar measurement) Tighten bolts. **See figure 8**.
9. On passenger side steel mount place temp sensor into hole. Using zip tie (supplied) wrap around sensor. **See figure 9. Do not over Tighten as damage to sensor could occur.**
10. Using measurement from alloy protection bar transfer it to inside of front bumper grille, carefully mark and cut grille to fit over steel mount. **See figure 10**.
11. Refit bumper carefully over steel mounts in the reverse steps of 1.
12. Carefully fit protection bar onto steel mounts using four M10 x 40 bolts, spring washers, flat washers and nuts (supplied). Align protection bar to front of vehicle and tighten all bolts. **See figures 11, 13 and 15 for front views and 12, 14 and 16 for side views.**



**WORLD'S BEST  
ALLOY BULLBARS**

**East Coast Bullbars (ECB Pty Ltd)**

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St  
Clontarf QLD 4019  
Australia

Po Box 122  
Margate QLD 4019  
Australia

### **ENSURE NUMBER PLATE IS CLEARLY VISABLE**

**Note:** When fitting/refitting the licence plate to the vehicle, ensure there is no obstruction to licence plate vision in accordance with local authorities. If required relocate licence plate to an alternate location.

#### **Further VFPS Notes:**

- a) Do not attach VFPS to the vehicle using anchorages not intended for this purpose (e.g. engine mounting bolts).
- b) Do not use this product for any vehicle make or model, other than those specified by the VFPS manufacturer.
- c) Do not remove the plaque or label from the VFPS.
- d) Do not modify the structure of the VFPS in any way.
- e) No accessory or fitment should project forward of the VFPS forward profile.
- f) **ENSURE THESE INSTRUCTIONS ARE LEFT WITH VEHICLE OWNER AND/OR OPERATOR.**

#### **IMPORTANT INFORMATION**

Periodically check bolts and nuts for correct tightness, especially if travelling on rough roads

#### **FITTING KIT**

1 – Pair ECB steel mounts	18 – M10 Flat washers
4 – M10 x 1.25 x 40 bolts	4 – M10 Nuts
10 – M10 x 1.25 x 30 bolts	1 – 150mm zip tie
14 – M10 Spring washers	



**Figure 1** – Shown removing passenger side step infill



**Figure 2**



East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700


Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au


WORLD'S BEST  
ALLOY BULLBARS

29 Snook St  
Clontarf QLD 4019  
Australia

Po Box 122  
Margate QLD 4019  
Australia

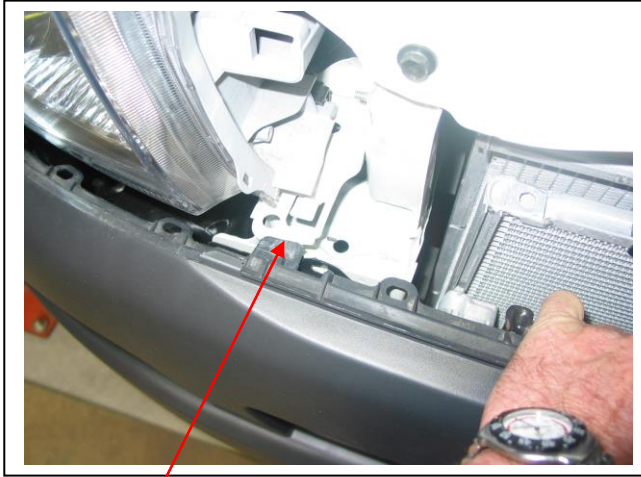


Locating tabs **Figure 3**

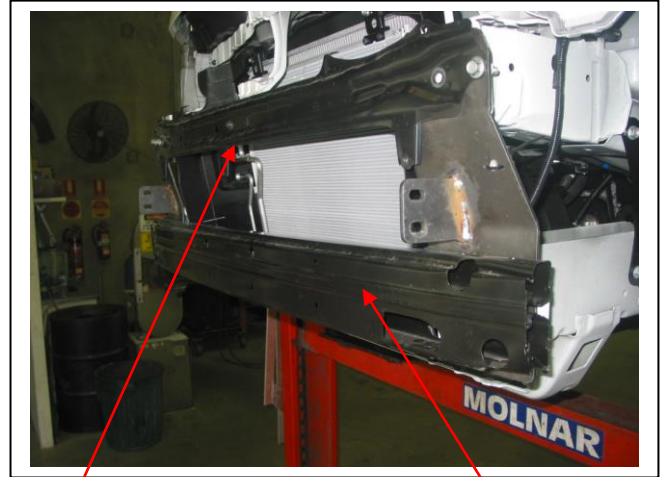


Steel bumper  
cover support  
upper

**Figure 4**

Steel bumper  
cover support  
lower

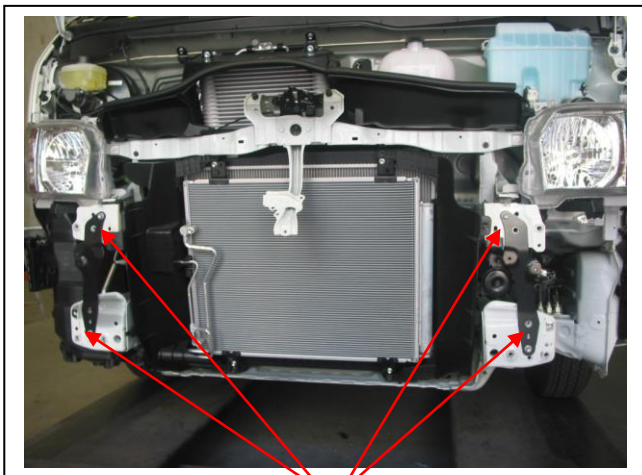

**Figure 5**

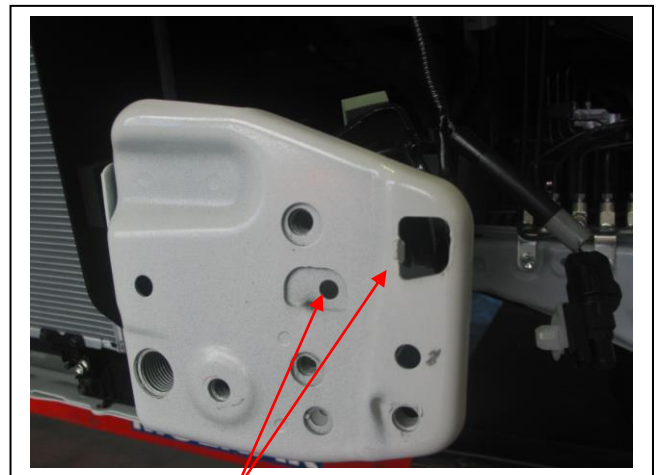

**Figure 6** flatten two tabs per side



**Figure 7**



**Figure 8.**





East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St  
Clontarf QLD 4019  
Australia

Po Box 122  
Margate QLD 4019  
Australia

WORLD'S BEST  
ALLOY BULLBARS

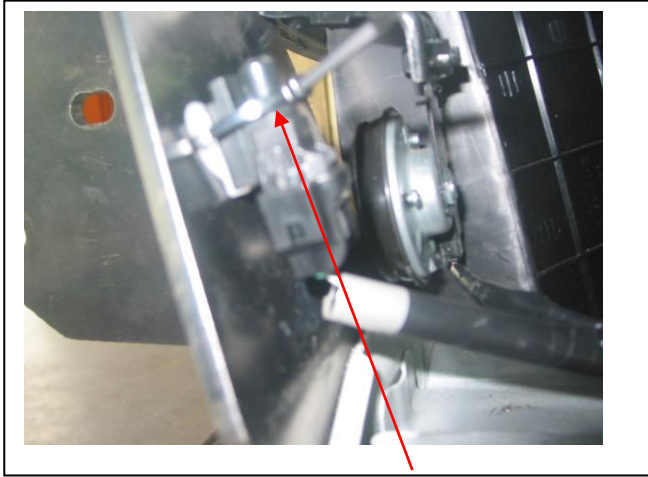


Figure 9 - zip tie around sensor.



Figure 10.



Figure 11 – Nudge bar side view



Figure 12 – Nudge bar front view.



Figure 13 – Series 2 side view.



Figure 14 – Series 2 front view.



East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St  
Clontarf QLD 4019  
Australia

Po Box 122  
Margate QLD 4019  
Australia

WORLD'S BEST  
ALLOY BULLBARS



Figure 15 – Midi tube side view



Figure 16 – Midi tube front view



**WORLD'S BEST  
ALLOY BULLBARS**

**East Coast Bullbars (ECB Pty Ltd)**

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St  
Clontarf QLD 4019  
Australia

Po Box 122  
Margate QLD 4019  
Australia

**We value your comments**

Dear Fitter,

ECB would like to know how you went with the installation of this product. We value your comment and may need to contact you to clarify some details so please complete your contact details clearly.

We would appreciate if you could complete as many of the following details as possible.

<b>Your Name:</b>	<b>Your contact No.</b>
<b>Product Part No.</b>	<b>Product Invoice No.</b>
<b>Product Description:</b>	<b>Make, model, and year of vehicle:</b>
<b>Product Work Order No.</b>	<b>Company your from/Company product purchased from:</b>

**Date of Fitment:** \_\_\_\_/\_\_\_\_/\_\_\_\_

Was the fitting hardware supplied complete?                      Yes                      No

If no what was not supplied

\_\_\_\_\_  
\_\_\_\_\_

Did the installation go well?                      Yes                      No

Please provide comments

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Please draw diagrams if you need to.

**Post to**  
Reply Paid 122  
PO Box 122  
Margate QLD 4019

**Fax to**  
(07) 3283 1168



WORLD'S BEST  
ALLOY BULLBARS

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St  
Clontarf QLD 4019  
Australia

Po Box 122  
Margate QLD 4019  
Australia

# DESPATCH CHECKLIST

## MT185SY / NB6T185SY/ NBT185SY

Work Order #		<b>See other side of this page for photos of all mounts</b>
Finish:		
Transport:		
Due Date:		

OC.....1 – pair Steel mounting brackets.

BK.....1 – Bolt Kit.

\_\_\_\_\_/\_\_\_\_\_  
Wrapper's initials / Checker initials



**Is this product “the best it can be” Yes**  
If **NO** fix before continuing

All parts checked and completed by:

Nut and bolts: \_\_\_\_\_ Date \_\_/\_\_/\_\_

Order control: \_\_\_\_\_ Date \_\_/\_\_/\_\_

Final wrap check: \_\_\_\_\_ Date \_\_/\_\_/\_\_



WORLD'S BEST  
ALLOY BULLBARS

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St  
Clontarf QLD 4019  
Australia

Po Box 122  
Margate QLD 4019  
Australia



\_\_\_\_\_/\_\_\_\_\_  
Wrapper's initials / Checker initials