


BULLBAR FITTING INSTRUCTIONS
TO SUIT: Volkswagen Crafter 2007 - 2015
2EF1, 2EF2, 2EX2 & 2FM2
PART NUMBER: NBVW0001SY

Step 1.
Park the vehicle on level ground and apply the park brake.
Check installation hardware and read fitting instructions before commencing.



Step 2.
Remove two T45 Torx head screws from step area of bumper.

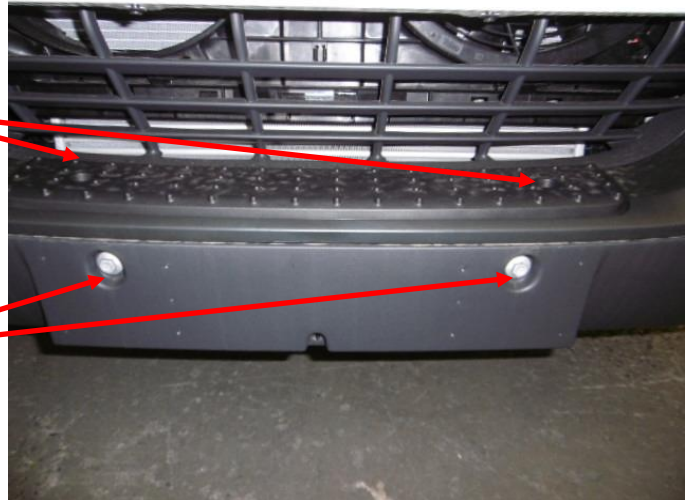

Remove two 13mm head bolts from front of number plate area of bumper

Step 3.

Place mount onto step area of bumper. Install four M10 x 1.5 x 40 bolts, spring washers and flat washers into captive nuts.



Step 4.

Install Nudge bar onto steel mount using four ½ x 1 ½ bolts, flat washers and nyloc nuts.

Align Nudge bar to front of vehicle and tighten.



Fitting kit

- 1 – Steel Mount Assembly
- 4 – M10 x 1.5 x 40 bolts
- 4 – M10 large flat washers
- 4 – M10 spring washers
- 4 – ½ x 1 ½ bolts
- 8 – ½ flat washers
- 4 – ½ Nyloc nuts

DESPATCH CHECKLIST NBVW0001SY

VW Crafter 2007 – 2015

2EF1, 2EF2, 2EX2 & 2FM2

Work Order #	
Finish:	
Transport:	
Due Date:	

OC.....1 – Chassis mount assembly.

BK.....1 – Bolt kit.

_____ / _____

Wrapper's initials / Checker initials

See other side of this page for photos of all mounts



Is this product “the best it can be” Yes

If NO fix before continuing

All parts checked and completed by:

Nut and bolts: _____ Date __/__/__

Order control: _____ Date __/__/__

Final wrap check: _____ Date __/__/__

Chassis mount assembly



_____/_____
/

Wrapper's initials / Checker initials