



**WORLD'S BEST  
ALLOY BULLBARS**

***Lighter  
Stronger  
Better!***

**Strongest Built  
Australian Made  
Lifetime Warranty**

**PN:EAN71SY**



# **Fitting Guide & Owners Manual**

## **NISSAN PATROL Y62 Series 5 Ti & Ti-L 08-2019 on**

BIG TUBE BAR WITH BUMPER LIGHTS  
VEHICLE FRONTAL PROTECTION SYSTEM (VFPS)  
FOR AIR BAG & ADR COMPLIANT VEHICLES



**SUPERCARS**  
**OFFICIAL BULLBAR**  
**OF SUPERCARS**

# Index

---

## **Pages 3-5**

ECB's Benefits  
Product Care

## **Pages 6-7**

Stage 1 - Vehicle testing and preparation  
Stage 2 - Radiator Trim  
Stage 3 - Grille removal  
Stage 4 to 5 - Bumper removal  
Stage 6 - Chassis Preparation

## **Pages 8-9**

Stage 7 - Steel mount installation  
Stage 8 - Sensor relocation  
Stage 9 - Camera relocation  
Stage 10 - Sonar unit relocation  
Stage 11 - Indicator/ Park Installation  
Stage 12 - Clip lock trim fitment

## **Pages 10-11**

Stage 13 - Indicator Wiring  
Stage 14 - Bumper marking  
Stage 15 - Bumper cut  
Stage 16 to 17 - Headlight under guards  
Stage 18 - Refit Bumper

## **Pages 12-13**

Stage 19 - Fit Protection Bar  
Stage 20 - Center under body guard  
Stage 21 - Fog light installation  
Stage 22 - Connect, check and test  
Final Checks

## **Pages 14-15**

Installation kit  
Finished Product

## **Pages 16-17**


Warranty Registration

## **Pages 18-19**


Notes

# The Features of ECB

---

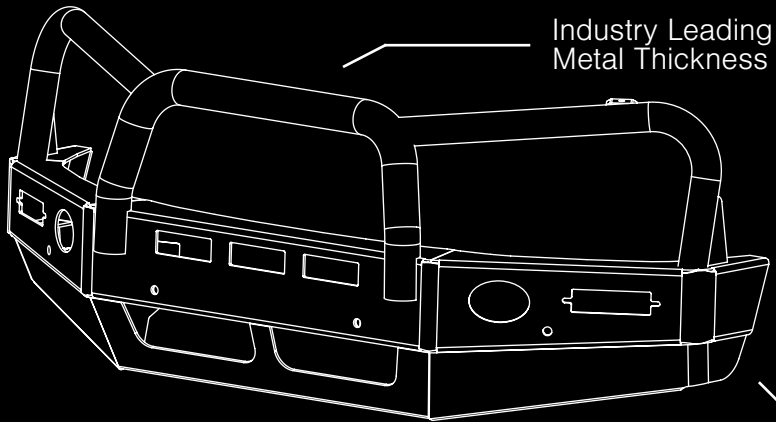

Industry Leading  
Metal Thickness

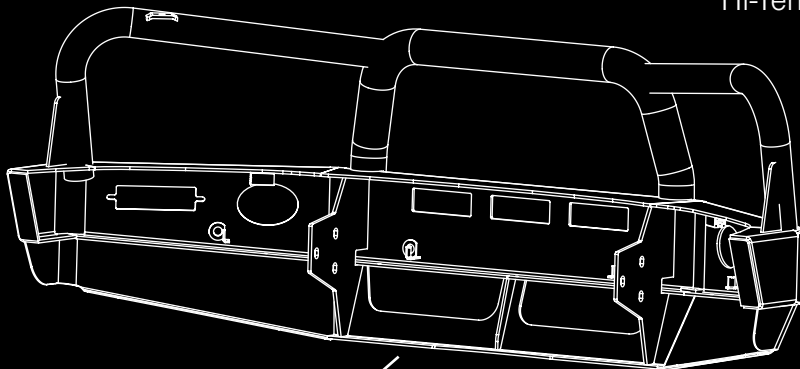

6mm Thick  
Hi-Tensile Alloy

Unmatched  
Strength

Fully Welded  
Construction

# ECB's Benefits

---

## **Built to Perform - Not to a Price**

ECB are proud to claim that their channels are not jigsaw puzzles that are bolted together, or even multiple sections welded together. Where any welding is required, it is done to the highest standards by qualified welders, not machines.

## **Anti-Corrosive Nature of Alloy**

The composition of ECB's alloy has a very high resistance to corrosion. Rust not only looks unappealing but greatly reduces the strength of the metal. Rust can and will weaken the structural integrity of a steel bullbar effectively rendering it useless over time.

## **Australian Made**

Established in 1971, we utilise over 46 years of experience designing, engineering and building products in Australia to suit Australian conditions. We can ensure the best quality controls and help support the local economy and employ over 90 proud Australians.

## **Weight Saving Benefits**

An ECB alloy bullbar is typically half the weight of a steel bullbar. Unnecessary suspension upgrades are not required. The reduced weight also contributes to increased fuel economy and less wear and tear on tyres, suspension and braking components.

## **Welds That Work**

ECB uses only the strongest welds and welding techniques to ensure every product is as structurally sound as possible. MIG (Metal Inert Gas) welding techniques are employed ensuring the welds are as thick as the thickest section of alloy's being joined together.

## **Lifetime Warranty**

ECB provide a lifetime warranty and consumer guarantee on all of our manufactured products. This guarantee highlights the confidence in our ability and provides complete peace of mind for your purchase for the lifetime you own your vehicle.

# Product Care

---

## Polished Products

Being a premium mirror polished finish, regular maintenance will be required to keep that iconic ECB shine. We recommend using our own brand of Aluminium Polish. This formula has been tried and tested and in our opinion is the world's best standard.

**Directions:** Apply a small quantity of Aluminium Polish to a clean soft cloth and rub the metal surface. The longer the rubbing the brighter the surface becomes. Wipe off Aluminium Polish with clean soft cloth. Also suitable for motorised buffing machines.

**Note:** There are more specific details on the polish bottle. Please read before use.

## Powdercoated Products

Our powdercoated finishes are very low maintenance. Infact there is actually very little you will ever need to do for this product. Just clean it as you would your car and it will stay looking good as new.

## ECB Aluminium Polish

When you're looking for that showroom finish look for your polished automotive products, you can depend on the no compromise quality of East Coast Bullbars Aluminium Polish. This specifically designed product is the best polish available and we guarantee that this \$#!+ works. With over 40 years of manufacturing polished alloy products we have trialled a large range of different polishes on the market and believe without a doubt that nothing beats the finish quality of East Coast Bullbars Aluminium Polish.

East Coast Bullbars Aluminium Polish is excellent for use by hand and is ideal for polished bullbars, nudge bar and stainless steel products. This polish will clean, polish and protect your product from the elements whilst bringing your products back to that showroom finish look.



# NISSAN PATROL Y62 SERIES 5 Ti/Ti-L 8/19on

## Stage 1

- Test drive vehicle to ensure all driver assists are correctly working and to gauge effectiveness. Park on a flat level surface.
- Apply parking brake and lift bonnet.
- Unwrap ECB Protection bar and disconnect mounts. Discard bolts.
- Ensure these instructions are left with the vehicle owner and/or operator.



## Stage 2

- Remove fifteen(15) push/pull clips from top radiator trim
- Remove trim.



## Stage 3

- Unplug camera from back of badge.
- Remove grille by carefully prising top clip while pulling forward to unclip sides.
- Pull forward on bottom of grille to release from bumper.
- Remove grille.



## Stage 4

- Remove eight (8) push/pull clips from top of bumper between headlights.
- Remove three (3) 10mm head bolts from front underside of guard liner (per/side).
- Remove one (1) 10mm head bolt from rear wing to guard (per/side).
- Remove two (2) 10mm head bolts from bumper to light panel (per/side).



## Stage 5

- Remove four (4) 13mm head bolts from under side of bumper.
- Unplug wiring harness from drivers side headlight panel.
- Unplug washer line from drivers side washer line joiner.
- To remove bumper, pull sides of bumper out from vehicle, then forward to unclip from guard and headlight clips.



## Stage 6

- Remove four (4) 16mm head nuts from end of chassis rail (per/side) and remove bumper support.
- Remove two (2) 18mm head bolts from stoppers on lower tie bar rail (per/side) and remove stoppers.
- Remove lower air dams by removing four (4) push/pull clips (per/side).
- Remove plates from lower tie bar rail three (3) 13 mm head bolts (per/side).



# NISSAN PATROL Y62 SERIES 5 Ti/Ti-L 8/19on

## Stage 7

- Fit ECB steel mounting bracket (supplied) onto end of chassis rail and fix with original nuts.
- Fit two (2) M12 x 40 x 1.25 bolts, spring washers and flat washers (supplied) in lower tie bar rail (per/side). Should you vehicle have a gap between the lower section of the mount and the chassis, insert 3mm spacer (supplied)
- Align and centralise mounts to body. **Tighten all bolts** except outer M12 bolts on outdie of underside. These will need to be removed in step 21.



## Stage 8

- Remove bumper sensors from bumper and relocate into ECB sensor housing in protection bar. Secure wiring harness to lower edge of channel using zip ties (supplied) to minimise movement.



## Stage 9

- Remove camera from rear of grille and relocate into ECB protection bar with original equipment screws.





## Stage 10

- Remove sonar unit from vehicle and relocate it onto ECB sonar mount with clear perspex cover plate (supplied) in front of unit, use M6 x 50mm bolts, flat washers and nyloc nuts (supplied).




## Stage 11

- Fit ECB LED indicator / park lights into protection bar as per instructions supplied with the LED indicator kit. NOTE: Ensure park light is to top.



## Stage 12

- Attach 6mm clip lock trim (supplied) to top of ECB protection bar. NOTE: Trim off lower edge on an angle so trim will sit flush with end of protection bar.

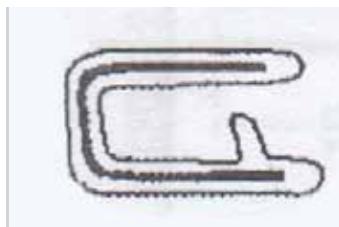

# NISSAN PATROL Y62 SERIES 5 Ti/Ti-L 8/19on

## Stage 13

- Splice ECB indicator / DRL / park light wiring harness into indicator / park light harness on vehicle using cable locks (supplied). Ensure harness is clear of sharp edges and moving parts.
- Connect ECB Quick Click fog light wiring harness (supplied) into original wiring harness.



Pin	Color	Outer Size	Use
1	Blue	2mm	Park light
2	Orange	2mm	DRL
3	Black	2mm	Earth
4	Green	2mm	Indicator

## Stage 14

- Using paper masking tape, mask area to be cut to avoid damage.
- As printers vary, check measure template to ensure correct sizing.
- Carefully cut out template using sharp scissors.
- Mark and neatly cut bumper using jigsaw, hack saw or similar.



**CAUTION:** Double check all marked lines before trimming.

## Stage 15

- Trim bumper cut line with 3mm clip lock (supplied).



## Stage 16

- Fit under headlight guard (supplied) to guard stay with two (2) M6 x 30mm bolts, flat washers and nyloc nuts (supplied) (per/side).
- Fix one (1) self-drilling screw (supplied) into lower headlight panel.
- **CAUTION:** Outside M6 bolt has to be fitted this direction to not affect liner fitment.



## Stage 17

- Mark and trim guard liner excess.
- Fix liner to tab with M6 x 25mm bolt, flat washers and nyloc nut (supplied) (per/side).



## Stage 18

- Refit bumper in the reverse of steps 2 to 5.



# NISSAN PATROL Y62 SERIES 5 Ti/Ti-L 8/19on

## Stage 19

- Fit ECB protection bar onto steel mounting bracket and attach with three (3) M12 x 1.25 x 40mm bolts, flat washers, spring washers and nuts (supplied) (per/side).



## Stage 21

- Remove M12 bolt previously installed in lower steel mounting bracket.
- Install centre underbelly guard (supplied) to protection bar using four (4) M6 x 25 bolts, flat washers and nyloc nuts (supplied).
- On rear of underbelly guard install removed M12 bolts, spring washers and flat washers, and one (1) M8 x 1.25 x 40mm bolts, spring washers, flat washers and spacer washer (supplied) between underbelly and tie bar.



NOTE: original bolts used for photos on development vehicle are replaced with M12 bolts (supplied)

## Stage 21

- Attach ECB fog lights to protection bar. Place M6 x 20 bolts, spring washers (supplied) through light mount from inside and attach nut to top. Slide assembly into light mount in Protection bar and centralize light to hole. TIGHTEN FIRM ONLY.
- Install fog light surrounds (supplied) to fog light openings with large side of surround to inside of opening.



## **Stage 22**

- Connect indicator/DRL/Park lights, fog lights, camera, sonar and parking sensors. Check for correct operation.
- Test drive vehicle to ensure parking sensors and driver aids are working correctly.

# **Final Checks**

---

## **Ensure Number Plate is Clearly Visible**

Note: When fitting/refitting the licence plate to the vehicle, ensure there is no obstruction to licence plate vision in accordance with local authorities. If required relocate licence plate to an alternate location.

## **Further VFPS Notes**

1. Do not attach VFPS to the vehicle using anchorages not intended for this purpose (e.g. engine mounting bolts).
2. Do not use this product for any vehicle make or model, other than those specified by the VFPS manufacturer.
3. Do not remove the plaque or label from the VFPS.
4. Do not modify the structure of the VFPS in any way.
5. No accessory or fitment should project forward of the VFPS forward profile.
6. **Ensure these instructions are left with the vehicle owner and/or operator.**

## **Important Information**

Periodically check bolts and nuts for correct tightness, especially if traveling on rough roads.

# Installation Kit

---

1 - ECB Steel mounting bracket	2 - M6 x 20mm bolts
2 - 3mm spacer plates	30 - M6 flat washers
2 - Headlight under guards	2 - M6 spring washers
1 - Center underbelly guard	8 - M6 nuts
2 - 35 x 10 x 10mm alloy flat washers	12 - M6 nyloc nuts
10 - M12 x 1.25 x 40mm bolts	2 - 8g x 18 x 12 self drilling screws
16 - M12 flat washers	1 - Sonar unit perspex cover
10 - M12 spring washers	1 - ECB Indicator / DRL / Park Light Kit
6 - M12 x 1.25 nuts	8 - Cable locks
1 - M8 x 1.25 x 40mm bolts	1 - ECB Fog light kit
1 - 5/16 x 1 x 16 flat washers	1 - Quick click kit (IC10D40S1004ECBH)
1 - M8 spring washers	2 - Fog light surrounds
3 - M6 x 50mm bolts	1 - 2800mm length 6mm clip lock trim
4 - M6 x 30mm bolts	2 - 350mm lengths 3mm clip lock trim
5 - M6 x 25mm bolts	10 - 150mm Zip ties

# Finished Product

---



# Warranty Registration

---

## Contact Details

Name: \_\_\_\_\_

Address: \_\_\_\_\_

Product: **EAN71SY** \_\_\_\_\_

Email: \_\_\_\_\_

Phone: \_\_\_\_\_

Work Order Number: \_\_\_\_\_

You can find this on the silver label  
of your ECB product.

By submitting this registration you automatically subscribe to ECB's mail outs. You  
can unsubscribe at any time.

## Register Online

For online registration please go online to [www.ecb.com.au/warranty-registration](http://www.ecb.com.au/warranty-registration)  
If you have any questions please contact our national office on 1800 069 145 or  
[www.ecb.com.au](http://www.ecb.com.au).






**PN: EAN71SY**  
**Or post to: PO Box 122,**  
**Margate QLD 4019**

\_\_\_\_\_

This image shows a single sheet of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page. There are approximately 20 lines visible. The paper has a slight shadow on the right side, suggesting it's resting on a surface.



REPLACES: N/A  
REVISED: 5.02.20

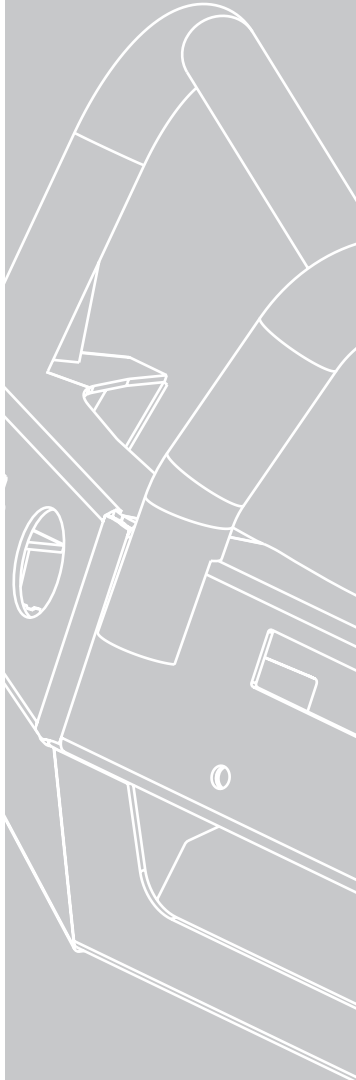

1800 069 145  
[www.ecb.com.au](http://www.ecb.com.au)

# **Strongest Built Australian Made Lifetime Warranty**

29 Snook St, Clontarf QLD 4019  
PO Box 122, Margate QLD 4019