



**Lighter
Stronger
Better!**

**Strongest Built
Australian Made
Lifetime Warranty**

NB6K07SY/NBK07SY



Fitting Guide & Owners Manual

**Kia Sportage
07/19 On**

63mm Series 2 Nudge Bar and 76mm Nudge Bar
VEHICLE FRONTAL PROTECTION SYSTEM (VFPS)
FOR AIR BAG & ADR COMPLIANT VEHICLES



Index

Pages 3-5

ECB's Benefits

Product Care

Pages 6-7

WARNING

Stage 1 - Vehicle Testing and Preparation

Stage 2 - Remove Grille

Stage 3 - Underbody Guard

Pages 8-10

Stage 4 - Wheel Arch

Stage 5 - Remove Bumper

Stage 6 - Trim Air Dam

Stage 7 - Steel mounting bracket installation

Stage 8 - Parking Sensors

Stage 9 - Sensor Harness

Pages 11-12

Stage 10 - Trim Grille

Stage 11 - Refit Bumper

Stage 12 - Fit Protection Bar

Stage 13 - Sensor Check

Final Checks & Fitting Kit

Pages 13-14



Finished Product

Warranty Registration

Pages 15-16

Notes

The Features of ECB

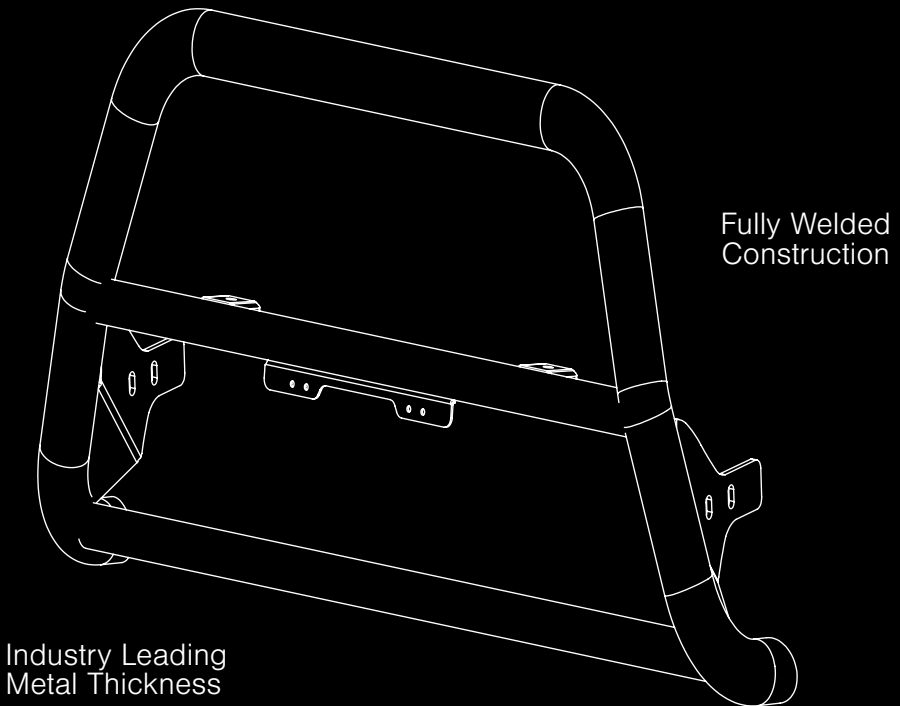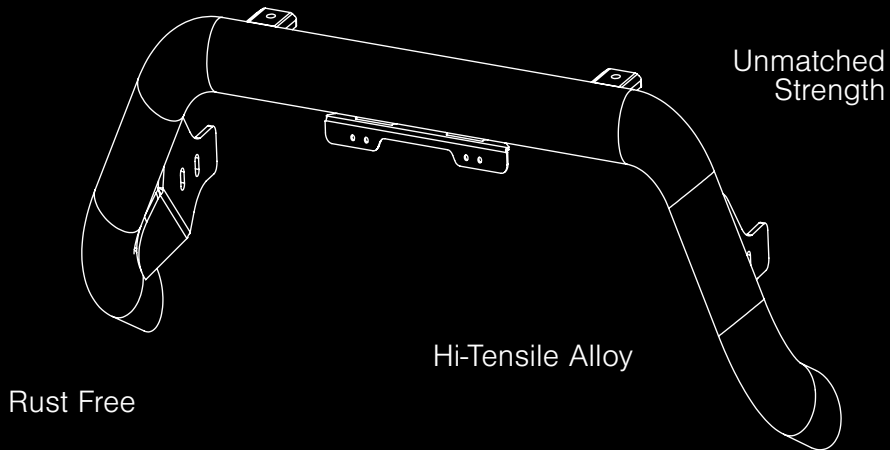

ECB's Benefits

Built to Perform - Not to a Price

ECB are proud to claim that their channels are not jigsaw puzzles that are bolted together, or even multiple sections welded together. Where any welding is required, it is done to the highest standards by qualified welders, not machines.

Anti-Corrosive Nature of Alloy

The composition of ECB's alloy has a very high resistance to corrosion. Rust not only looks unappealing but greatly reduces the strength of the metal. Rust can and will weaken the structural integrity of a steel bullbar effectively rendering it useless over time.

Australian Made

Established in 1971, we utilise over 46 years of experience designing, engineering and building products in Australia to suit Australian conditions. We can ensure the best quality controls and help support the local economy and employ over 90 proud Australians.

Weight Saving Benefits

An ECB alloy bullbar is typically half the weight of a steel bullbar. Unnecessary suspension upgrades are not required. The reduced weight also contributes to increased fuel economy and less wear and tear on tyres, suspension and braking components.

Welds That Work

ECB uses only the strongest welds and welding techniques to ensure every product is as structurally sound as possible. MIG (Metal Inert Gas) welding techniques are employed ensuring the welds are as thick as the thickest section of alloy's being joined together.

Lifetime Warranty

ECB provide a lifetime warranty and consumer guarantee on all of our manufactured products. This guarantee highlights the confidence in our ability and provides complete peace of mind for your purchase for the lifetime you own your vehicle.

Product Care

Polished Products

Being a premium mirror polished finish, regular maintenance will be required to keep that iconic ECB shine. We recommend using our own brand of Aluminium Polish. This formula has been tried and tested and in our opinion is the world's best standard.

Directions: Apply a small quantity of Aluminium Polish to a clean soft cloth and rub the metal surface. The longer the rubbing the brighter the surface becomes. Wipe off Aluminium Polish with clean soft cloth. Also suitable for motorised buffing machines.

Note: There are more specific details on the polish bottle. Please read before use.

Powdercoated Products

Our powdercoated finishes are very low maintenance. Infact there is actually very little you will ever need to do for this product. Just clean it as you would your car and it will stay looking good as new.

ECB Aluminium Polish

When you're looking for that showroom finish look for your polished automotive products, you can depend on the no compromise quality of East Coast Bullbars Aluminium Polish. This specifically designed product is the best polish available and we guarantee that this \$#!+ works. With over 40 years of manufacturing polished alloy products we have trialled a large range of different polishes on the market and believe without a doubt that nothing beats the finish quality of East Coast Bullbars Aluminium Polish.

East Coast Bullbars Aluminium Polish is excellent for use by hand and is ideal for polished bullbars, nudge bar and stainless steel products. This polish will clean, polish and protect your product from the elements whilst bringing your products back to that showroom finish look.



WARNING

EXTREME

CAUTION MUST

BE USED WHEN

REMOVING

BUMPER FROM

THIS VEHICLE.SEE

INSTRUCTIONS.

CAUTION

NBK07SY, NB6K07SY

Stage 1

- Test drive vehicle to ensure all driver assists are correctly working and to gauge effectiveness. Park on a flat level surface.
- Apply parking brake and lift bonnet.
- Unwrap ECB Protection bar and disconnect mounts. Discard bolts.
- Ensure these instructions are left with the vehicle owner and/or operator.



Stage 2

- Remove two (2) 10mm head bolts and four (4) push pull clips from the top of grille.



Stage 3

- Remove underbody guard, four (4) 10mm head bolts and two (2) push pull clips.



Kia Sportage 10/18 on

Stage 4

- Remove one (1) 10mm head bolt and four (4) push pull clips per side in wheel arch.
- Disconnect fog lights per side and parking sensor harness on drivers side.



Stage 5

- CAUTION CARE NEEDS TO BE TAKEN WHEN UNCLIPPING BUMPER FROM GUARD TO AVOID TEARING AT BUMPER MOUNTING.
- Gently pull wing of bumper away from guard, small screw driver maybe needed to unclip to avoid tearing bumper skin from mount.
- Remove bumper.



Stage 6

- Remove three (3) 10mm head bolts retaining the plastic air dam located below the radiator.
- Trim the upper section of the air dam away to allow clearance for the mount. Measure 70mm from the top.



NBK07SY, NB6K07SY

Stage 7

- Place the steel mounting brackets supplied onto front of impact member and lightly fasten using M10 x 1.5 x 70mm bolts, flat washers, spring washers and M10 x 1.5 nuts (supplied) from the rear chassis mount backing plates.
- Align mounts with measurement from the Protection Bar and **tighten all bolts.**
- **BOLT HEADS MUST BE AT THE RADIATOR SIDE OF THE MOUNTS.**



Stage 8

Remove two (2) centre sensors from bumper.

- Place sensors into protection bar and secure with cable ties (supplied).
- NOTE DO NOT OVER TIGHTEN CABLE TIES , AS SENSORS MAY GIVE FALSE READINGS.



Stage 9

- Release clips in bumper for parking sensor harness to extend. Bring harness through grille so it can be connected to sensors .
- Use cable ties (supplied) to secure sonar harness.



Kia Sportage 10/18 on

Stage 10

- Measure mounts and transfer to bumper grille. Check grille against mounts to ensure correct trim area.
- Tape area to be trimmed to avoid any damage to bumper.
- Carefully trim lower grill to allow steel mounts can protrude through.



Stage 11

- Refit bumper in reverse of steps 2 to 4.



Stage 12

- Fit protection bar to steel mounts using M10 x 1.5 x 40mm bolts, flat washers, spring washers and M10 x 1.5 nuts (supplied).
- **Finger tighten only.**



NBK07SY, NB6K07SY

Stage 13

- Align protection bar with vehicle and **tighten bolts.**
- Connect sensors



Stage 14

- Test drive vehicle to ensure driver aids are correctly functioning. Check operation of sensors.
 - NOTE: Sensors may go off when driving off driveways. This happens when the sensor picks up the road surface.
-

Final Checks & Installation Kit

Ensure Number Plate is Clearly Visible

Note: When fitting/refitting the licence plate to the vehicle, ensure there is no obstruction to licence plate vision in accordance with local authorities. If required relocate licence plate to an alternate location.

Further VFPS Notes

- 1. Do not attach VFPS to the vehicle using anchorages not intended for this purpose (e.g. engine mounting bolts).
- 2. Do not use this product for any vehicle make or model, other than those specified by the VFPS manufacturer.
- 3. Do not remove the plaque or label from the VFPS.
- 4. Do not modify the structure of the VFPS in any way.
- 5. No accessory or fitment should project forward of the VFPS forward profile.
- 6. **Ensure these instructions are left with the vehicle owner and/or operator.**

Installation Kit

1 - Pair steel mounting brackets	24 - M10 Flat washers
4 - Chassis mounting backing plates (NBHU100SY_C6MS)	12 - M10 Spring washers
8 - M10 x 1.5 x 70mm bolts	12 - M10 x 1.5 nuts
4 - M10 x 1.5 x 40mm bolts	4 - 150mm Zip ties

Finished Product



Warranty Registration

Contact Details

Name: _____

Address: _____

Product: _____

Email: _____

Phone: _____

Work Order Number: _____

You can find this on the silver label
of your ECB product.

By submitting this registration you automatically subscribe to ECB's mail outs.
You can unsubscribe at any time.


Or Register Online

For online registration please go online to www.ecb.com.au/TBC. If you have any questions please contact our national office on 1800 069 145 or www.ecb.com.au.



PN: NB6K07SY / NBK07SY
Please post to: PO Box 122,
Margate QLD 4019

REPLACES: N/A
REVISED: 14.11.19

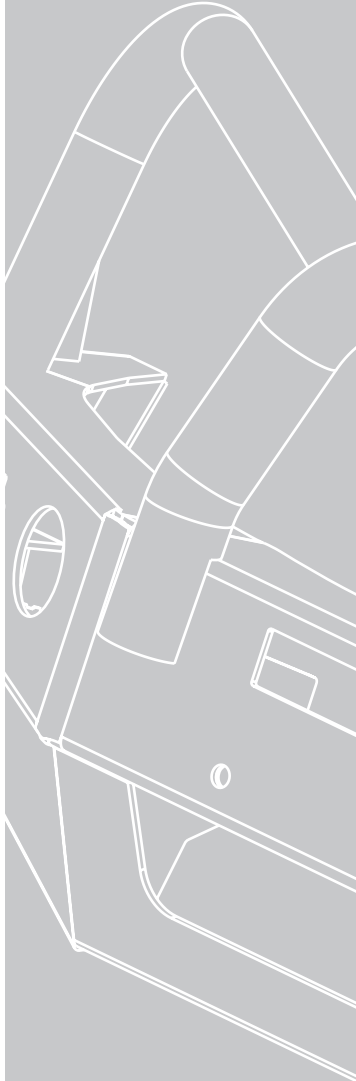

1800 069 145
www.ecb.com.au

Strongest Built Australian Made Lifetime Warranty

29 Snook St, Clontarf QLD 4019
PO Box 122, Margate QLD 4019