

Strongest Built Australian Made Lifetime Warranty

SUPERCARS australia **OF SUPERCARS**

PN: MHU72SY, NBHU72SY





Fitting Guide & Owners Manual

Hyundai i-Load 03/2018 on

Midi Tube and 76mm Nudge Bar VEHICLE FRONTAL PROTECTION SYSTEM (VFPS) FOR AIR BAG & ADR COMPLIANT VEHICLES

Index

Pages 3-5

ECB's Benefits Product Care

Pages 6-7

Stage 1 - Vehicle preparation

Stage 2 to 3 - Underbelly guard removal

Stage 4 - Chassis preparation

Stage 5 - Steel mount fitment

Stage 6 - Protection Bar installation

Pages 8-9

Stage 7 to 8 - Protection Bar Alignment Stage 9 - Underbelly guard refitment

Pages 10-11

Final Checks & Fitting Kit Finished Product


Pages 12-13

Current Promo - TBC Warranty Registration

Pages 14-15

Notes

The Features of ECB

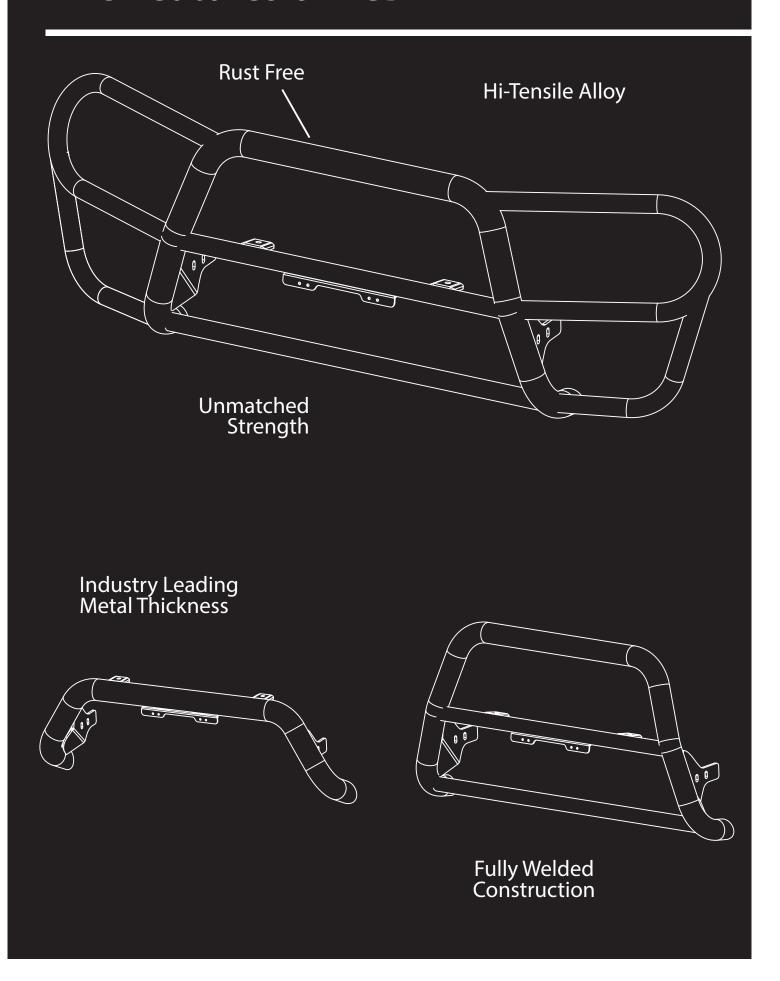

ECB's Benefits

Built to Perform - Not to a Price

ECB are proud to claim that their channels are not jigsaw puzzles that are bolted together, or even multiple sections welded together. Where any welding is required, it is done to the highest standards by qualified welders, not machines.

Anti-Corrosive Nature of Alloy

The composition of ECB's alloy has a very high resistance to corrosion. Rust not only looks unappealing but greatly reduces the strength of the metal. Rust can and will weaken the structural integrity of a steel bullbar effectively rendering it useless over time.

Australian Made

Established in 1971, we utilise over 46 years of experience designing, engineering and building products in Australia to suit Australian conditions. We can ensure the best quality controls and help support the local economy and employ over 90 proud Australians.

Weight Saving Benefits

An ECB alloy bullbar is typically half the weight of a steel bullbar. Unnecessary suspension upgrades are not required. The reduced weight also contributes to increased fuel economy and less wear and tear on tyres, suspension and braking components.

Welds That Work

ECB uses only the strongest welds and welding techniques to ensure every product is as structurally sound as possible. MIG (Metal Insert Gas) welding techniques are employed ensuring the welds are as thick as the thickest section of alloy's being joined together.

Lifetime Warranty

ECB provide a lifetime warranty and consumer guarantee on all of our manufactured products. This guarantee highlights the confidence in our ability and provides complete peace of mind for your purchase for the lifetime you own your vehicle.

Product Care

Polished Products

Being a premium mirror polished finish, regular maintenance will be required to keep that iconic ECB shine. We recommend using our own brand of Aluminium Polish, This formula has been tried and tested and in our opinion is the world's best standard.

Directions: Apply a small quantity of Aluminium Polish to a clean soft cloth and rub the metal surface. The longer the rubbing the brighter the surface becomes. Wipe off Aluminium Polish with clean soft cloth. Also suitable for motorised buffing machines. Note: There are more specific details on the polish bottle. Please read before use.

Powdercoated Products

Our powdercoated finishes are very low maintenance, Infact there is actually very little you will ever need to do for this product. Just clean it as you would your car and it will stay looking good as new.

ECB Aluminium Polish

When you're looking for that showroom finish look for your polished automotive products, you can depend on the no compromise quality of East Coast Bullbars Aluminium Polish. This specifically designed product is the best polish available and we guarantee that this \$#!+ works. With over 40 years of manufacturing polished alloy products we have trialled a large range of different polishes on the market and believe without a doubt that nothing beats the finish quality of East Coast Bullbars Aluminium Polish.

East Coast Bullbars Aluminium Polish is excellent for use by hand and is ideal for polished bullbars, nudge bar and stainless steel products. This polish will clean, polish and protect your product from the elements whilst bringing your products back to that showroom finish look.



Midi Tube and 76mm Nudge Bar

Stage 1

- Test drive vehicle to ensure all driver assists are correctly working and to gauge effectiveness. Park on a flat level surface.
- Apply parking brake and lift bonnet.
- Unwrap ECB Protection bar and disconnect mounts. Discard bolts.



Stage 2

 Remove under body guard, eight (8)10mm head bolts.



Stage 3

• Remove two (2) plastic screw clips (per side) from front of inner guard and pull rear ward away from bumper.

Hyundai i-Load 03/2018on

Stage 4

- Using 10mm drill, enlarge four (4) holes where under body guard was removed.
- NOTE: Blow filings clear and treat drilled holes with a rust inhibitor.



Stage 5

- Place M10 x 50 bolts and washer on wire (supplied) through holes in chassis rails. Fit ECB steel mounting brackets to bolts and attach with flat washers, spring washers and nuts (supplied).
- FINGER TIGHTEN ONLY.



Stage 6

- To fit bar, lay bar on soft cloth in from of vehicle with mount side of bar under front of vehicle to outside of steel mounting brackets.
- Attach rear of Bar to steel mounting brackets using M10 x 40bolt, flat washers, spring washers and nuts (supplied). Swing Bar into position and install front M10 x 40 bolts, flat washers, spring washers and nuts (supplied).
- · FINGER TIGHTEN ONLY.



Midi Tube and 76mm Nudge Bar

Stage 7

 Align ECB bar with vehicle and tighten ECB steel mounting brackets to vehicle.



Stage 8

- Check alignment and tighten steel mounting brackets to bar.
- Tighten all bolts.



Stage 9

- Refit inner guards to sit over top of bar.
- Enlarge holes in plastic under body guard to fit over M10 bolts previously installed.
- Refit to vehicle using flat washers and M10 nyloc nuts (supplied) and original bolts in other holes. Caution: Do not over tighten as plastic will split.



Final Checks & Fitting Kit

Ensure Number Plate is Clearly Visable

Note: When fitting/refitting the licence plate to the vehicle, ensure there is no obstruction to licence plate vision in accordance with local authorities. If required relocate licence plate to an alternate location.

Further VFPS Notes

- 1. Do not attach VFPS to the vehicle using anchorages not intended for this purpose (e.g. engine mounting bolts).
- 2. Do not use this product for any vehicle make or model, other than those specified by the VFPS manufacturer.
- 3. Do not remove the plaque or label from the VFPS.
- 4. Do not modify the structure of the VFPS in any way.
- 5. No accessory or fitment should project forward of the VFPS forward profile.
- Insure these instructions are left with the vehicle owner and/or operator.

Important Information

Periodically check bolts and nuts for correct tightness, especially if traveling on rough roads.

Fitting Kit


1 - Pair ECB steel mounting brackets	8 - M10 spring washers
4 - M10 x 1.5 x 50 bolt and washer on 300mm wire	8 - M10 x 1.5 nuts
4 - M10 x 1.5x 40 bolts	4 - M10 x 1.5 Nyloc nuts


16 - M10 flat washers

Finished Product



Current Promo TBC






Warranty Registration

Contact Details
Name:
Address:
Product:
Email:
Phone:
Work Order Number: You Can find this on the silver label of your ECB product.
By submitting this registration you automatically subscribe to ECB's mail outs. You can unsubscribe at any time.




Or Register Online

For online registration please go online to www.ecb.com.au/TBC. If you have any questions please contact our national office on 1800 069 145 or www.ecb.com.au.



Notes	
Full Name	Date

REPLACES: N/A REVISED: 15.08.18

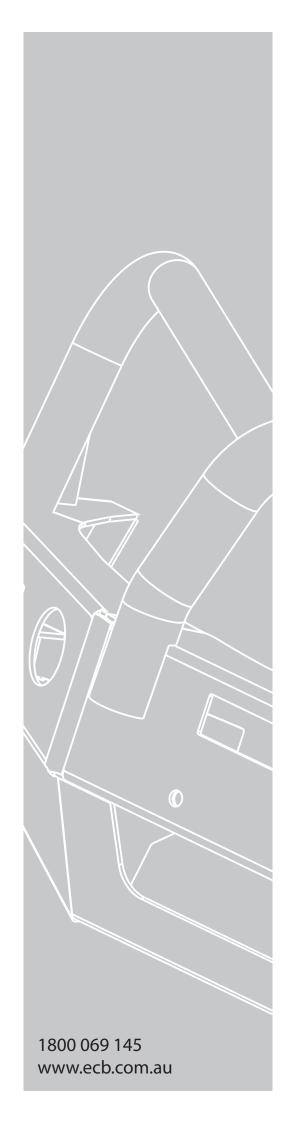

Strongest Built Australian Made Lifetime Warranty

29 Snook St, Clontarf QLD 4019 PO Box 122, Margate QLD 4019