


# Strongest Built Australian Made Lifetime Warranty

PN: NBI60SY

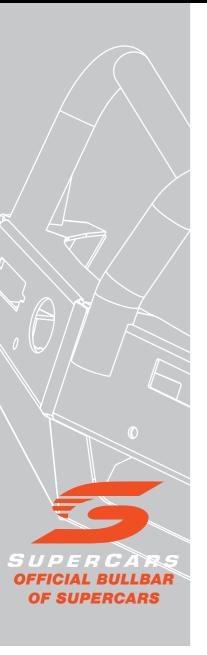



# Fitting Guide & Owners Manual

**IVECO DAILY** 

C50 2WD 01/15on

76mm NUDGE BAR

VEHICLE FRONTAL PROTECTION SYSTEM (VFPS)
FOR AIR BAG & ADR COMPLIANT VEHICLES

# Index

#### Pages 3-5

ECB's Benefits Product Care

#### Pages 6-7

Stage 1 - Vehicle preparation

Stage 2 - Splash guard access

Stage 3 - Steel mounting bracket fitment

Stage 4 - Align steel mounting brackets

Stage 5 - Attach Nudge Bar

Stage 6 - Align Nudge Bar


#### Pages 8-9

Stage 7 - Reattach splash guard Final Checks & Installation Kit

#### Pages 10-11

Finished Product Warranty Registration

# **The Features of ECB**

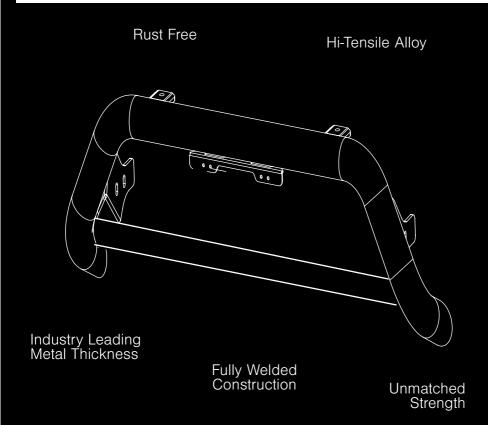

## **ECB's Benefits**

#### **Built to Perform - Not to a Price**

ECB are proud to claim that their channels are not jigsaw puzzles that are bolted together, or even multiple sections welded together. Where any welding is required, it is done to the highest standards by qualified welders, not machines.

#### **Anti-Corrosive Nature of Alloy**

The composition of ECB's alloy has a very high resistance to corrosion. Rust not only looks unappealing but greatly reduces the strength of the metal. Rust can and will weaken the structural integrity of a steel bullbar effectively rendering it useless over time.

#### Australian Made

Established in 1971, we utilise over 46 years of experience designing, engineering and building products in Australia to suit Australian conditions. We can ensure the best quality controls and help support the local economy and employ over 90 proud Australians.

#### **Weight Saving Benefits**

An ECB alloy bullbar is typically half the weight of a steel bullbar. Unnecessary suspension upgrades are not required. The reduced weight also contributes to increased fuel economy and less wear and tear on tyres, suspension and braking components.

#### **Welds That Work**

ECB uses only the strongest welds and welding techniques to ensure every product is as structurally sound as possible. MIG (Metal Inert Gas) welding techniques are employed ensuring the welds are as thick as the thickest section of alloy's being joined together.

#### **Lifetime Warranty**

ECB provide a lifetime warranty and consumer guarantee on all of our manufactured products. This guarantee highlights the confidence in our ability and provides complete peace of mind for your purchase for the lifetime you own your vehicle.

## **Product Care**

#### **Polished Products**

Being a premium mirror polished finish, regular maintenance will be required to keep that iconic ECB shine. We recommend using our own brand of Aluminium Polish. This formula has been tried and tested and in our opinion is the world's best standard.

**Directions:** Apply a small quantity of Aluminium Polish to a clean soft cloth and rub the metal surface. The longer the rubbing the brighter the surface becomes. Wipe off Aluminium Polish with clean soft cloth. Also suitable for motorised buffing machines. **Note: There are more specific details on the polish bottle. Please read before use.** 

#### **Powdercoated Products**

Our powdercoated finishes are very low maintenance. Infact there is actually very little you will ever need to do for this product. Just clean it as you would your car and it will stay looking good as new.

#### **ECB Aluminium Polish**

When you're looking for that showroom finish look for your polished automotive products, you can depend on the no compromise quality of East Coast Bullbars Aluminium Polish. This specifically designed product is the best polish available and we guarantee that this \$#!+ works. With over 40 years of manufacturing polished alloy products we have trialled a large range of different polishes on the market and believe without a doubt that nothing beats the finish quality of East Coast Bullbars Aluminium Polish.

East Coast Bullbars Aluminium Polish is excellent for use by hand and is ideal for polished bullbars, nudge bar and stainless steel products. This polish will clean, polish and protect your product from the elements whilst bringing your products back to that showroom finish look.



#### IVECO DAILY C50 2WD 02/15on

#### Stage 1

- Test drive vehicle to ensure all driver assists are correctly working and to gauge effectiveness. Park on a flat level surface.
- · Apply parking brake and lift bonnet.
- Unwrap ECB Protection bar and disconnect mounts. Discard bolts.
- Ensure these instructions are left with the vehicle owner and/or operator.



#### Stage 2

 Remove the four (4) front bolts retaining the engine splash guard to allow the splash guard to hang for access to the chassis rails.



#### Stage 3

- Position the steel mounting brackets under each chassis rail, align with the holes and insert the M10 x 1.5 x 40mm bolts, flat washers, spring washers and nuts (supplied).
- FINGER TIGTHEN ONLY.



## 76mm Nudge Bar

#### Stage 4

- Align the steel mounting brackets centrally to the vehicle to suit the inside width of the mounting brackets on the Nudge Bar.
- NOTE: This measurement needs to be correct for the tow lug fitment.



#### Stage 5

- Attach the Nudge bar to the steel mounting brackets using the M10 x 1.25 x 40mm bolts, flat washers and spring washers and nuts (supplied) for rear holes.
- Use the M10 x 1.25 x 40mm bolts and washers on wire with flat washers, spring washers and nuts (supplied) for front holes.
- FIGHTER TIGHTEN ONLY.



#### Stage 6

- Align the Nudge Bar with the vehicle ensuring Nudge Bar is as high as possible in the slotted holes.
- TIGHTEN ALL BOLTS



## IVECO DAILY C50 2WD 02/15on

#### Stage 7

• Re-attach the engine splash guard using the original fasteners.



# Final Checks & Installation Kit

#### **Ensure Number Plate is Clearly Visable**

Note: When fitting/refitting the licence plate to the vehicle, ensure there is no obstruction to licence plate vision in accordance with local authorities. If required relocate licence plate to an alternate location.

#### **Further VFPS Notes**

- Do not attach VFPS to the vehicle using anchorages not intended for this purpose (e.g. engine mounting bolts).
- Do not use this product for any vehicle make or model, other than those specified by the VFPS manufacturer.
- 3. Do not remove the plaque or label from the VFPS.
- 4. Do not modify the structure of the VFPS in any way.
- 5. No accessory or fitment should project forward of the VFPS forward profile.
- 6. Ensure these instructions are left with the vehicle owner and/or operator.

#### **Important Information**

Periodically check bolts and nuts for correct tightness, especially if traveling on rough roads.

#### **Installation Kit**

1- Pair Steel Mounting Brackets	10 - M10 spring washers
8 - M10 x 1.25 x 40mm bolts	18 - M10 flat washers
2 - M10 x 1.25 x 40mm bolts/washers on 400mm wire	10 - M10 x 1.25 nuts

# **Finished Product**







# **Warranty Registration**


Name:	
Address:	
Product	: NBI60SY
Email:	
Phone:	
	this on the silver label product.
	this registration you automatically subscribe to ECB's mail outs. 'ribe at any time.
<b>D</b>	ter Online



### **Or Post To**

PO Box 122 Margate QLD 4019

REPLACES: 00.00.00 REVISED: 09.07.20

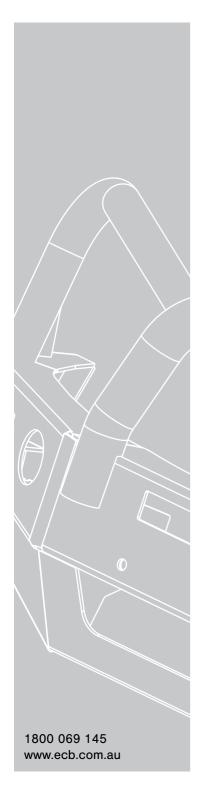

# Strongest Built Australian Made Lifetime Warranty

29 Snook St, Clontarf QLD 4019 PO Box 122, Margate QLD 4019