



**WORLD'S BEST
ALLOY BULLBARS**

**Strongest Built
Australian Made
Lifetime Warranty**

PN: NBT232SY



**Fitting Guide &
Owners Manual
TOYOTA FORTUNER
06/19on**

76mm NUDGE BAR
VEHICLE FRONTAL PROTECTION SYSTEM (VFPS)
FOR AIR BAG & ADR COMPLIANT VEHICLES



Index

Pages 3-5

ECB's Benefits
Product Care

Pages 6-7

Stage 1 - Vehicle preparation
Stage 2 - Lower plastic guard
Stage 3 - Lower bumper trim
Stage 4 - Steel mount fittment
Stage 5 - Trim lower plastic guard
Stage 6 - Fit protection bar

Pages 8-9

Stage 7 - Trim lower bumper trim
Final Checks & Installation Kit
Finished Product

Pages 10-11

Warranty Registration


Pages 12-13

Notes

The Features of ECB

Rust Free

Hi-Tensile Alloy

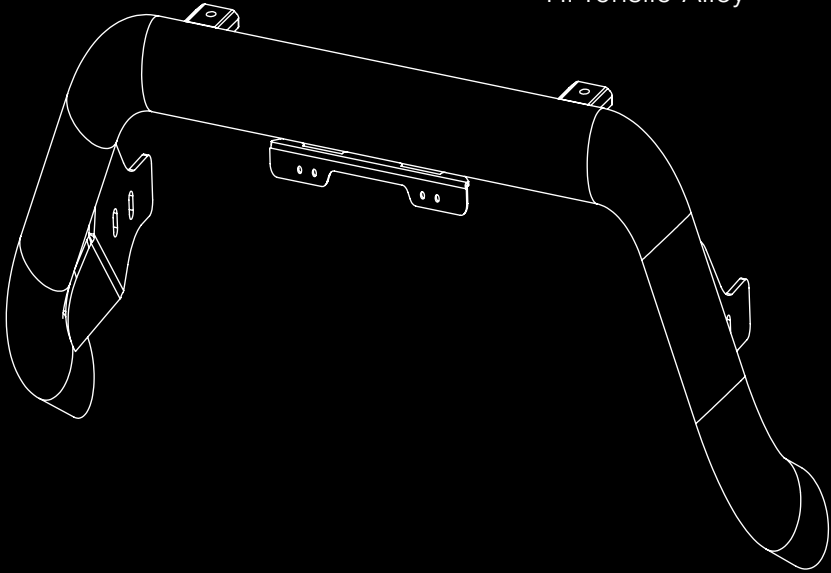

Industry Leading
Metal Thickness

Unmatched
Strength

Fully Welded
Construction

ECB's Benefits

Built to Perform - Not to a Price

ECB are proud to claim that their channels are not jigsaw puzzles that are bolted together, or even multiple sections welded together. Where any welding is required, it is done to the highest standards by qualified welders, not machines.

Anti-Corrosive Nature of Alloy

The composition of ECB's alloy has a very high resistance to corrosion. Rust not only looks unappealing but greatly reduces the strength of the metal. Rust can and will weaken the structural integrity of a steel bullbar effectively rendering it useless over time.

Australian Made

Established in 1971, we utilise decades of experience designing, engineering and building products in Australia to suit Australian conditions. We can ensure the best quality controls and help support the local economy and employ over 90 proud Australians.

Weight Saving Benefits

An ECB alloy bullbar is typically half the weight of a steel bullbar. Unnecessary suspension upgrades are not required. The reduced weight also contributes to increased fuel economy and less wear and tear on tyres, suspension and braking components.

Welds That Work

ECB uses only the strongest welds and welding techniques to ensure every product is as structurally sound as possible. MIG (Metal Inert Gas) welding techniques are employed ensuring the welds are as thick as the thickest section of alloy's being joined together.

Lifetime Warranty

ECB provide a lifetime warranty and consumer guarantee on all of our manufactured products. This guarantee highlights the confidence in our ability and provides complete peace of mind for your purchase for the lifetime you own your vehicle.

Product Care

Polished Products

Being a premium mirror polished finish, regular maintenance will be required to keep that iconic ECB shine. We recommend using our own brand of Aluminium Polish. This formula has been tried and tested and in our opinion is the world's best standard.

Directions: Apply a small quantity of Aluminium Polish to a clean soft cloth and rub the metal surface. The longer the rubbing the brighter the surface becomes. Wipe off Aluminium Polish with clean soft cloth. Also suitable for motorised buffing machines. **Note: There are more specific details on the polish bottle. Please read before use.**

Powdercoated Products

Our powdercoated finishes are very low maintenance. Infact there is actually very little you will ever need to do for this product. Just clean it as you would your car and it will stay looking good as new.

ECB Aluminium Polish

When you're looking for that showroom finish look for your polished automotive products, you can depend on the no compromise quality of East Coast Bullbars Aluminium Polish. This specifically designed product is the best polish available and we guarantee that this \$#!+ works. Within our decades of manufacturing polished alloy products we have trialed a large range of different polishes on the market and believe without a doubt that nothing beats the finish quality of East Coast Bullbars Aluminium Polish.

East Coast Bullbars Aluminium Polish is excellent for use by hand and is ideal for polished bullbars, nudge bar and stainless steel products. This polish will clean, polish and protect your product from the elements whilst bringing your products back to that showroom finish look.



NBT232SY

Stage 1

- Test drive vehicle to ensure all driver assists are correctly working and to gauge effectiveness. Park on a flat level surface.
- Apply parking brake and lift bonnet.
- Unwrap ECB Protection bar and disconnect mounts. Discard bolts.
- Ensure these instructions are left with the vehicle owner / operator.



Stage 2

- Remove lower plastic gaurd from under radiator by removing two (2) 10mm head bolts and five (5) push pull clips.



Stage 3

- Remove front lower bumper trim by rotating clips two (2) per side.



TOYOTA FORTUNER 6-19 ON

Stage 4

- Fit ECB steel mounting bracket (supplied) to outside of chassis rail using one (1) M12 x 1.25 x 30mm bolt, flat washer and spring washer in rear hole and two (2) M10 x 1.5 x 85mm bolt, 53mm tube spacer, two hole steel washer plate, flat washers and nyloc nuts (per side) (supplied).
- Align mounts and tighten all bolts.



Stage 5

- Trim lower plastic to fit around steel mounts.
- Refit plastic guard in reverse as per step two.



Stage 6

- Fit protection bar onto steel mounting brackets using M10 x 1.5 x 40 mm bolts, flat washers, spring washers and nuts (supplied) in rear holes.
- For front holes, use M10 x 1.5 nut and washer on wire (supplied).
- Align protection bar and tighten all bolts.



NBT232SY

Stage 7

- Trim lower bumper trim around bottom of tube.
- Refit using original bolts.



Final Checks

Ensure Number Plate is Clearly Visible

Note: When fitting/refitting the licence plate to the vehicle, ensure there is no obstruction to licence plate vision in accordance with local authorities. If required relocate licence plate to an alternate location.

Further VFPS Notes

1. Do not attach VFPS to the vehicle using anchorages not intended for this purpose (e.g. engine mounting bolts).
2. Do not use this product for any vehicle make or model, other than those specified by the VFPS manufacturer.
3. Do not remove the plaque or label from the VFPS.
4. Do not modify the structure of the VFPS in any way.
5. No accessory or fitment should project forward of the VFPS forward profile.
6. **Ensure these instructions are left with the vehicle owner and/or operator.**

Important Information

Periodically check bolts and nuts for correct tightness, especially if traveling on rough roads.

Installation Kit

1 - Pair ECB steel mounting brackets	4 - M10 x 1.5 x 85mm bolts
2 - 2 Hole steel washer plate (75mm x 31mm, two 11mm holes)	4 - M10 x 1.5 x 40mm bolts
	14 - M10 Flat washers
4 - 10Nb x 53mm spacer tubes	4 - M10 Spring washers
2 - M12 x 1.25 x 30mm bolts	2 - M10 x 1.5 nuts & M10 washer on 300mm wire
2 - M12 flat washers	2 - M10 x 1.5 Nuts
2 - M12 spring washers	4 - M10 x 1.5 Nyloc nuts

Finished Product



Warranty Registration

Contact Details

Name: _____

Address: _____

Product: **NBT232SY** _____

Email: _____

Phone: _____

Work Order Number: _____

You can find this on the silver label
of your ECB product.

By submitting this registration you automatically subscribe to ECB's mail outs. You
can unsubscribe at any time.

Register Online


For online registration please go online to www.ecb.com.au/warranty-registration
If you have any questions please contact our national office on 1800 069 145 or
www.ecb.com.au.

Or Post To:

PO Box 122, Margate, QLD 4019



REPLACES: N/A
REVISED: 20.04.21

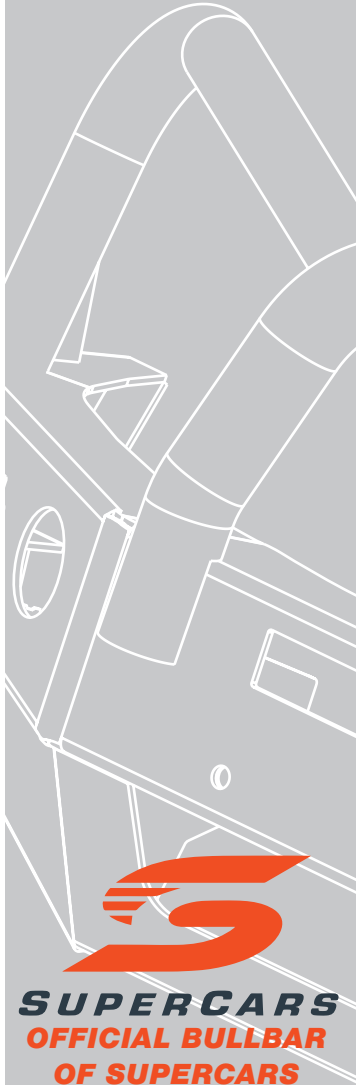

1800 069 145
www.ecb.com.au

Strongest Built Australian Made Lifetime Warranty

29 Snook St, Clontarf QLD 4019
PO Box 122, Margate QLD 4019