
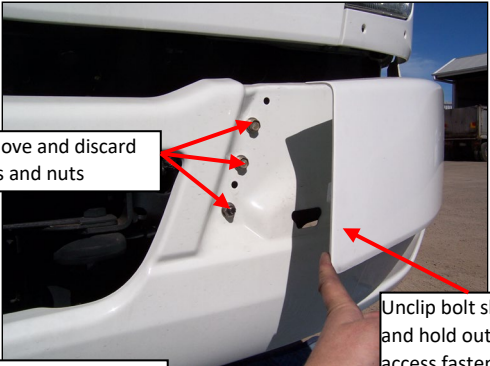
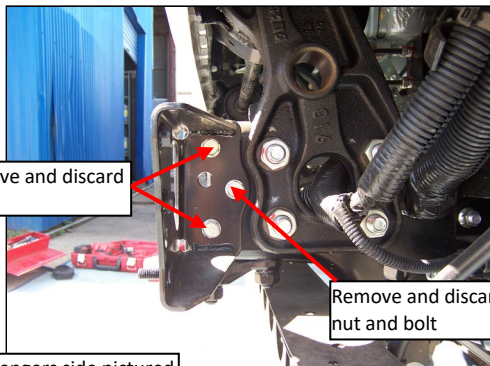
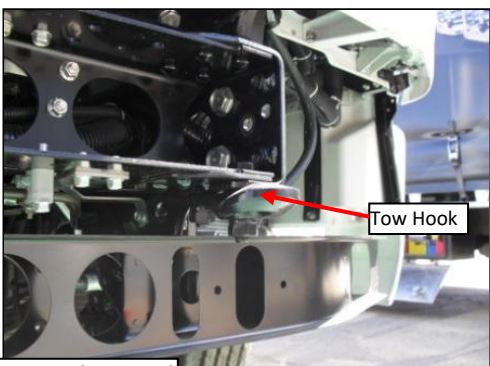
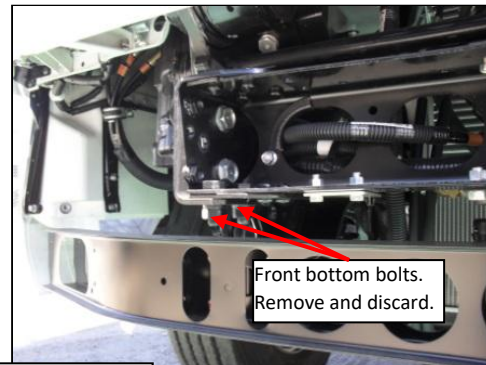


B3FU0033SYF FITTING INSTRUCTIONS FUSO FK-FM 2008-2010 DELUXE 3 BULLBAR

<p>Step1.</p> <ul style="list-style-type: none"> • Park Vehicle on level ground and apply park brake. 	
<p>Step2.</p> <ul style="list-style-type: none"> • Unclip bumper retaining bolt shrouds by pulling forward on inner edge. <p>NOTE: No need to pull shrouds right off, just to be able to access bolts.</p> <ul style="list-style-type: none"> • Remove two (2) bolts per side and one (1) nut per side. Discard nuts and bolts. • Remove and discard bumper. 	 <p>Remove and discard bolts and nuts</p> <p>Unclip bolt shroud and hold out to access fasteners</p> <p>Passengers side pictured</p>
<p>Step 3.</p> <ul style="list-style-type: none"> • Remove bumper mount brackets, two (2) bolts per bracket and one (1) nut and bolt per bracket. • Discard brackets and fasteners. 	 <p>Remove and discard bolts</p> <p>Remove and discard nut and bolt</p> <p>Passengers side pictured</p>
<p>Step 4.</p> <ul style="list-style-type: none"> • Remove tow hook from passengers' side, two (2) bolts, nuts and washers. • Discard tow hook and fasteners. 	 <p>Tow Hook</p> <p>Passengers side pictured</p>

Step 5.

- Remove two (2) front bottom bolts, nuts and washers from driver's side.
- Discard all fasteners.



Drivers side pictured

Step 6.

- Lift bonnet.
- Remove grille, three (3) screws and pull forward to unclip sides.
- Put grille in safe place and retain screws for refitting.



View with bumper removed and bonnet lifted

Step 7.


- Wire in patch harnesses by soldering or using scotch locks provided.

Patch Harness Wire Colour Code

Green → Indicator

Brown → Parker

White → Earth

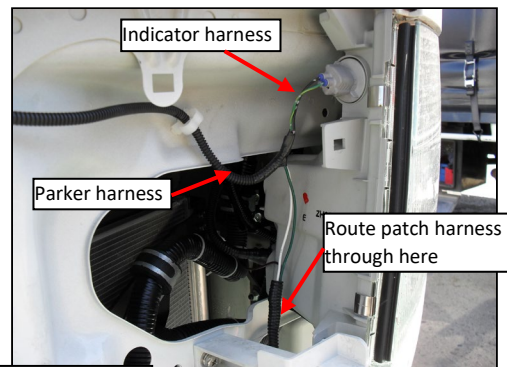

Passengers side pictured

Step 8.


- Route patch harnesses down inner side of headlights.
- Refit grille and close bonnet.



Route harnesses through here

Step 9.


- Remove steel bullbar mount from bullbar and fit to vehicle chassis using two (2) M10 x 1.25 x 35mm bolts, spring washers and flat washers into captive nuts (each side).
- Use one (1) ½ x 1 ½" bolt, flat washers and nyloc nuts in the other holes.
- **Hand tighten only at this stage.**

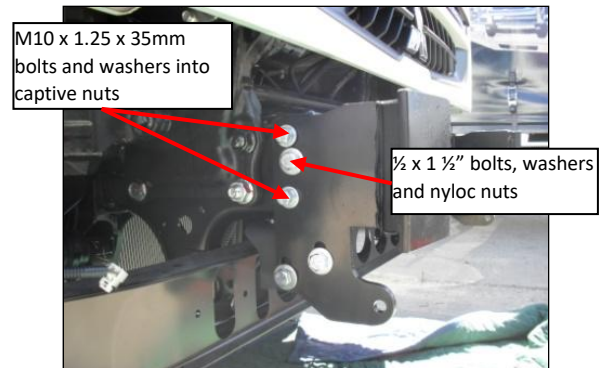

Drivers side pictured

Step 10.

- Fit angle brackets to underside of chassis to align with bottom steel mount holes.
- Secure using two (2) ½ x 2" bolt, flat washers and nyloc nut (each side) through chassis to bracket holes. Use two (2) ½ x 1 ½" bolt, flat washers and nyloc nut (each side) through angle bracket to mount holes.
- **Hand tighten only at this stage.**

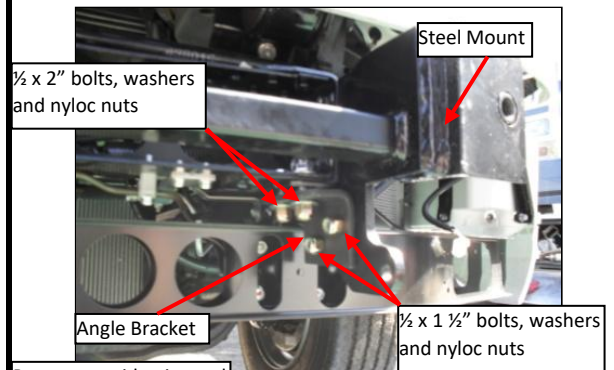

Passengers side pictured

Step 11.

- Fit bullbar to mounting bracket using eye bolts and flat washers. Leave eye bolts loose at this stage.
- Fit hinge bolts through bullbar and mount holes. Tighten hinge bolts so the alloy tabs on the bullbar just start to pull in and the nylon on the nut is engaged. Tighten eye bolts.
- Align bullbar with vehicle and tighten all mount bolts




Step 12.

- Check bullbar tilt.
- Connect parker / indicators in bullbar and ensure there is enough length in the patch harnesses.
- Lock bullbar in place with eye bolts.
- Check parker / indicator for correct operation.



Step 13.

- Fit tilt bullbar warning sticker to passengers' side rear of cabin near tilt lever.

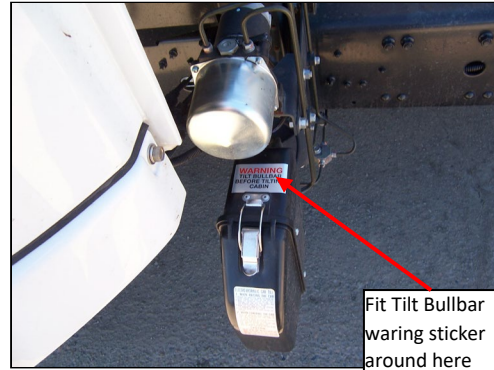

Fitting Kit

4	-	M10 x 1.25 x 35mm Bolts
4	-	M10 Spring washers
4	-	M10 Flat washers
4	-	½ x 2" Bolts
6	-	½ x 1 ½" Bolts
10	-	½" Nyloc nuts
20	-	½" Flat washers
2	-	Patch Harnesses (IHCUSTAL)
6	-	Scotch locks
1	-	Tilt Bullbar warning sticker
2	-	Angle brackets
1	-	Fitting Instructions
Attached to Bullbar		
1	-	Mount Bracket
2	-	9/16 x 2 ½" Bolts.
2	-	9/16" Nyloc nuts
4	-	9/16" Flat washers
2	-	¾" Eye bolts
2	-	¾" Flat washers


DESPATCH CHECKLIST

B3FU0033SYF

FUSO FK-FM 2008-2010

Work Order #		Photo of steel mount on back of page
Finish:		
Transport:		
Due Date:		

OC	_____	1	Steel Mounting Bracket
OC	_____	2	3" Overriders (CA01 Plastic)
OC	_____	2	Custom Alloy Badges – Fitted to Overriders
OC	_____	2	LED Parker Lights (ICLED33INDPRK-95202CUST)
WR	_____	1	Steel Mounting Bracket – Fitted to Bar
WR	_____	2	3" Overriders (CA01 Plastic with CA badges) – Fitted to Bar
WR	_____	2	Eyebolts (3/4" UNC ZP) and Washers – Fitted to Bar
WR	_____	2	2 1/2" x 9/16" UNC Bolt Grade 8H/T – Fitted to Bar
WR	_____	2	9/16" Nyloc Nut – Fitted to Bar
WR	_____	4	9/16" Flat Washer – Fitted to Bar
WR	_____	2	LED Parker Lights (ICLED33INDPRK-95202CUST) – Fitted to Bar
WR	_____	1	Bolt Kit – Taped to Mount

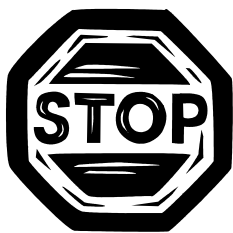

Is this product "the best it can be" Yes _____ / _____
Wrapper's initials / Checker initials

If NO fix before continuing

All parts checked and completed by:

Nut and bolts: _____ Date ___ / ___ / ___

Order control: _____ Date ___ / ___ / ___

Final wrap check: _____ Date ___ / ___ / ___

