



**WORLD'S BEST  
ALLOY BULLBARS**

ecb.com.au

A: 29 Snook St Clontarf QLD 4019

P: PO Box 122 Margate QLD 4019

T: 07 3897 5700

E: info@ecb.com.au

ABN: 25 010 676 034

Part of GUD Holding Limited - ASX: GUD



customalloy.com.au

## B3IS0101SY

### FITTING INSTRUCTIONS

#### FRR/FSR - FY & F3 SERIES 96-05 DELUXE 3 BULLBAR

1. MAKE SURE THAT VEHICLE PARKING BRAKE IS ON BEFORE COMMENCING FITTING
2. Disconnect and remove indicator from bumper (also remove white plastic Grommets for indicator attachment).
3. Remove bumper, drill six (6) bumper holes in chassis to 13mm. Treat all exposed metal with a rust inhibitor.
4. Remove mount from bullbar and fit to chassis rail with eight (8) – 1 ½ x ½ bolt & nyloc. Two (2) flat washers go inside rear holes. Fit bullbar to mount locate eyebolts loosely then fit hinge bolts and tighten, also tighten eyebolt.
5. Align with vehicle tighten highest side, lift other side to equal and tighten.
6. Fit white grommets to indicator tags and fit indicators, lower bulbar on tilt and connect wiring, cable tie Indicator wires to front crossmember. Tilt bulbar back into position and tighten.
7. Fit tilt cab sticker nearest to tilt handle on truck.

<b>Fitting Kit</b>
8 – ½ x 1 ½ bolts
8 – ½ nyloc nuts
10 – ½ HD Flat washers
3 – Cable ties
1 – Tilt warning sticker
<b>Attached to Bullbar</b>
1 – Steel mounting bracket
2 – 9/16 x 2 bolts
2 – 9/16 nyloc nuts
4 – 9/16 flat washers



**WORLD'S BEST  
ALLOY BULLBARS**

[ecb.com.au](http://ecb.com.au)

**A:** 29 Snook St Clontarf QLD 4019

**P:** PO Box 122 Margate QLD 4019

**T:** 07 3897 5700

**E:** [info@ecb.com.au](mailto:info@ecb.com.au)

**ABN:** 25 010 676 034

Part of GUD Holding Limited - ASX: GUD



[customalloy.com.au](http://customalloy.com.au)



**WORLD'S BEST  
ALLOY BULLBARS**

ecb.com.au

A: 29 Snook St Clontarf QLD 4019

P: PO Box 122 Margate QLD 4019

T: 07 3897 5700

E: info@ecb.com.au

ABN: 25 010 676 034

Part of GUD Holding Limited - ASX: GUD



Australia's Leading Manufacturer of Truck Bullbars


customalloy.com.au

# DESPATCH CHECKLIST

## B3IS0101SY

Work Order #		See other side of this page for photos of all mounts
Finish:		
Transport:		
Due Date:		

OC	_____	1	Steel Mounting Bracket
OC	_____	2	3" Overriders (CA01 Plastic)
OC	_____	2	CA Badges – <b>Fitted to Overriders</b>
OC	_____	1	Bolt Kit
WR	_____	1	Steel Mounting Bracket – <b>Fitted to Bar</b>
WR	_____	2	Eyebolts ( <sup>3</sup> / <sub>4</sub> " UNC ZP) and Washers – <b>Fitted To Bar</b>
WR	_____	2	2 1/2" x <sup>9</sup> / <sub>16</sub> " UNC Bolt Grade 8H/T – <b>Fitted To Bar</b>
WR	_____	2	<sup>9</sup> / <sub>16</sub> " Nyloc Nut – <b>Fitted To Bar</b>
WR	_____	4	<sup>9</sup> / <sub>16</sub> " Flat Washer – <b>Fitted To Bar</b>
WR	_____	2	3" Overriders (CA01 Plastic) with CA Badges – <b>Fitted to Bar</b>
WR	_____	1	Bolt Kit – <b>Taped to Mount</b>

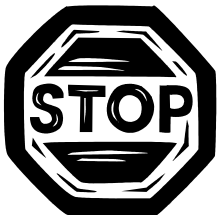

**Is this product "the best it can be" Yes**  
If **NO** fix before continuing

All parts checked and completed by:

Nut and bolts: \_\_\_\_\_ Date \_\_\_ / \_\_\_ / \_\_\_

Order control: \_\_\_\_\_ Date \_\_\_ / \_\_\_ / \_\_\_

Final wrap check: \_\_\_\_\_ Date \_\_\_ / \_\_\_ / \_\_\_



**WORLD'S BEST  
ALLOY BULLBARS**

**A:** 29 Snook St Clontarf QLD 4019

**P:** PO Box 122 Margate QLD 4019

**T:** 07 3897 5700

**E:** info@ecb.com.au

**ABN:** 25 010 676 034

Part of GUD Holding Limited - ASX: GUD



ecb.com.au

customalloy.com.au



/  
Wrapper's / Checker's  
Initials