Tel: 07 3897 5700 Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St Clontarf QLD 4019 Australia Po Box 122 Margate QLD 4019 Australia

8N54SY / NB6N54SY

REPLACES: 12.11.09 REVISED: 11.09.10

FITTING INSTRUCTIONS

NISSAN NAVARA 10/01 on 4WD/2WD TYPE 8 BULLBAR and 63mm SERIES 2 NUDGE BAR VEHICLE FRONTAL PROTECTION SYSTEM (VFPS) FOR AIR BAG & ADR COMPLIANT VEHICLES

Check installation hardware before commencing.

- 1. Working on one side at a time, remove the bumper mount bolts from side of chassis and attach ECB steel mounting bracket. Use the M10 x 50 x 1.25 bolts (supplied). **DO NOT TIGHTEN. See figure 1.**
- 2. Attach the ECB protection bar to the outside of the steel mounting brackets. Use the 3/8x 1 ¼ unc bolts and nuts (supplied). **DO NOT TIGHTEN.**
- 3. Attach the steel brace plates to the bumper mount using the 3/8 x 1 ½ bolts and nuts (supplied) use 40mm round x 6mm alloy washer (supplied) on bumper bracket. These braces pass out through the bumper and are attached to the underside of the protection bar bracket using the 3/8 x 1 ½ unc bolts (supplied). **See figure 2.**
- 4. Align protection bar with vehicle and **TIGHTEN** steel mounting bracket bolts first. Ensure bumper bar is aligned with vehicle. **NOTE:** Steel mounting brackets are slotted on chassis bolts for alignment across vehicle **TIGHTEN** protection bar to steel mounting brackets, then **TIGHTEN** steel brace plates.

NOTE: For side views see figure 3 and 4.

ENSURE NUMBER PLATE IS CLEARLY VISABLE

Note: When fitting/refitting the licence plate to the vehicle, ensure there is no obstruction to licence plate vision in accordance with local authorities. If required relocate licence plate to an alternate location.

Further VFPS Notes:

- a) Do not attach VFPS to the vehicle using anchorages not intended for this purpose (e.g. engine mounting bolts).
- b) Do not use this product for any vehicle make or model, other than those specified by the VFPS manufacturer.
- c) Do not remove the plaque or label from the VFPS.
- d) Do not modify the structure of the VFPS in any way.
- e) No accessory or fitment should project forward of the VFPS forward profile.
- f) ENSURE THESE INSTRUCTIONS ARE LEFT WITH VEHICLE OWNER AND/OR OPERATOR.

IMPORTANT INFORMATION

Periodically check bolts and nuts for correct tightness, especially if travelling on rough roads



Tel: 07 3897 5700 Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St Clontarf QLD 4019 Australia Po Box 122 Margate QLD 4019

Australia

FITTING KIT

2 – Steel mounting brackets.	$6-3/8 \times 1^{-1}/4$ unc bolts/nuts.
2 – Steel brace plates.	20 - 3/8 flat washers.
4 – M10 x 50 x 1.25 bolts only.	12 - 3/8 spring washers.
$2-3/8 \times 1 \frac{1}{2}$ unc bolts/nuts.	2 – 40mm x 6mm round alloy washer with 10mm hole in centre.

M10 x 50 x 1.25 bolts

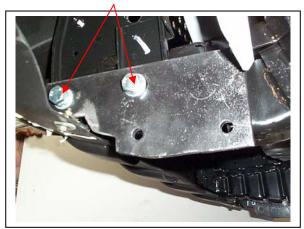


Figure 1

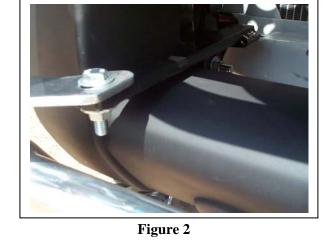




Figure 3 – Type 8 side view



Figure 4 – Series 2 Nudge Bar



Tel: 07 3897 5700 Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St Clontarf QLD 4019 Australia Po Box 122 Margate QLD 4019 Australia

We value your comments

Dear Fitter,

ECB would like to know how you went with the installation of this product. We value your comment and may need to contact you to clarify some details so please complete your contact details clearly.

We would appreciate if you could complete as many of the following details as possible.

Your Name:	Your contact No.
Product Part No.	Product Invoice No.
Product Description:	Make, model, and year of vehicle:
Product Work Order No.	Company your from/Company product purchased from:
Was the fitting hardware supplied complete?	Yes No
If no what was not supplied	
	V V.
Did the installation go well?	Yes No
Please provide comments	
Please draw diagrams if you need to.	

Post to Reply Paid 122 PO Box 122 Margate QLD 4019 Fax to (07) 3283 1168



Tel: 07 3897 5700 Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St Clontarf QLD 4019 Australia

Po Box 122 Margate QLD 4019 Australia



Tel: 07 3897 5700 Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St Clontarf QLD 4019 Australia Po Box 122 Margate QLD 4019 Australia

DESPATCH CHECKLIST 8N54SY / NB6N54SY

Work Order #	
Finish:	
Transport:	
Due Date:	
O 2 – Steel mounting br	ackets.
O 2 – Steel brace plates.	•
	to be powder coated – black for
polished / same colour j	for powder coat order
O 1 − Bolt Kit.	See other side of this page for photos of all mounts
Is this product "If NO fix before of All parts checked and complete	
r	<u>-</u> - J ·
Nut and bolts:	Date//
Order control:	Date//
Final wrap check:	Date//



Tel: 07 3897 5700 Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St Clontarf QLD 4019 Australia

Po Box 122 Margate QLD 4019 Australia

