



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

UBSY32A

REPLACES: 00.00.00

REVISED: 12.04.12

FITTING INSTRUCTIONS

SSANGYONG ACTYON 01/12 ON UNDER BODY GUARD TO SUIT ECB ARC BAR

Check installation hardware before commencing.

1. Ensure ECB protection bar is correctly fitted and aligned.
2. Remove original equipment plastic under body guard, four 12mm head bolts.
3. Place ECB under body guard on top of skirt return at front. Using M8 x 40 bolts, spring washers and flat washers (supplied), attach rear of under body guard to front of rear cross member through holes in underside of under body guard. **Finger tighten only.**
4. At very rear of under body guard, place M10 x 35 bolts and washers on wire(supplied) through chassis rails from outside hole to hole aligning with under body guard rear mount. Attach to inside of chassis rails using flat washer, spring washer and nut (supplied). **Finger tighten only.**
5. Attach front of under body guard to captive nuts where original equip plastic guard was removed. Use bolts supplied with vehicle.
6. Using holes in under side of ECB protection bar skirt as a guide, drill front of under body guard to 6mm. Install M6 x 25 bolts, flat washers and nyloc nuts (supplied).
7. **Tighten all bolts.**

Further VFPS Notes:

- a) Do not attach VPS to the vehicle using anchorages not intended for this purpose (e.g. engine mounting bolts).
- b) Do not use this product for any vehicle make or model, other than those specified by the VPS manufacturer.
- c) Do not modify the structure of the VPS in any way.
- f) **ENSURE THESE INSTRUCTIONS ARE LEFT WITH VEHICLE OWNER AND/OR OPERATOR.**

IMPORTANT INFORMATION

Periodically check bolts and nuts for correct tightness, especially if travelling on rough roads

FITTING KIT

1 – ECB under body guard	2 – M10 spring washers
2 – M8 x 40 x 1.25 bolts	2 – M10 x 1.25 nuts
2 – M8 flat washers	5 – M6 x 25 bolts
2 – M8 spring washers	10 – M6 flat washers
2 – M10 x 1.25 x 35 bolts and washers on 300mm wire	5 – M6 nyloc nuts
2 – M10 flat washers	



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

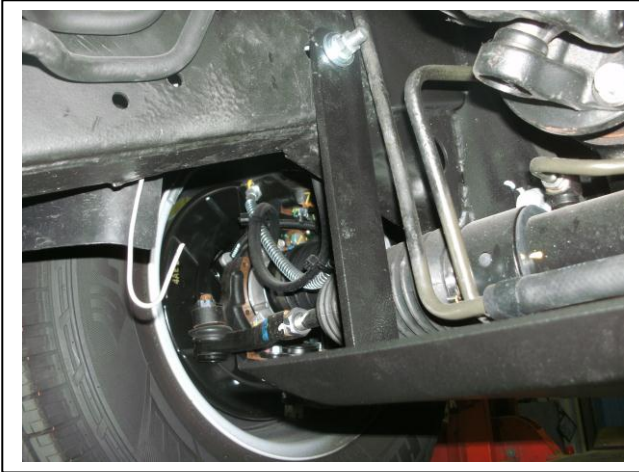


Figure 1: Rear mount attachment to chassis rail.



Figure 2: Shown from front



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

We value your comments

Dear Fitter,

ECB would like to know how you went with the installation of this product. We value your comment and may need to contact you to clarify some details so please complete your contact details clearly.

We would appreciate if you could complete as many of the following details as possible.

Your Name:	Your contact No.
Product Part No.	Product Invoice No.
Product Description:	Make, model, and year of vehicle:
Product Work Order No.	Company your from/Company product purchased from:

Date of Fitment: ____/____/____

Was the fitting hardware supplied complete?

Yes

No

If no what was not supplied

Did the installation go well?

Yes

No

Please provide comments

Please draw diagrams if you need to.

Post to
Reply Paid 122
PO Box 122

Fax to
(07) 3283 1168



WORLD'S BEST
ALLOY BULLBARS

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

Margate QLD 4019

DESPATCH CHECKLIST UBSY32A

Work Order #	
Finish:	
Transport:	
Due Date:	

- 1 – Under body guard
- 1 – bolt kit



Is this product “the best it can be” Yes _____ / _____
Wrapper's initials / Checker initials

If NO fix before continuing

All parts checked and completed by:

Nut and bolts: _____ Date __/__/__

Order control: _____ Date __/__/__

Final wrap check: _____ Date __/__/__