



**WORLD'S BEST  
ALLOY BULLBARS**

**East Coast Bullbars (ECB Pty Ltd)**

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St  
Clontarf QLD 4019  
Australia

Po Box 122  
Margate QLD 4019  
Australia

**8M70SY / NB6M70SY**

REPLACES: 22.05.01

REVISED: 11.07.10

## **FITTING INSTRUCTIONS**

### **L300 EXPRESS VAN 5/00- TYPE 8 & 63MM NUDGE BAR VEHICLE FRONTAL PROTECTION SYSTEM (VFPS) FOR AIR BAG & ADR COMPLIANT VEHICLES**

Check installation hardware before commencing.

1. Unbolt retainer bracket holding clutch and handbrake cable. Straighten the end of retainer to make it possible to fit on with ECB steel mounts.
2. On the underside at front of chassis there are two 16mm holes (per side), these are the locators for attaching steel mounts. You will need to drill through the centre of these holes through to the topside with a 10mm drill.
3. Attach mounts to underside of chassis using 3/8 x 5 bolt (supplied) and 50 x 8 steel plates (supplied) on top of chassis. **NOTE:** 50 x 8 x 100mm steel plate goes to front and 50 x 8 x 75mm plate goes to rear. **See figures 1, 2 and 3** for location of mounts and steel plates. **DO NOT TIGHTEN.**
4. Attach ECB protection bar using 3/8 x 1½ bolts/nuts (supplied). Align with vehicle and **TIGHTEN ALL BOLTS.**  
**NOTE:** See figure 4 for Type 8 alignment.
5. Reattach retainer bracket for clutch and handbrake cable to original position and bend overhanging bracket at bottom around ECB steel mount.

### **ENSURE NUMBER PLATE IS CLEARLY VISABLE**

**Note:** When fitting/refitting the licence plate to the vehicle, ensure there is no obstruction to licence plate vision in accordance with local authorities. If required relocate licence plate to an alternate location.

#### **Further VFPS Notes:**

- a) Do not attach VFPS to the vehicle using anchorages not intended for this purpose (e.g. engine mounting bolts).
- b) Do not use this product for any vehicle make or model, other than those specified by the VFPS manufacturer.
- c) Do not remove the plaque or label from the VFPS.
- d) Do not modify the structure of the VFPS in any way.
- e) No accessory or fitment should project forward of the VFPS forward profile.
- f) **ENSURE THESE INSTRUCTIONS ARE LEFT WITH VEHICLE OWNER AND/OR OPERATOR.**

### **IMPORTANT INFORMATION**

Periodically check bolts and nuts for correct tightness, especially if travelling on rough roads



East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St  
Clontarf QLD 4019  
Australia

Po Box 122  
Margate QLD 4019  
Australia

**WORLD'S BEST  
ALLOY BULLBARS**

**FITTING KIT**

2 – Steel mounts.
2 – 50 x 8 x 100 steel plate.
2 – 50 x 8 x 75 steel plate.
4 – 3/8 x 1 1/2 bolts
4 – 3/8 x 5 bolts.
8 – 3/8 nuts.
16 – 3/8 flat washers.
8 – 3/8 spring washers.



**Figure 1**



**Figure 2 – Passenger Side**

50 x 8 x 100mm Steel Plate

50 x 8 x 75mm Steel Plate



**Figure 3 – Drivers Side**



**Figure 4 – Type 8 Alignment**



East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St  
Clontarf QLD 4019  
Australia

Po Box 122  
Margate QLD 4019  
Australia

WORLD'S BEST  
ALLOY BULLBARS

**We value your comments**

Dear Fitter,

ECB would like to know how you went with the installation of this product. We value your comment and may need to contact you to clarify some details so please complete your contact details clearly.

We would appreciate if you could complete as many of the following details as possible.

<b>Your Name:</b>	<b>Your contact No.</b>
<b>Product Part No.</b>	<b>Product Invoice No.</b>
<b>Product Description:</b>	<b>Make, model, and year of vehicle:</b>
<b>Product Work Order No.</b>	<b>Company your from/Company product purchased from:</b>

Was the fitting hardware supplied complete?      Yes                      No

If no what was not supplied

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

Did the installation go well?                      Yes                      No

Please provide comments

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

Please draw diagrams if you need to.

**Post to**  
Reply Paid 122  
PO Box 122  
Margate QLD 4019

**Fax to**  
(07) 3283 1168



**WORLD'S BEST  
ALLOY BULLBARS**

**East Coast Bullbars (ECB Pty Ltd)**

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au [www.ecb.com.au](http://www.ecb.com.au)

29 Snook St  
Clontarf QLD 4019  
Australia

Po Box 122  
Margate QLD 4019  
Australia



WORLD'S BEST  
ALLOY BULLBARS

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St  
Clontarf QLD 4019  
Australia

Po Box 122  
Margate QLD 4019  
Australia

## DESPATCH CHECKLIST 8M70SY / NB6M70SY


Work Order #	
Finish:	
Transport:	
Due Date:	

<p><b>See other side of this page for photos of all mounts</b></p>
--

- 2 – Steel mounts.
- 2 – 50 x 8 x 100 steel plates.
- 2 – 50 x 8 x 75 steel plates.

***NOTE: All mounts are to be powder coated – black for polished / same colour for powder coat order***

- 1 – Bolt Kit.

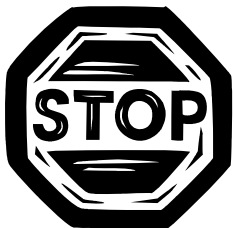

Is this product “the best it can be” Yes \_\_\_\_\_ / \_\_\_\_\_  
Wrapper’s initials / Checker initials

If **NO** fix before continuing

All parts checked and completed by:

Nut and bolts: \_\_\_\_\_ Date \_\_/\_\_/\_\_

Order control: \_\_\_\_\_ Date \_\_/\_\_/\_\_

Final wrap check: \_\_\_\_\_ Date \_\_/\_\_/\_\_



**East Coast Bullbars (ECB Pty Ltd)**

Tel: 07 3897 5700

Fax: 07 3283 1168

[ecb@ecb.com.au](mailto:ecb@ecb.com.au) [www.ecb.com.au](http://www.ecb.com.au)

29 Snook St  
Clontarf QLD 4019  
Australia

Po Box 122  
Margate QLD 4019  
Australia

**WORLD'S BEST  
ALLOY BULLBARS**

