Tel: 07 3897 5700 Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St Clontarf QLD 4019 Australia Po Box 122 Margate QLD 4019 Australia

REPLACES: 24.10.02 REVISED: 21.08.10

#### NBF50SY

#### FITTING INSTRUCTIONS

## FORD EXPLORER (6/99-9/01) & (12/96-5/99) LIMITED 76mm NUDGE BAR, VEHICLE FRONTAL PROTECTION SYSTEM (VFPS) FOR AIR BAG & ADR COMPLIANT VEHICLES

Check installation hardware before commencing.

- 1. Remove bumper.
- 2. Place steel mounting brackets in position on the outside of the chassis rails and align with the slots in the side and bottom of the chassis.
- 3. Insert the ½ unc nuts and washer on wire (supplied) inside the chassis via the openings at the front of the chassis rails.
- 4. Attach mount using the ½ x 1 ½ unc bolts (supplied) and **TIGHTEN ALL BOLTS. NOTE**: Ensure that the fore and aft adjustment is equal both sides.
- 5. Bend protruding wire back along bottom of chassis.
- Re-attach bumper.
- 7. Attach ECB protection bar to steel mounting brackets. Use the 3/8 x 1 ¼ unc bolts, nuts and washers (supplied).
- 8. Level protection bar and **TIGHTEN ALL BOLTS**.

#### **ENSURE NUMBER PLATE IS CLEARLY VISABLE**

**Note:** When fitting/refitting the licence plate to the vehicle, ensure there is no obstruction to licence plate vision in accordance with local authorities. If required relocate licence plate to an alternate location.

#### **Further VFPS Notes:**

- a) Do not attach VFPS to the vehicle using anchorages not intended for this purpose (e.g. engine mounting bolts).
- b) Do not use this product for any vehicle make or model, other than those specified by the VFPS manufacturer.
- c) Do not remove the plaque or label from the VFPS.
- d) Do not modify the structure of the VFPS in any way.
- e) No accessory or fitment should project forward of the VFPS forward profile.
- f) ENSURE THESE INSTRUCTIONS ARE LEFT WITH VEHICLE OWNER AND/OR OPERATOR.

#### **IMPORTANT INFORMATION**

Periodically check bolts and nuts for correct tightness, especially if travelling on rough roads

#### **FITTING KIT**

2 – Steel mounts.	$4 - \frac{1}{2}$ spring washers.
$4 - \frac{1}{2}$ unc nuts on wire/washer.	$4-3/8 \times 1\frac{1}{4}$ unc bolts/nuts.
$4 - \frac{1}{2} \times 1^{\frac{1}{2}}$ unc bolts.	8 - 3/8 flat washers.
$4 - \frac{1}{2}$ flat washers.	4 - 3/8 spring washers.



Tel: 07 3897 5700 Fax: 07 3283 1168 ecb@ecb.com.au www.ecb.com.au 29 Snook St Clontarf QLD 4019 Australia Po Box 122 Margate QLD 4019 Australia

## We value your comments

Dear Fitter,

ECB would like to know how you went with the installation of this product. We value your comment and may need to contact you to clarify some details so please complete your contact details clearly.

We would appreciate if you could complete as many of the following details as possible.

Your Name:	Your contact No.	
Product Part No.	Product Invoice No.  Make, model, and year of vehicle:  Company your from/Company product purchased from:	
<b>Product Description:</b>		
Product Work Order No.		
Was the fitting hardware supplied complete?	Yes No	
If no what was not supplied		
	Yes No	
Did the installation go well?		
Please provide comments		
Please draw diagrams if you need to.		

Post to Reply Paid 122 PO Box 122 Margate QLD 4019 Fax to (07) 3283 1168




Tel: 07 3897 5700 Fax: 07 3283 1168 ecb@ecb.com.au www.ecb.com.au 29 Snook St Clontarf QLD 4019 Australia Po Box 122 Margate QLD 4019 Australia

# DESPATCH CHECKLIST NBF50SY

Work Order #	See other side of
Finish:	this page for
Transport:	photos of all
Due Date:	mounts

- O 2 Steel mounting brackets.
- O 1 Bolt Kit.

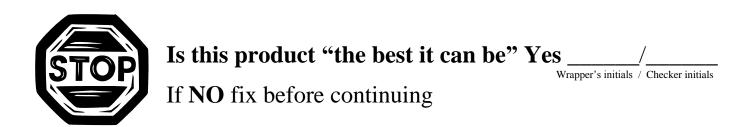

Final wrap check: \_\_\_\_\_\_\_Date\_\_/\_\_/\_



Tel: 07 3897 5700 Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St Clontarf QLD 4019 Australia Po Box 122 Margate QLD 4019

Australia

