

Tel: 07 3897 5700 Fax: 07 3283 1168 ecb@ecb.com.au www.ecb.com.au 29 Snook St Clontarf QLD 4019 Australia Po Box 122 Margate QLD 4019 Australia

#### 8H65SY / NB7H65SY / NBH65SY

# REPLACES: H64 NB'S REVISED: 26.11.12

#### FITTING INSTRUCTIONS

#### HOLDEN COLORADO RG 6-12 on TYPE 8, 76MM SERIES 2 NUDGE BAR AND 76MM NUDGE BAR VEHICLE FRONTAL PROTECTION SYSTEM (VFPS) FOR AIR BAG & ADR COMPLIANT VEHICLES

Check installation hardware before commencing.

- 1. From underside of vehicle, remove front under body (five 15mm bolts) and centre under body guards (two 14mm head bolts from front and two 15mm head bolts from rear).
- 2. Remove one 15mm head bolt from front of stabilizer bar beside tow hook and loosen only, front most two 14mm bolts at rear of stabilizer bar. Allow to hang. **See figure 1.**
- 3. Install ECB steel mounting brackets (supplied) between stabilizer bar and cross member, fit using four original equipment bolts. In top holes fit 3/8 x 3 ½ bolts, flat 50 x 11 x 6 alloy washers and nyloc nuts (supplied). **See figure 2, 3 and 4.**
- 4. Using measurement between alloy mounts on ECB protection bar set ECB steel mounting brackets with measurement to outside. Check mounts are central to vehicle and run parallel. **Tighten all bolts.**
- 5. Fit ECB protection bar onto ECB steel mounting brackets using M10 x 40 bolts, flat washers, spring washers and nuts (supplied) for rear holes and M10 x 40 bolts on wire, flat washers, spring washers and nuts (supplied) for front holes. **Finger tighten only.**
- 6. Align ECB Protection bar to vehicle. **Tighten all bolts. See figure 5 and 6 for 76mm Nudge bar, figure 7 and 8** for 76mm Series 2 nudge bar and 9 and 10 for Type 8.
- 7. Refit under body guards to vehicle.

#### ENSURE NUMBER PLATE IS CLEARLY VISABLE

**Note:** When fitting/refitting the licence plate to the vehicle, ensure there is no obstruction to licence plate vision in accordance with local authorities. If required relocate licence plate to an alternate location.

#### **Further VFPS Notes:**

- a) Do not attach VFPS to the vehicle using anchorages not intended for this purpose (e.g. engine mounting bolts).
- b) Do not use this product for any vehicle make or model, other than those specified by the VFPS manufacturer.
- c) Do not remove the plaque or label from the VFPS.
- d) Do not modify the structure of the VFPS in any way.
- e) No accessory or fitment should project forward of the VFPS forward profile.
- f) ENSURE THESE INSTRUCTIONS ARE LEFT WITH VEHICLE OWNER AND/OR OPERATOR.

#### **IMPORTANT INFORMATION**

Periodically check bolts and nuts for correct tightness, especially if travelling on rough roads

Tel: 07 3897 5700 Fax: 07 3283 1168 ecb@ecb.com.au www.ecb.com.au 29 Snook St Clontarf QLD 4019 Australia Po Box 122 Margate QLD 4019 Australia

#### **FITTING KIT**

1 – Pair ECB steel mounting brackets	6 – M10 spring washers
2 – 50 x 11 square alloy washers	4 – M10 x 1.5 nuts
2 – M10 x 1.5 x 40 bolts	$2 - 3/8 \times 3 \frac{1}{2}$ bolts
2 – M10 x 1.5 x 40 bolt and washer on 300 mm wire	2 - 3/8 nuts
10 – M10 flat washers	

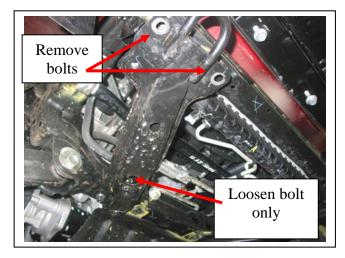


Figure 1: Bolts to be removed from stabilizer bar



**Figure 2:** Fitting mount under stabilizer bar



Figure 3: Steel mount bolted in position



**Figure 4:** Steel mounts fitted to vehicle. Bumper removed for photo



Tel: 07 3897 5700 Fax: 07 3283 1168 ecb@ecb.com.au www.ecb.com.au 29 Snook St Clontarf QLD 4019 Australia Po Box 122 Margate QLD 4019 Australia



Figure 5





Figure 7



Figure 8



Figure 9



Figure 10



Tel: 07 3897 5700 Fax: 07 3283 1168 ecb@ecb.com.au www.ecb.com.au 29 Snook St Clontarf QLD 4019 Australia Po Box 122 Margate QLD 4019 Australia

# We value your comments

Dear Fitter,

ECB would like to know how you went with the installation of this product. We value your comment and may need to contact you to clarify some details so please complete your contact details clearly.

We would appreciate if you could complete as many of the following details as possible.

Your Name:	Your contact No.	Your contact No.	
Product Part No.	Product Invoice No.	Product Invoice No.  Make, model, and year of vehicle:	
<b>Product Description:</b>	Make, model, and yea		
Product Work Order No.	Company your from/0	Company product purchased from:	
Date of Fitment:// Was the fitting hardware supplied complete?  If no what was not supplied	Yes	No	
Did the installation go well?  Please provide comments	Yes	No	
Please draw diagrams if you need to.			

Post to Reply Paid 122 PO Box 122 Margate QLD 4019 **Fax to** (07) 3283 1168



Tel: 07 3897 5700 Fax: 07 3283 1168 ecb@ecb.com.au www.ecb.com.au 29 Snook St Clontarf QLD 4019 Australia Po Box 122 Margate QLD 4019 Australia

# DESPATCH CHECKLIST NBH65SY / NB7H65SY / 8H65SY

116		<b>750</b> 1
Work Order #		See other side off this page for
Finish:		
Transport:		photos of all
Due Date:		mounts
O 1 – Pair St O 1 – Bolt K	teel mounting brackets. Lit.	
3 I OPI	product "the best it can be" fix before continuing	Yes / Checker initials
All parts <u>checked</u> ar	nd completed by:	
Nut and bolts:		Date//
Order control:		Date//
Final wrap check:		Date//



Tel: 07 3897 5700 Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St Clontarf QLD 4019 Australia Po Box 122 Margate QLD 4019 Australia

