

Tel: 07 3897 5700 Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St Clontarf QLD 4019 Australia Po Box 122 Margate QLD 4019 Australia

REPLACES: 00.00.00

NBI50SY

FITTING INSTRUCTIONS REVISED: 21.04.17

IVECO DAILY C50 VAN & CAB CHASSIS 01/15on 76mm NUDGE BAR VEHICLE FRONTAL PROTECTION SYSTEM (VFPS) FOR AIR BAG & ADR COMPLIANT VEHICLES

Check installation hardware before commencing.

- 1. Park the vehicle on level ground and apply the hand brake.
- 2. Remove the four front bolts retaining the engine splash guard to allow the splash guard to hang for access to the chassis rails.
- 3. Position the steel mounting brackets under each chassis rail, align with the holes and insert the M10 x 1.25 x 40mm bolts, flat washers and spring washers (supplied) **FINGER TIGTHEN ONLY. See figure 1**
- 4. Align the steel mounting brackets centrally to the vehicle to suit the inside width of the mounting brackets on the Nudge Bar. See figure 2. NOTE: This measurement needs to be correct for the tow lug fitment
- 5. Attach the Nudge bar to the steel mounting brackets using the M10 x 1.25 x 40mm, flat washers and spring washers (supplied) for rear holes. Use the M 10 x 1.25 x 40mm bolts and washers on wire with spring washers and nuts (supplied) for front holes. **FIGNTER TIGHTEN ONLY. See figure 3.**
- 6. Align the Nudge Bar with the vehicle ensuring Nudge Bar is as high as possible in the slotted holes. **TIGHTEN ALL BOLTS. See figures 4 & 5.**
- 7. Re-attach the engine splash guard using the original fasteners.

ENSURE NUMBER PLATE IS CLEARLY VISABLE

Note: When fitting/refitting the licence plate to the vehicle, ensure there is no obstruction to licence plate vision in accordance with local authorities. If required relocate licence plate to an alternate location.

Further VFPS Notes:

- a) Do not attach VFPS to the vehicle using anchorages not intended for this purpose (e.g. engine mounting bolts).
- b) Do not use this product for any vehicle make or model, other than those specified by the VFPS manufacturer.
- c) Do not remove the plaque or label from the VFPS.
- d) Do not modify the structure of the VFPS in any way.
- e) No accessory or fitment should project forward of the VFPS forward profile.
- f) ENSURE THESE INSTRUCTIONS ARE LEFT WITH VEHICLE OWNER AND/OR OPERATOR.

IMPORTANT INFORMATION

Periodically check bolts and nuts for correct tightness, especially if travelling on rough roads

FITTING KIT

1 – Pair Steel Mounting Brackets	10 – M10 spring washers
8 – M10 x 1.25 x 40 bolts	18 – M10 flat washers
2 – M 10 x 1.25 x 40 bolts/washers on 400mm	10 – M10 x 1.25 nuts



Tel: 07 3897 5700 Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St Clontarf QLD 4019 Australia Po Box 122 Margate QLD 4019 Australia

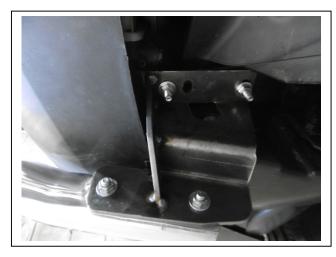


Figure 1



Figure 2



Figure 3



Figure 4 – Side view shown



Figure 5 – Front view shown



Tel: 07 3897 5700 Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St Clontarf QLD 4019 Australia Po Box 122 Margate QLD 4019 Australia

We value your comments

Dear Fitter,

ECB would like to know how you went with the installation of this product. We value your comment and may need to contact you to clarify some details so please complete your contact details clearly.

We would appreciate if you could complete as many of the following details as possible.

Your Name:	Your contact No.	
Product Part No.	Product Invoice No. Make, model, and year of vehicle: Company your from/Company product purchased from:	
Product Description:		
Product Work Order No.		
Date of Fitment:// Was the fitting hardware supplied complete? If no what was not supplied	Yes No	
Did the installation go well? Please provide comments	Yes No	
Please draw diagrams if you need to.		

Post to Reply Paid 122 PO Box 122 Margate QLD 4019 Fax to (07) 3283 1168



Tel: 07 3897 5700 Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St Clontarf QLD 4019 Australia Po Box 122 Margate QLD 4019

Australia



Final wrap check:

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700 Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St Clontarf QLD 4019 Australia Po Box 122 Margate QLD 4019 Australia

DESPATCH CHECKLIST NBI50SY

	14013031		
Work Order #		See other side of	
Finish:		this page for	
Transport:		photos of all	
Due Date:		mounts	
BK1 – Be	air Steel mounting brackets. olt Kit is product "the best it can be" I fix before continuing	Wrapper's initials / Checker initials Yes	
All parts <u>checked</u> ar	nd <u>completed</u> by:		
Nut and bolts:		Date/_/	
Order control:		Date / /	

Date__/__/__



Tel: 07 3897 5700 Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St Clontarf QLD 4019 Australia Po Box 122 Margate QLD 4019 Australia

