



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

NB6MB60SY / NBMB60SY

REPLACES: 00.00.00
REVISED: 22.01.14

FITTING INSTRUCTIONS

MERCEDES BENZ SPRINTER 10/13 on 63mm SERIES 2 NUDGE BAR AND 76mm NUDGE VEHICLE FRONTAL PROTECTION SYSTEM (VFPS) BAR FOR AIR BAG AND ADR COMPLIANT VEHICLES

Check installation hardware before commencing.

1. Lift bonnet
2. Remove two T25 Torx head screws and four push-pull clips from top of grille. Remove grille by pushing down on four lower clips and gently pulling forward.
3. Remove five plastic push pull clips (per side) from side wing and wheel arch of vehicle. Remove two T45 Torx head bolts from step and two 13mm head bolts beside number plate. Gently remove wheel arch splash guards from behind sides of bumper.
4. Using a sharp knife, remove lower front edge of black panel above chassis rails. **See figure 1 and 2.**
5. Remove four 13mm head bolts (per side) from bumper support and remove bumper support. A sharp knife may be required to cut the sealant on rear of support. **NOTE: Blow all fillings clear and treat all exposed metal with a rust inhibitor. See figure 3.**
6. Refit bumper support over ECB steel mount brackets using four M8 x 30 bolts, flat washers and spring washers (supplied) (per side). **FINGER TIGHTEN ONLY.**
7. Using ECB Protection Bar inside - inside measurement, to outside - outside on steel mounts; align steel mounts centrally on vehicle. **TIGHTEN ALL BOLTS.**
8. Cut bumper grille from top outside corner removing rear section of grille but leaving front. **See figure 4.**
9. Refit bumper and grille assembly as per of steps 2 to 5.
10. Carefully fit ECB Protection bar to mounts using four M10 x 40 bolts, flat washers, spring washers and nuts (supplied). **FINGER TIGHTEN ONLY.**
11. Align protection bar with vehicle. **See figures 5 and 6, 7 and 8. TIGHTEN ALL BOLTS.**

ENSURE NUMBER PLATE IS CLEARLY VISABLE

Note: When fitting/refitting the licence plate to the vehicle, ensure there is no obstruction to licence plate vision in accordance with local authorities. If required relocate licence plate to an alternate location.

Further VFPS Notes:

- a) Do not attach VFPS to the vehicle using anchorages not intended for this purpose (e.g. engine mounting bolts).
- b) Do not use this product for any vehicle make or model, other than those specified by the VFPS manufacturer.
- c) Do not remove the plaque or label from the VFPS.
- d) Do not modify the structure of the VFPS in any way.
- e) No accessory or fitment should project forward of the VFPS forward profile.
- f) **ENSURE THESE INSTRUCTIONS ARE LEFT WITH VEHICLE OWNER AND/OR OPERATOR.**



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

IMPORTANT INFORMATION

Periodically check bolts and nuts for correct tightness, especially if travelling on rough roads

FITTING KIT

1 – Pair Steel mounting brackets.	4 – M10 x 1.5 nuts
4 – M10 x 1.5 x 40 bolts.	8 – M8 x 1.25 x 30 bolts
8 – M10 washers	8 – M8 flat washers
4 – M10 spring washers	8 – M8 spring washers



Figure 1-Drivers side shown.

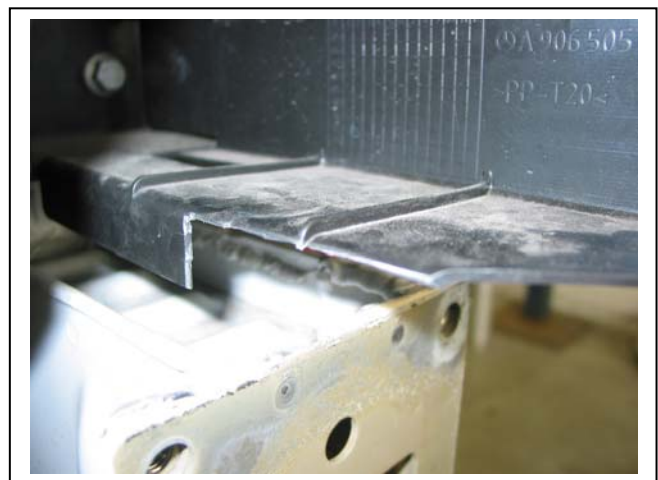


Figure 2: Passengers side shown

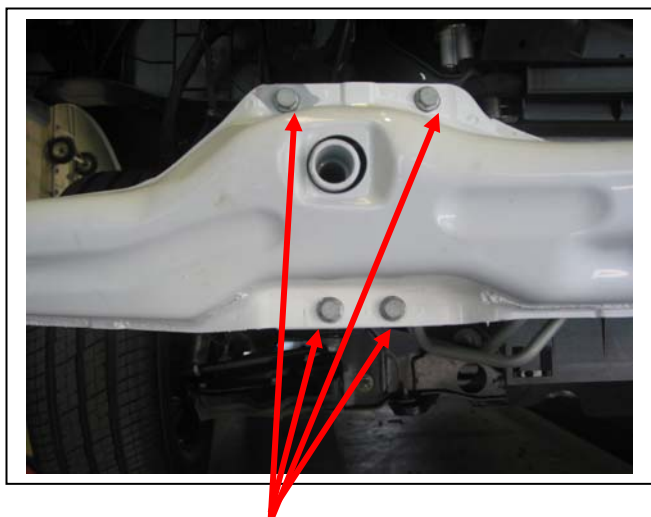


Figure 3: Four thirteen mm head bolts per/side.

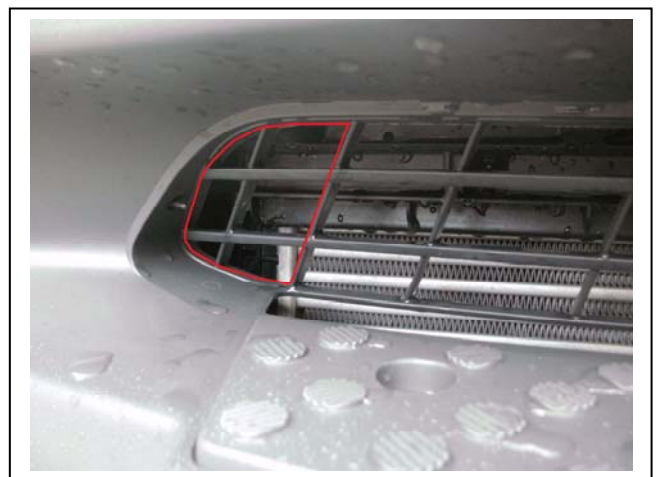


Figure 4: Bumper grille cut out



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia



Figure 5: Front view Series 2 Nudge Bar



Figure 6: Side view Series 2 Nudge Bar



Figure 7: Front view 76mm Nudge Bar



Figure 8: Side view 76mm Nudge Bar



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

We value your comments

Dear Fitter,

ECB would like to know how you went with the installation of this product. We value your comment and may need to contact you to clarify some details so please complete your contact details clearly.

We would appreciate if you could complete as many of the following details as possible.

Your Name:	Your contact No.
Product Part No.	Product Invoice No.
Product Description:	Make, model, and year of vehicle:
Product Work Order No.	Company your from/Company product purchased from:

Date of fitment: ____/____/____

Was the fitting hardware supplied complete?

Yes

☐

No

☐

If no what was not supplied

Did the installation go well?

Yes

☐

No

☐

Please provide comments

Please draw diagrams if you need to.

Post to

Reply Paid 122

PO Box 122

Margate QLD 4019

Fax to

(07) 3283 1168



WORLD'S BEST
ALLOY BULLBARS

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

DESPATCH CHECKLIST NB6MB60SY / NBMB60SY

Work Order #	
Finish:	
Transport:	
Due Date:	

OC.....1 – Pair Steel mounting brackets.
BK.....1 – Bolt Kit.

**See other side of
this page for
photos of all
mounts**



Is this product “the best it can be” Yes _____ / _____
Wrapper's initials / Checker initials

If NO fix before continuing

All parts checked and completed by:

Nut and bolts: _____ Date ____/____/____

Order control: _____ Date ____/____/____

Final wrap check: _____ Date ____/____/____



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

