



WORLD'S BEST
ALLOY BULLBARS

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

NB6T32SY / NBT32SY

REPLACES: 00.00.00

REVISED: 06.08.14

FITTING INSTRUCTIONS

TOYOTA KLUGER 03/14- SERIES 2 63MM NUDGE BAR AND 76MM NUDGE BAR VEHICLE FRONTAL PROTECTION SYSTEM (VFPS) FOR AIR BAG & ADR COMPLIANT VEHICLES

Check installation hardware before commencing.

1. Lift bonnet.
2. Remove radiator cover. Nine push pull plastic clips. Push centre of clip to remove and pull to outside to install.
3. Grille is two pieces. Remove six push pull plastic clips from top and centre mounts. Ensure grille is full clipped together across centre. Grille will be removed in one piece with bumper.
4. From rear of flare, remove two 10mm head bolts, two plastic push pull clips (one between bolts and one from guard side of bumper join). Behind centre plastic push pull clip, using a medium screwdriver, turn centre of plastic clip ½ turn and remove centre from clip. **See figure 1.**
5. Under front of vehicle, from front ends of inner guards, remove two 10mm head screws (per side).
6. From centre of under body guard remove six 10mm head screws, ten 10mm head bolts and one push pull plastic clip. Remove centre under body guard.
7. Pull inner guards rearward away from front of bumper and wheel arch too allow access to rear of flare. Disconnect fog lights and daylight running lights and unclip wiring from rear of light assembly.
8. Unclip flare too second clip past guard / bumper join. Lower clips are accessed from rear of bumper **see figure 2** whilst top two clips are push only style clips.
9. Gently unclip bumper from retaining clips where bolts are removed from inner guard and pull guard sides outward to release from guard **see figure 3**. Carefully remove bumper from vehicle.
10. Remove polystyrene infill from bumper support.
11. From top of alloy bumper support, remove wiring and allow too hang. This will be refitted later.
12. Remove alloy bumper support, six 14mm head bolts, accessible from holes in front.
13. Trim triangular corner from passengers air dam to alloy fitment of mounts. **See figure 4.**
14. Install ECB steel mounting brackets to rear of bumper support **see figures 5 and 6**. Align mounts using measurement from alloy protection bar mounts as a guide. Inside measurement of alloy protection bar should match outside of measure ECB steel mounting brackets. Using ECB steel mounting brackets as a guide, drill two holes in bumper support to 10mm. **Blow filings clear and treat all exposed metal with a rust inhibitor.**



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

15. Fit ECB steel mounting brackets to rear of bumper support using two 3/8 x 1 ¼ bolts on wire, flat washers, spring washers and nuts (supplied). Install loosely at this stage.
16. Refit alloy bumper support and ECB steel mounting brackets to vehicle using original equipment bolts. Align mounting brackets so they are at correct measurement and as high as possible. **TIGHTEN ALL BOLTS.**
17. Using measurement between mounting brackets mark cut out in rear of bumper lower grille. Recheck measurements before cutting. **NOTE:** Alloy bar fits to outside of steel mounting brackets. Cut two top grille slats to accommodate mounts. **See figures 7 and 8.**
18. Refit bumper as per reverse of steps 1 to 10. Do not fit centre under body guard at this time.
19. Install ECB protection bar to outside of steel mounting brackets using two M10 x 40 bolts, flat washers, spring washers and nuts (supplied). **NOTE:** Rear bolts are accessible from under vehicle. Align ECB protection bar to vehicle, **see figures 9 and 10 for Series 2 Nudge Bar and figures 11 and 12 for 76mm Nudge Bar. Tighten all bolts.**
20. Refit under body guard.

ENSURE NUMBER PLATE IS CLEARLY VISABLE

Note: When fitting/refitting the licence plate to the vehicle, ensure there is no obstruction to licence plate vision in accordance with local authorities. If required relocate licence plate to an alternate location.

Further VFPS Notes:

- a) Do not attach VFPS to the vehicle using anchorages not intended for this purpose (e.g. engine mounting bolts).
- b) Do not use this product for any vehicle make or model, other than those specified by the VFPS manufacturer.
- c) Do not remove the plaque or label from the VFPS.
- d) Do not modify the structure of the VFPS in any way.
- e) No accessory or fitment should project forward of the VFPS forward profile.
- f) **ENSURE THESE INSTRUCTIONS ARE LEFT WITH VEHICLE OWNER AND/OR OPERATOR.**

IMPORTANT INFORMATION

Periodically check bolts and nuts for correct tightness, especially if travelling on rough roads

FITTING KIT

1 – Pair ECB steel mounting brackets	12 – M10 flat washers
4 – 3/8 x 1 ¼ bolt and washer on 300 mm wire	8 – M10 spring washers
4 – 3/8 nuts	4 – M10 x 1.5 nuts
4 – M10 x 1.5 x 40 bolts	



East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

WORLD'S BEST
ALLOY BULLBARS



Figure 1: Placement of hidden plastic clip. Turn centre ½ turn and remove.



Figure 2: Lower flare clip



Figure 3

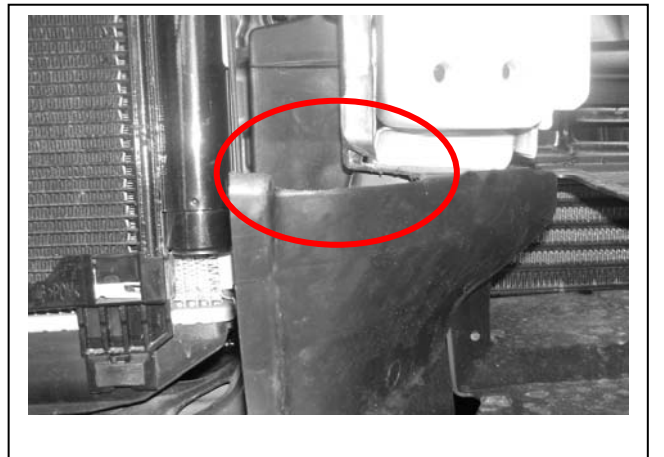


Figure 4: Cut triangular section from top.



Figure 5: Passengers side

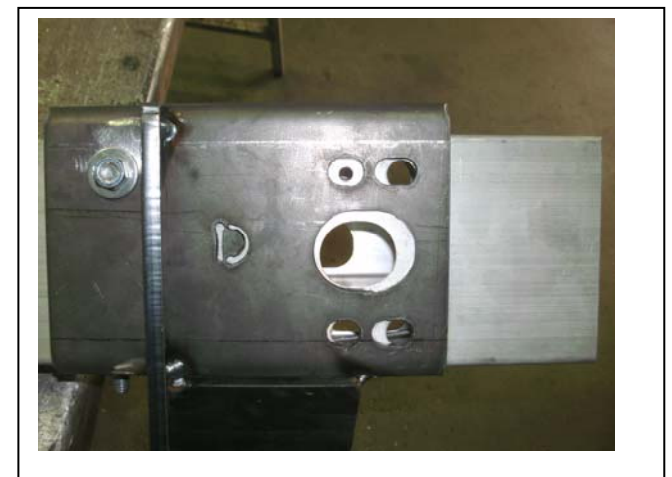


Figure 6



East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia



Figure 7



Figure 8



Figure 9: Series 2 Nudge Bar front

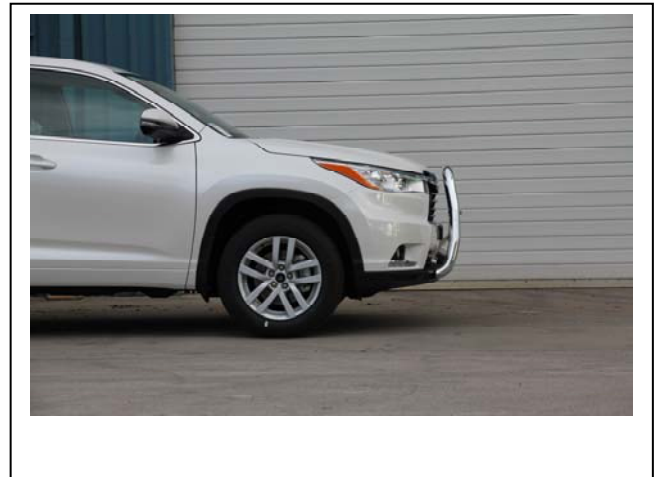


Figure 10: Series 2 Nudge Bar side



Figure 11: 76mm Nudge Bar Front



Figure 12: 76mm Nudge Bar side



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

We value your comments

Dear Fitter,

ECB would like to know how you went with the installation of this product. We value your comment and may need to contact you to clarify some details so please complete your contact details clearly.

We would appreciate if you could complete as many of the following details as possible.

Your Name:	Your contact No.
Product Part No.	Product Invoice No.
Product Description:	Make, model, and year of vehicle:
Product Work Order No.	Company your from/Company product purchased from:

Date of Fitment: ____/____/____

Was the fitting hardware supplied complete?

Yes

No

If no what was not supplied

Did the installation go well?

Yes

No

Please provide comments

Please draw diagrams if you need to.

Post to
Reply Paid 122
PO Box 122
Margate QLD 4019

Fax to
(07) 3283 1168



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia



WORLD'S BEST
ALLOY BULLBARS

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia

DESPATCH CHECKLIST NB6T32SY / NBT32SY

Work Order #		See other side of this page for photos of all mounts
Finish:		
Transport:		
Due Date:		

OC.....1 – Pair Steel mounting brackets.

BK.....1 – Bolt Kit.



Is this product “the best it can be” Yes
If **NO** fix before continuing

All parts checked and completed by:

Nut and bolts: _____ Date __/__/__

Order control: _____ Date __/__/__

Final wrap check: _____ Date __/__/__



**WORLD'S BEST
ALLOY BULLBARS**

East Coast Bullbars (ECB Pty Ltd)

Tel: 07 3897 5700

Fax: 07 3283 1168

ecb@ecb.com.au www.ecb.com.au

29 Snook St
Clontarf QLD 4019
Australia

Po Box 122
Margate QLD 4019
Australia



_____/_____
Wrapper's initials / Checker initials